

Philips 7000 series  
4K Ultra Slim TV powered  
by Android TV™

**164 cm (65")**

4K Ultra HD LED TV  
Quad Core, 8GB & expandable  
DVB-T/T2



**65PUT7601**

## 4K Ultra Slim LED TV powered by Android TV with Ambilight 3-sided

Exhilarate your senses. The Philips 7600 Series uses intelligent local brightness zones in the screen for deep blacks and radiant colors that burst out of the screen. And with HDR, enjoy a viewing experience just as the director intended.

### Award winning performance

- 4K Ultra HD is unlike any resolution you've ever seen before
- Award winning Micro Dimming Premium for brilliant contrast
- Perfect Pixel Ultra HD for the ultimate Picture Quality
- The new integrated HEVC standard to enjoy high quality 4k
- Enjoy excellent contrast,color,sharpness with HDR Premium

### Crafted Lightness

- Ambilight changes the way you look at TV forever
- Slim aluminum pinch stands for a premium lightweight look

### Exhilarating. Limitless. Powered by Android

- Google Play store and Philips app gallery: look beyond TV
- Unleash the power of Quad Core and integrated Android

### Thin TV - Big sound

- Philips Double Ring technology for rich and powerful bass
- Hear every detail with DTS Premium Sound

# PHILIPS

4K Ultra Slim TV powered by Android TV™  
164 cm (65") 4K Ultra HD LED TV, Quad Core, 8GB & expandable, DVB-T/T2

65PUT7601/79


# Highlights

## Ambilight 3-sided



You've created a home that's more than just a house, so why not choose a TV that is warm and inviting too? Philips unique Ambilight technology makes your screen much wider—and your viewing experience more immersive—by emitting an extra wide glow from three-sides of your TV screen onto the surrounding wall. Color, vibrancy and excitement move beyond the screen and into your living room to bring you a viewing experience beyond the ordinary.

## Double Ring technology

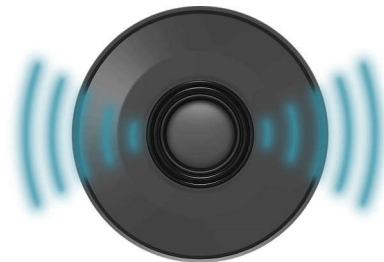


Philips Double Ring technology allows for increased speaker movement in the subwoofers—and more movement means more punch! So you'll enjoy strong, rich bass even in a thin TV design.

## DTS Premium Sound

Great TV speakers demand a powerful processing engine that preserves the purity of the original audio content. DTS Premium Suite is designed to deliver the experience consumers have come to expect from high end sound processing: immersive surround with deep, rich bass and crystal clear dialog that's delivered at maximum volume levels and without any fluctuations, clipping, or distortion.

## TV Content

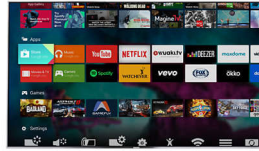

The Google Play store and Philips app gallery go beyond traditional TV programming to bring you a big online collection of movies, TV, music, apps and games. 16GB of expandable memory means there's plenty of room to store all your favorite content and to install more apps.

## HEVC support for 4k broadcast

The new integrated HEVC standard allow you to enjoy high picture quality 4k resolution broadcast.

## Micro Dimming Premium



Micro Dimming Premium analyzes the picture in 6400 different zones to control and optimize each individual segment of the Direct LED backlight. So you'll enjoy a lifelike picture with incredibly deep blacks contrasted with bright whites.


## Perfect Pixel Ultra HD



Building on our award winning UHD Picture Quality heritage, we've taken High Definition Picture Quality to a whole new level. With the

advanced picture processing software in our Perfect Pixel Ultra HD engine, your picture is converted into crisp 4K Ultra HD resolution. So you'll enjoy the deepest blacks, brightest whites, and the most vivid colors with natural skin tones. And all this comes to life with our most fluid, razor sharp image quality – every time, and from any source.

## Quad Core + Android

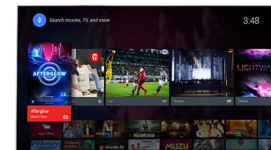

Philips Quad Core processor meets the power of Android to deliver an exciting gaming experience. And with Android on your TV you'll navigate, launch apps and play videos in a way that is super fast, super intuitive, and super fun.

## Slim aluminum pinch stands

Every great artwork needs its own easel. And like every great artwork, your new Philips TV needs to be displayed in its rightful manner. Developed specifically for this model by our design team, these slim aluminum pinch stands are a true testament to the lightness and slim construction of this powerful TV series.

## 4K Ultra HD

Ultra HD TV has four times the resolution of a conventional Full HD TV. With over 8 million pixels and our unique Ultra Resolution Upscaling technology, you'll experience the best possible picture quality. The higher the quality of your original content, the better images and resolution you will be able to experience. Enjoy improved sharpness, increased depth perception, superior contrast, smooth natural motion, and flawless details.



# Specifications

## Ambilight

- Ambilight Features: Built in Ambilight+hue, Wall colour adaptive, Lounge mode, Game Mode, Music Mode
- Ambilight Version: 3-sided

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 65 inch
- Diagonal screen size (metric): 164 cm


- Display: 4K Ultra HD LED
- Panel resolution: 3840x2160
- Brightness: 430 cd/m²
- Picture engine: Perfect Pixel Ultra HD
- Picture enhancement: Perfect Natural Motion, Micro Dimming Premium, Ultra Resolution

## Supported Display Resolution

- Computer inputs on HDMI1/2: up to 4K UHD 3840x2160 @60Hz

- Computer inputs on HDMI3/4: up to 4K UHD 3840x2160 @30Hz, up to FHD 1920x1080 @60Hz
- Video inputs on HDMI1/2: up to 4K UHD 3840x2160@60Hz
- Video inputs on HDMI3/4: up to FHD 1920x1080 @60Hz, up to 4K UHD 3840x2160 @30Hz

## Connections

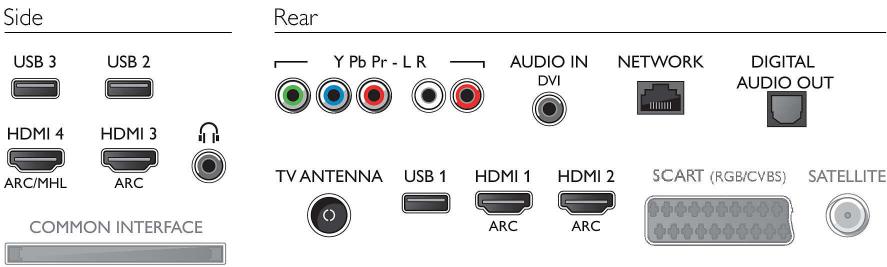

# Specifications

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2
- Video Playback: NTSC, PAL, SECAM
- MPEG Support: MPEG2, MPEG4
- TV Program guide\*: 8 day Electronic Program Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

## Android TV

- OS: Android™ 5.1 (Lollipop)
- Pre-installed apps: Google Play Movies\*, Google Play Music\*, Google Search, YouTube
- Memory size(Flash): 16GB\*, extendable via USB storage
- Memory size to install apps: 8GB

## Smart TV Features

- User Interaction: MultiRoom client and server, SimplyShare
- Interactive TV: HbbTV
- Program: Pause TV, USB recording\*
- SmartTV apps\*: Online video stores, Open internet browser, Social TV, TV on demand, Youtube
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop smart menu button, Onscreen usermanual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Basic - Fill Screen, Fit to screen, Advance - Shift, Zoom, stretch
- Philips TV Remote app\*: Apps, Channels, Control, NowOnTV, TV Guide, Video On Demand
- Remote Control: with Keyboard

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitles Formats Support: .SMI, .SRT, .SUB, .TXT
- Picture Playback Formats: JPEG

## Processing

- Processing Power: Quad Core

## Sound

- Output power (RMS): 30W
- Sound Enhancement: Clear Sound, DTS Premium Sound, Smart Sound
- Sound Features: Double ring technology

## Connectivity

- Number of HDMI connections: 4
- HDMI features: 4K, Audio Return Channel
- Number of component in (YPbPr): 1
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 3
- Wireless connection: Dual Band, Wi-Fi 802.11n 2x2 integrated
- Other connections: Antenna IEC75, Ethernet-LAN RJ-45, Digital audio out (optical), Audio L/R in, Audio in (DVI), Headphone out, Service connector
- HDCP 2.2: Yes on HDMI1, Yes on HDMI2

## Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Standby power consumption: <0.5
- Power Saving Features: Auto switch-off timer, Light sensor, Picture mute (for radio)
- Off mode power consumption: 0.5

## Accessories

- Included accessories: Remote Control, 2 x AA Batteries, Table top stand, Power cord, Quick start guide, Legal and safety brochure

## Dimensions

- Set Width: 1449 mm
- Set Height: 824 mm
- Set Depth: 67.4 mm
- Product weight: 26.3 kg
- Set width (with stand): 1449 mm
- Set height (with stand): 904 mm
- Set depth (with stand): 261 mm
- Product weight (+stand): 27.5 kg
- Box width: 1575 mm
- Box height: 1011 mm
- Box depth: 250 mm
- Weight incl. Packaging: 36.5 kg
- Wall mount compatible: 400 x 400 mm



- \* EPG and actual visibility (up to 8 days) is country and operator dependent.
- \* Android App offerings vary per country. For more details please visit your local Google Play Store.
- \* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.
- \* Cloud Gaming offering depends on game providers.
- \* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.
- \* (Philips) only compatible with specific Philips player device.
- \* Google Cast functionality is subject to Google Cast Ready apps and devices. For more details please visit Google Cast product page.
- \* Philips TV Remote app and related functionalities vary per TV model, operator, and country, as well as smart device model and OS. For more details please visit: [www.philips.com/TVRemoteapp](http://www.philips.com/TVRemoteapp).
- \* Smart TV app offerings vary per TV model and country. For more details please visit: [www.philips.com/smarttv](http://www.philips.com/smarttv).
- \* USB recording for digital channels only, recordings may be limited by broadcast copy protection (CI+). Country and channel restrictions may apply.
- \* MultiRoom Client and Server supports only 'Free to Air' digital programs.
- \* Please be informed that your Netflix HDR function in your TV currently can be supported via HDMI and USB only. The Netflix HDR broadcast via your Internet/DLNA will be fully available via IP software push.



Issue date 2023-10-20

Version: 10.4.2

EAN: 87 18863 00980 2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)