



Philips Cinema 21:9
LCD TV with Ambilight
Spectra 3 and Perfect Pixel
HD Engine

Philips 56"
Full HD 1080p
digital TV

CINEMA 21:9

56PFL9954H



Every night a premiere

with the 21:9 movie format and Ambilight

Be blown away watching Blu-ray movies or HDTV on the 56" ultra-wide television screen. The Philips Cinema 21:9 LCD TV offers a true cinematic widescreen viewing experience, perfectly matched to the original 21:9 (2.39:1) film format.

True cinema experience

- Cinema 21:9 movie aspect ratio, no black bars bottom / top
- Ambilight Spectra 3 for an immersive viewing experience

Perfect LCD Picture

- Full HD LCD display, with a 2560 x 1080p resolution
- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- Perfect Natural Motion for ultra smooth Full HD movies
- 200 Hz Clear LCD*, 1 ms performance: superb motion sharpness

In-built internet TV

- Philips Net TV with Wi-Fi for online services on your TV
- Enjoy a rich selection of web videos from YouTube and others
- DLNA PC network link for watching videos from your computer

Ready for digital

- MPEG4 HDTV reception via DVB-T and DVB-Cable tuner*



PHILIPS

Highlights

Full HD LCD display 2560x1080p


Enjoy the exceptional picture quality of Full HD sources like HDTV broadcast or Blu-ray on your Cinema 21:9. The unique movie format screen comes with 2560x1080p resolution, matching the 21:9 aspect ratio of the screen.

21:9 movie aspect ratio



Be blown away by movies the way they are meant to be seen with the 21:9 (2.39:1) movie format. The Cinema 21:9 TV perfectly matches the original movie format used by directors, so you get no black bars or picture loss, but movies the way the director intended them to be seen. Bring the magic of the cinema home, in the authentic 21:9 movie format. Enjoy 16:9 and gaming content with the full power of the 21:9 screen. Cinema 21:9 uses a highly advanced formatting technology to perfectly fit other formats to the screen without distortion. Enjoy the action in the comfort of your own home!

Ambilight Spectra 3

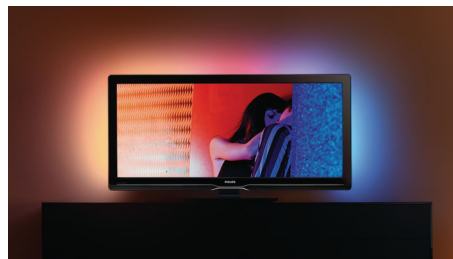

Add a new dimension to your viewing experience with Ambilight Spectra 3. This patented Philips technology enlarges the screen further by projecting a glow of light from the back of the screen onto the surrounding wall. Ambilight adjusts automatically the colour and brightness of the light surrounding the TV to match with the picture, creating an immersive viewing experience. With Ambilight Spectra 3 movies truly come to life!

Perfect Pixel HD Engine



Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

Philips Net TV with Wi-Fi



Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Simply connect your home theater directly to your home network through the ethernet connection, and navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen. Additionally, with the DLNA certified PC network you can watch videos or access pictures stored on your computer using your remote control.

Perfect Natural Motion

Enjoy the action without any judder. Perfect Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and pre-recorded movie material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

200Hz Clear LCD* (1ms)

Enjoy extreme motion sharpness. The Philips 200Hz Clear LCD brings the response time of LCD TV to an incredible 1ms, so even with the fastest car chase scene you will be enthralled by the action, and not following the stretched car across the screen.



Specifications

Picture/Display

- Aspect ratio: 2.39:1, 21:9
- Brightness: 500 cd/m²
- Dynamic screen contrast: 80.000:1
- Response time (typical): 1 (BEW equiv.) ms
- Viewing angle: 176° (H) / 176° (V)
- Diagonal screen size: 56 inch / 142 cm
- Display screen type: LCD Full HD UW-UXGA Act.matrix
- Panel resolution: 2560x1080p
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, Perfect Contrast, Perfect Colors, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Jagged Line Suppression, Progressive scan, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing, 200Hz Clear LCD*, Scanning backlight
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 2250 trillion colors 17bit RGB

Ambilight

- Ambilight Features: Ambilight Spectra 3, Lounge light mode
- Dimming Function: Manual and via Light Sensor
- Ambilight light system: LED wide color

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1360 x 768	60Hz
1920 x 1080	60Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz
1080p	24, 25, 30Hz

Sound

- Output power (RMS): 2 x 15W
- Sound Enhancement: Auto Volume Leveller, Digital Signal Processing, Dynamic Bass Enhancement, Treble and Bass Control
- Sound System: BBE

Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: 2 integrated subwoofers, 2x Dome tweeter

Convenience

- Child Protection: Child Lock+Parental Control
- Connection Enhancement: Easy link
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control, Connectivity assistant, Automatic setup wizard, Demo mode, Onscreen Usermanual, Touch control buttons, Favorite program selection, Iconic home scene, Mozaic channel grid
- Electronic Program Guide: Now + Next EPG, 8day Electronic Program Guide*
- Picture in Picture: Text dual screen
- Remote Control: DVD, DVD-R, Sat, STB (Set-Top Box), Universal, HTS (Home Theater System)
- Remote control type: RC4495
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen, unscaled (1080p dot by dot), Cinema 21:9, Cinema 21:9 subtitle-shift
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Multimedia: Digital media reader (browser), USB autobreak-in, DLNA media Browser, Net TV services
- Smart mode: Game, Cinema, Personal, Power saver, Standard, Vivid

Multimedia Applications

- Multimedia connections: Ethernet-UTP5, USB, Wi-Fi 802.11g (built in)
- Playback Formats: MP3, WMA v2 up to v9.2, Slideshow files (.alb), JPEG Still pictures, MPEG1, MPEG2, MPEG4, AVI, H.264/MPEG-4 AVC, MPEG-Program-stream PAL, WMV9/VC1

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial *, DVB-T MPEG4*,

DVB-C MPEG4*, MHEG

- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in, RGB
- Ext 2 Scart: Audio L/R, CVBS in, RGB
- Ext 3: YPbPr, Audio L/R in, VGA PC-in
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone out, USB
- PC network link: DLNA 1.0 certified
- Other connections: Analog audio Left/Right out, S/PDIF out (coaxial), Common Interface Plus (CI+), Common Interface
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: HDMI v1.3
- HDMI 4: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, EasyLink, Pixel Plus link, Remote control pass-through, System audio control, System standby

Power

- Ambient temperature: 5 °C to 35 °C
- Mains power: AC 220 - 240 V +/- 10%
- Power consumption (typical): 240 W
- Standby power consumption: <0.15 W




Dimensions

- Set dimensions (W x H x D): 1418 x 691 x 105 mm
- Set dimensions with stand (H x D): 745 x 324 mm
- Stand width: 550 mm
- Weight incl. Packaging: 50 kg
- Product weight: 31.9 kg
- Product weight (+stand): 37.4 kg
- Box dimensions (W x H x D): 1550 x 994 x 362 mm
- Color cabinet: Black glass decofront with black backcover
- VESA wall mount compatible: 400 x 400 mm


Accessories

- Included accessories: Smart leveling wall bracket, RF antenna cable, Power cord, Quick start guide, Warranty certificate, Remote Control, Batteries for remote control
- Optional accessories: Matching stand ST569954

Rear connectors

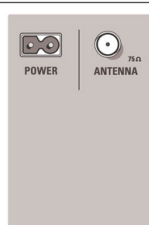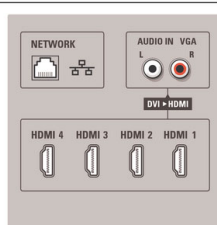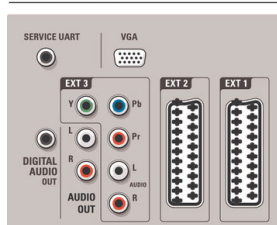

Side

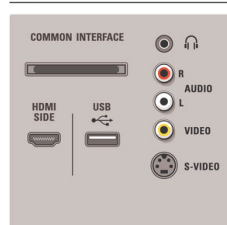

Issue date 2022-04-26

Version: 15.8.11

12 NC: 8670 000 48995
EAN: 87 12581 46069 3

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 200Hz Clear LCD displays 200 scenes per second by combining advanced 100Hz technology with scanning backlight @ 50% duty cycle.

* 8 days EPG, service not available in all countries

* DVB-T, supported in selected countries only

* DVB-C in selected countries and for selected operators only. Most up to date information is available on the type plate of the TV.

* Net TV, service offering is dependent on country and subject to terms of use.