


Philips OneBlade
Face

Trim, edge, shave
Original Blade
5-in-1 adjustable comb

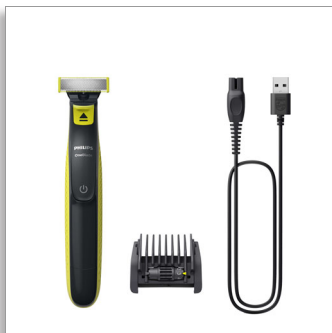

QP2724/20

Trim, edge and shave any length of hair

Designed to cut hair, not skin

The Philips OneBlade is a revolutionary new hybrid styler that can trim, shave and create clean lines and edges, on any length of hair. Forget about using multiple steps and tools. OneBlade does it all.

Easy to use

- Dual-sided blade: designed for precision and control
- Blade that doesn't fade easily
- Wet & dry
- Charge anytime, anywhere
- Long lasting battery

Comfortable shave

- Shave it off

Sharp edges

- Edge it up

Even trim

- 5-in-1 adjustable comb
- Unique OneBlade Technology


PHILIPS

Face
Trim, edge, shave Original Blade, 5-in-1 adjustable comb

QP2724/20

Highlights

Unique OneBlade Technology

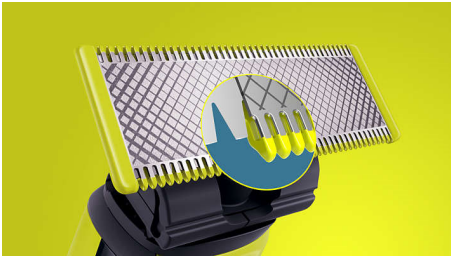

Philips OneBlade has a revolutionary technology designed for facial grooming. It can shave any length of hair. Its dual protection system – a glide coating combined with rounded tips – makes shaving easier and comfortable. Its shaving technology features a fast-moving cutter (12000x per min) so it's efficient - even on longer hairs.

Trim away



Unique open comb design for an efficient trim without clogging and interrupting your routine - even on long and thick hair.


Edge it up



Create precise edges with the dual-sided blade. You can shave in either direction to get great


visibility and see every hair that you're cutting. Line up your style in seconds!

Shave it off

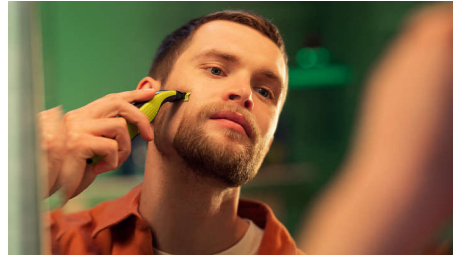


OneBlade doesn't shave as close as traditional blade - so your skin stays comfortable. Go against the grain and shave off any length of hair easily.

Dual-sided blade

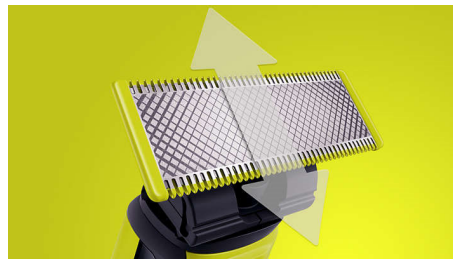

OneBlade follows the contours of your face, allowing you to easily and comfortably trim and shave all areas. Use the dual-sided blade to style your edges and create clean lines by moving the blade in any direction.

USB-A charging

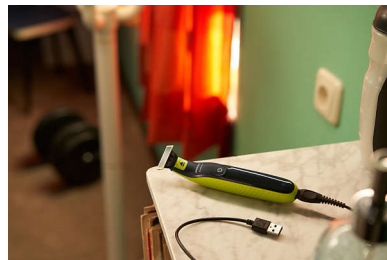


Can be charged at home or on the road, perfect for your daily routine and for travel.

Blade that doesn't fade easily




Stainless steel blade that lasts up to 4 months of use** to keep that fresh feel. When the eject icon will appear on the blade, the blade performance may no longer be optimal. It is time to consider changing the blade for the best shaving experience

Wet & dry

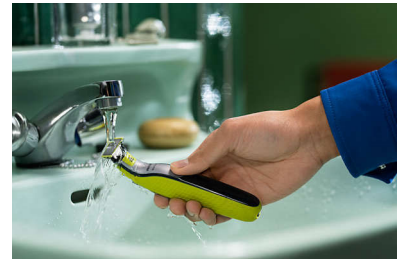

OneBlade is fully waterproof (IPX7), so it is easy to clean: just rinse it under the tap. You can shave wet or dry, even in the shower - whichever you prefer. No shaving foam needed.

Long lasting battery

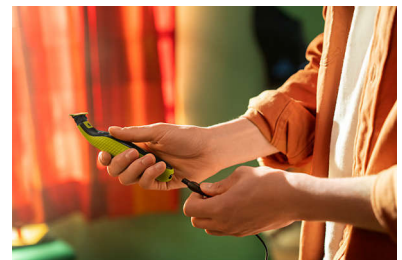

Rechargeable NimH battery delivers 45 minutes of constant shaving power after an 8 hour charge.

Face

Trim, edge, shave Original Blade, 5-in-1 adjustable comb

QP2724/20

Specifications

Trimming & shaving performance

- Shaving system: Contour-following technology, Dual protection system, Original Blade
- Trimming system: Contour-following technology, Original Blade

Accessories

- Maintenance: Protection cap
- Comb: 5-in-1 adjustable comb

Power

- Run time: 45 minutes
- Automatic voltage: 5 V
- Charging: 8 hours full charge
- Battery type: Ni-MH
- Max power consumption: 0.5 W

- Adaptor type: USB-A
- USB-A

Design

- Handle: Ergonomic grip & handling
- Color: Lime green, charcoal grey

Service

- 2-year warranty
- Replacement head: Replace every 4 months**, QP210, QP220, QP230, QP610, QP620, QP410, QP420

Ease of use

- Wet and dry use
- Rechargeable
- USB-A Charging: Power adapter not included



Issue date 2023-07-15

Version: 9.9.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Vs predecessor QP210

**For best shaving experience. Based on 2 full shaves per week. Actual results may vary.