



Philips
widescreen flat TV with
Pixel Plus HD

32"
LCD
HD Ready

32PFL7332



Turn up your viewing experience

with Pixel Plus HD

Experience the superior picture quality of this excellent Flat TV with the latest LCD technology and Pixel Plus HD.

Breathtaking natural pictures

- HD LCD WXGA display, with a 1366 x 768p resolution
- Pixel Plus HD for better details, depth and clarity
- Dynamic contrast enhancer delivering rich black details

Exciting and lifelike sound

- Incredible Surround™ for enhanced audio enjoyment

Slim, stylish design to complement your interior

- Compact and slim design that fits in every room
- Matching design swivel stand included

Designed for your convenience

- Smart Picture and Smart Sound to personalize your viewing
- PC input lets you also use your TV as a PC monitor

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

Highlights

LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewer to watch contents that are vivid, natural and real. The result is a superbly razor sharp pictures with incredible details and depth from any HD source.

Incredible Surround™

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.

Specifications

Picture/Display

- Aspect ratio: 16:9, Widescreen
- Brightness: 500 cd/m²
- Dynamic screen contrast: 4000:1
- Response time (typical): 8 ms
- Viewing angle (H / V): 178 / 178 degree
- Diagonal screen size: 32 inch / 80 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus HD, Luminance Transient Improver, Contrast Plus, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction, Dynamic contrast, Jagged Line Suppression, Progressive Scan
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
720 x 400	70Hz
1024 x 768	60, 70, 75, 85Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080p	24, 50, 60Hz

Sound

- Equalizer: 7-bands
- Output power (RMS): 2 x 10W
- Sound Enhancement: Auto Volume Leveller, Incredible Surround
- Sound System: Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: Front Speakers, Dome tweeter

Convenience

- Child Protection: Child Lock
- Clock: On main display, Sleep Timer, Wake up

Clock

- Ease of Installation: Auto Program Naming, Autostore, Fine Tuning, Program Name, Sorting
- Ease of Use: Program List, Side Control, Smart Picture, Smart Sound
- On-Screen Display languages: English, Simplified Chinese
- Remote Control: TV
- Remote control type: RC2023617/01
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Smart Text
- Teletext enhancements: 4 favourite pages, Program information Line

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K
- Video Playback: NTSC, SECAM, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 100
- Tuner Display: PLL

Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: Audio L/R in, CVBS in, S-Video in
- AV 4: HDMI
- AV 5: HDMI
- Number of AV connections: 7
- Front / Side connections: Audio L/R in, CVBS in, Headphone out, S-video in
- Other connections: Monitor out, CVBS, L/R (cinch), PC Audio in, PC-In VGA

Power


- Ambient temperature: 5 °C to 40 °C
- Mains power: 100-240V, 50/60Hz
- Power consumption: 150 W
- Standby power consumption: <1W

Accessories

- Included Accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control

Dimensions

- Color cabinet: Black cabinet with Black Hi Gloss deco Frame
- Set dimensions (W x H x D): 805 x 546 x 116 mm
- Set dimensions with stand (W x H x D): 805 x 609 x 210 mm
- Product weight: 14.2 kg
- Product weight (+stand): 17 kg
- Box dimensions (W x H x D): 910 x 650 x 290 mm
- Weight incl. Packaging: 21 kg
- VESA wall mount compatible: 200 x 100 mm

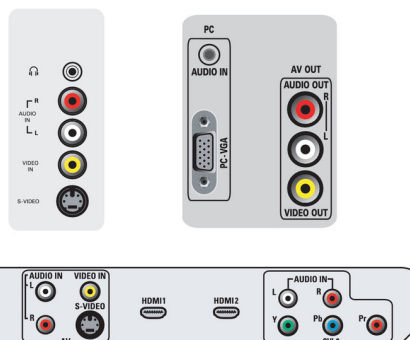

Issue date 2019-06-28

Version: 5.0.25

12 NC: 8670 000 26437
EAN: 87 12581 30881 0

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com