



Philips
Professional LED TV with
Ambilight Spectra 2

42" Signature
LED
DVB-T2/T/C MPEG 2/4



42HFL7008D

Dare to be different!

with OXIGEN and Ambilight


Like a painting on your wall. Enjoy the latest ultra-thin LED TV and the immersion of Ambilight. With the complete set of hospitality features and Philips OXIGEN, this TV is designed to meet the highest demands.

Philips OXIGEN - unique connectivity and management

- Philips OXIGEN for latest connectivity and best total cost
- Smart TV apps with many dedicated services for hospitality
- AppControl to add, sort and delete apps with minimum effort
- Secure SimplyShare to stream movies and music to your TV
- SmartInfo for branded, interactive hotel info pages
- SmartInstall for easy remote installation and maintenance

Advanced hotel features and future proof

- Brilliant LED images with incredible contrast
- Ambilight Spectra 2-sided intensifies the viewing experience
- Integrated IPTV system for optimal customised interactivity
- Serial Xpress Protocol for interactive systems
- Easy 3D for a truly immersive 3D movie experience
- Integrated Wi-Fi to use Smart TV wirelessly
- MyChoice compatibility for recurring revenues

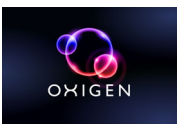

PHILIPS

Highlights

Full HD LED TV

The most advanced LED lighting technology in this Full HD LED TV combines an eye-catching minimalist design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlights you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colours.

Easy 3D

Easy 3D ensures you get long hours of comfort while watching 3D thanks to the flicker-free, low ghosting performance. The compatible 3D glasses are lightweight and do not require batteries. Enjoy 3D easily at home today!

Smart TV apps

Philips Smart TV apps consist of an ever growing choice of applications ranging from YouTube to social networking apps and many more. The dedicated version is tailored for hospitality use and has several added benefits, such as making sure guest information is securely deleted after use and avoiding illegal content that can harm your business. With guests being able to use apps & catch-up TV even from their home country, Smart TV apps is leading the way in entertainment.

AppControl

App control allows you to give your guests the TV applications of their dreams. You are able to add, delete and sort all the apps in the way you want. Even better, you can now clone these settings to any other TV without having to set up the other TV as well! You can even make various profiles and change on the fly. Do you want to give your suites the high-bandwidth video apps and your other rooms

the low-bandwidth apps? No problem. App control makes sure you and your guest have a smooth experience.

Philips OXIGEN

Philips OXIGEN is a complete solution that provides you with all you need in Hospitality TV. The innovative features are designed to give both guests and professionals the latest in connectivity while ensuring the lowest cost of ownership. OXIGEN connectivity offers access to cloud-based online apps and ensures that mobile devices can communicate with the TV, while remote management tools as well as additional revenue opportunities optimise earnings throughout the product lifecycle.

Secure SimplyShare

Secure SimplyShare gives your customers the freedom to enjoy their content on the big TV wirelessly and without hassle. With our open system approach we serve iOS as well as Android users and continuously extend our compatibility. Our secure sharing makes this DLNA-based system protected so your guests will not be disturbed by other people. Pictures, movies, music, all can be shared and enjoyed via SimplyShare on the TV!

SmartInfo

SmartInfo allows you to provide hotel or city information to your guests through SmartUI. Your guests have access to this interactive hotel webpage even when the TV is not connected to your intranet or Internet. You can change the information regularly and easily to keep your guests up-to-date with all the latest developments in your hotel.

SmartInstall

SmartInstall makes the installation and maintenance of your TVs effortless. With a

simple to use web tool, you can now remotely configure and install your TVs without visiting any rooms! This saves you time and makes sure your guests are not disturbed. Whether it is updating the hotel info pages or installing new channels, SmartInstall can handle all.


Ambilight Spectra 2



Add a new dimension to your viewing experience with Ambilight Spectra 2. This patented Philips technology enlarges the screen by projecting a glow of light from 2 sides of the back of the TV screen onto the surrounding wall. Ambilight automatically adjusts the colour and brightness of the light to match the TV picture. Thanks to the wall-adaptive function, the colour of the light is perfect, regardless of your wall colour.

Energy

For many years Philips has pro-actively been working on energy efficiency. As a result, most Philips products have achieved green energy labels. The greener the label, the lower the energy consumption, the lower your energy bill and the friendlier for the environment.

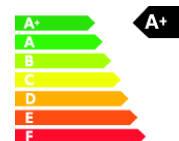

Specifications

Oxygen

- AppControl: Multiple SmartTV App profiles
- Secure Simply Share: DMP, Secured pairing
- Smart TV apps: cloud-based apps for HotelTV
- SmartInfo: browser based, interactive templates
- SmartInstall: offline channel editing, offline settings editing, remote installation, SmartInfo creation, software upgrade

Picture/Display

- Diagonal screen size: 42 inch / 107 cm
- Aspect ratio: 16:9, Widescreen
- Panel resolution: 1920 x 1080p
- Brightness: 400 cd/m²
- Viewing angle: 176° (H)/176° (V)
- Picture enhancement: Active Control + Light sensor, Digital Noise Reduction, Luminance Transient Improver, Dynamic contrast enhancement, Pixel Plus HD, HD Natural Motion
- Dynamic screen contrast: 500,000:1
- Colour processing: 4 trillion colours (14-bit RGB)
- Display: LED Full HD

Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920 x 1080p

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Digital TV: DVB-T2, DVB-C MPEG2/MPEG4, DVB-T MPEG2/MPEG4
- TV system: PAL, SECAM
- Video Playback: PAL, SECAM, NTSC

Sound

- Output power (RMS): 2 x 12 W, Invisible Sound
- Sound Enhancement: Auto Volume Leveller, Dynamic Bass Enhancement, Incredible Surround

Loudspeakers

- Built-in speakers: 2

Connectivity

- Number of USBs: 3
- Number of HDMI connections: 4
- Number of components in (YPbPr): 1
- Number of scarts (RGB/CVBS): 1
- EasyLink (HDMI-CEC): One touch play, System standby
- Other connections: Antenna IEC75, Headphone out, PC-in VGA + Audio L/R in, Bathroom speaker out, Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical)
- Connectivity Enhancements: Serial Xpress interface, IR-out, RJ-48 connector, Fast Infrared loop through, Power on scart, USB2.0
- Wireless LAN: 802.11 b/g/n

Convenience

- Ease of Installation: Plug and Play, Advanced Hotel Mode, Automatic Tuning System (ATS), PLL Digital

- Tuning, Automatic Channel Install (ACI), Programme Name, Auto Programme Naming, Autostore, Cloning of TV settings via USB, Installation menu locking, Security menu access, Keyboard lock-out, Cloning of TV settings via RF
- Ease of Use: Auto Volume Leveller (AVL), 1 channel list analogue/digital, On-Screen Display, Programme List, Back Controls, Graphical User Interface
- Comfort: Hotel Guest features, Auto power on, Green/Fast startup, Welcome message, Switch on channel, Volume limitation, Sleep timer
- Interactive hotel features: Connectivity panel compatible, ThemeTV, Block automatic channel update, Block over-the-air SW download, Vsecure, SmartInstall, MyChoice, SmartInfo Premium
- Prison mode: Txt, MHEG, USB, EPG, Sub block
- Clock: Sleep Timer, Wake-up Clock, On-screen clock display
- Clock Enhancements: Synchro Time via TXT/DVB
- Teletext: 1000-page Hypertext
- Teletext enhancements: Fast text, Programme information Line
- Electronic Programme Guide: 8-day Electronic Programme Guide, Now + Next EPG, IP EPG
- Screen Format Adjustments: Movie expand 16:9, Widescreen, Super Zoom, Auto Format
- Remote control type: 22AV1109B/10 (RC6)
- Remote Control: low battery detection, battery anti-theft protection
- Firmware upgradeable: Firmware upgradeable via USB, Firmware upgradeable via RF, Firmware upgradeable via IP
- Other convenience: Kensington lock

Healthcare

- Control: Multi remote control
- Convenience: Headphone out, Independent main speaker mute
- Safety: Nurse call system compatible, Double isolation Class II

Multimedia Applications

- Multimedia connections: USB
- Video Playback Formats: H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4
- Music Playback Formats: AAC, MP3
- Picture Playback Formats: JPEG

Ambilight

- Ambilight light system: LED-wide colour
- Ambilight Features: Ambilight Spectra 2, Wall colour adaptive

Power

- Mains power: 220 - 240 V, 50/60 Hz
- EU Energy Label power: 47 W
- Energy Label Class: A+
- Annual energy consumption: 66 kWh
- Standby power consumption: < 0.3 W
- Ambient temperature: 5°C to 40°C
- Power Saving Features: Eco mode, Picture mute (for radio)

Green Specifications

- Safety: Flame-retardant housing
- Low Power Standby
- SmartPower Eco

Dimensions

- Set dimensions (W x H x D): 957 x 579 x 35.3 mm
- Set dimensions with stand (W x H x D): 957 x 630 x 196 mm
- Box dimensions (W x H x D): 1042 x 710 x 130 mm
- Product weight: 12 kg
- Product weight (+stand): 14.9 kg
- Weight incl. Packaging: 18.2 kg
- VESA wall mount compatible: 400 x 400 mm

Accessories

- Included accessories: Remote Control, Batteries for remote control, Power cord, Tabletop swivel stand, Warranty Leaflet, SCART Adapter
- Optional accessories: Set up remote 22AV8573/00

Smart TV Applications

- Net TV: Online apps, For HotelTV, configurable
- SimplyShare: DMP, Secured Pairing
- Control: IXP control
- Other: HbbTV



Issue date 2013-11-22

Version: 3.1.4

12 NC: 8670 001 00122
EAN: 87 12581 67728 2

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.
* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.
* Typical on-mode power consumption measured according to IEC62087 Ed 2.