

Philips
Professional LED TV

- 39" EasySuite
- LED
- DVB-T/C MPEG 2/4

39HFL3008D



Great value in a modern design

with info pages and remote installation

With this energy efficient LED TV, you can enjoy the benefits of a dedicated Hospitality TV. Allow your guests to buy premium content, inform them via hotel info pages and use the latest remote technology for effortless installation.

Advanced hotel features and future proof

- Brilliant LED images with incredible contrast
- SmartInstall for easy remote installation and maintenance
- On-screen clock display for optimal guest convenience
- MyChoice compatibility for recurring revenues
- Integrated Connectivity Panel
- Full Hotel, Healthcare and Prison Modes

Differentiating guest experience

- SmartInfo for branded hotel info pages even offline
- Additional headphone connection for personal listening
- Nurse-call compatibility optimised for the Healthcare sector

Sustainable and safe

- Low power consumption
- Eco-friendly design and flame-retardant housing



PHILIPS

Highlights

Full HD LED TV



The most advanced LED lighting technology in this Full HD LED TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlights you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colours.

SmartInstall

SmartInstall makes the installation and maintenance of your TVs effortless. With a simple to use web tool, you can now remotely configure and install your TVs without visiting any rooms! This saves you time and makes sure your guests are not disturbed. Whether it is updating the hotel info pages or installing new channels, SmartInstall can handle all.

SmartInfo

SmartInfo allows you to provide hotel or city information to your guests through Hotel Info. Your guests have access to hotel info pages which can be changed regularly and easily to keep your guests up-to-date with all the latest developments in your hotel.

MyChoice compatible

MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

On-screen clock display

With our new on-screen clock display, guests can easily access the current time. At the push of a button the clock is displayed on the TV screen combining enhanced visibility and lower power consumption.

Integrated Connectivity Panel


The Integrated Connectivity Panel allows your guests to seamlessly connect their personal devices to your TV without the need for an external Connectivity Panel.

Eco-friendly design

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimising overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame-retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to a fire.

Energy

For many years Philips has pro-actively been working on energy efficiency. As a result, most Philips products have achieved green energy labels. The greener the label, the lower the energy consumption, the lower your energy bill and the friendlier for the environment.

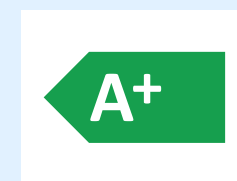

Green Energy Label

For many years Philips has proactively been working on the reduction of both on-mode and standby power consumption of its televisions and as a result most Philips televisions have achieved green EU energy labels since 2010. The greener the label, the lower the on-mode power consumption is. This results in lower energy bills and a more environmentally friendly TV.



Specifications

Picture/Display

- Display: LED Full HD
- Diagonal screen size: 39 inch / 98 cm
- Aspect ratio: 16:9
- Panel resolution: 1920 x 1080p
- Brightness: 300 cd/m²
- Viewing angle: 178° (H)/178° (V)
- Picture enhancement: Digital Crystal Clear, 100 Hz Perfect Motion Rate
- Dynamic screen contrast: 100,000:1

Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920 x 1080p

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Digital TV: DVB-T MPEG2/MPEG4, DVB-C MPEG2/MPEG4
- TV system: PAL, SECAM
- Video Playback: PAL, SECAM, NTSC

Sound

- Output power (RMS): 20 W (2 x 10 W)
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Treble and Bass Control, Clear Sound

Connectivity

- Side connections: Headphones Out, Common Interface Slot (CI-CI+), USB, HDMI Input
- Rear Connections: Antenna IEC75, HDMI input, IR in / out (3.5mm mini jack), SCART connector, Component Video In + L / R, S/PDIF out (coaxial), Service connector

Convenience

- Ease of Installation: Advanced Hotel Mode, Automatic Tuning System (ATS), Automatic Channel Install (ACI), Auto Programme Naming, Autostore, Cloning of TV settings via USB, Cloning of TV settings via RF, Installation menu locking, Security menu access, Keyboard lock-out
- Ease of Use: Auto Volume Leveller (AVL), 1 channel list analogue/digital, On-Screen Display, Programme List, Back Controls, Graphical User Interface
- Comfort: Hotel Guest features, Welcome message, Switch on channel, Volume limitation, Sleep timer
- Interactive hotel features: Connectivity panel compatible, Block automatic channel update, Block over-the-air SW download, SmartInstall, MyChoice, ThemeTV Lite, SmartInfo (Scenes)
- Prison mode: Txt, MHEG, USB, EPG, Sub block
- Clock: On-screen clock display, Wake-Up Timer, Wake up Melodies, Sleep Timer

- Clock Enhancements: Synchro Time via TXT/DVB
- Teletext: 1000-page Smart Text
- Electronic Programme Guide: 8-day Electronic Programme Guide, Now + Next EPG
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Widescreen, Subtitle Zoom, Super Zoom, Auto Format
- Remote Control: low battery detection, battery anti-theft protection
- Firmware upgradeable: Firmware upgradeable via USB, Firmware upgradeable via RF
- Other convenience: Kensington lock

Healthcare

- Control: Nurse call system compatible, Multi remote control
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation Class II

Multimedia Applications

- Multimedia connections: USB
- Video Playback Formats: Codec support:., H264/ MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, Containers: AVI, MKV
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2), LPCM, M4A, MPEG1 L1/2
- Picture Playback Formats: JPEG, BMP, GIF, PNG

Power

- Mains power: AC 220-240V, 50/60Hz
- EU Energy Label power: 43 W
- Annual energy consumption: 62 kW h
- Standby power consumption: <0.3 W
- Ambient temperature: 5°C to 35°C
- Energy Label Class: A+

Green Specifications

- Safety: Flame-retardant housing
- Low Power Standby
- SmartPower Eco

Dimensions

- Set dimensions (W x H x D): 891.3 x 536 x 64.7 mm
- Set dimensions with stand (W x H x D): 891.3 x 581.5 x 250 mm
- VESA wall mount compatible: 200 x 200 mm
- Product weight: 8.46 kg

Accessories

- Cables: IR in/out 3.5 mm mini jack to RJ-48 cable
- Included accessories: Remote Control 22AV1108B/12, Batteries for remote control, Power cord, Tabletop stand, Warranty Leaflet, Legal and safety brochure
- Optional accessories: Set up remote 22AV8573/00



Issue date 2013-08-05

Version: 5.2.17

12 NC: 8670 001 03975
EAN: 87 12581 69150 9

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com