



Philips 7600 series  
LCD TV with Ambilight  
and Pixel Plus 2 HD

42"  
Full HD 1080p

42PFL7603



## Light up your experience

Immerse yourself in a captivating Ambilight experience. Featuring a full HD 1080p display and Pixel Plus 2HD, this Flat TV combines HD Natural Motion, exciting invisible sound and Ambilight - lighting up your experience for years to come.

### Elevate your viewing experience

- Ambilight enhances the viewing experience with ambient light

### See pictures come alive

- Pixel Plus 2 HD for great details, depth and clarity
- Full HD LCD display, with a 1920x1080p resolution
- HD Natural Motion for ultra smooth motion in Full HD movies
- Up to 5ms response time for clear, fast moving action
- 28.9 billion colors for brilliant natural images

### Hear exciting and powerful sound

- Integrated wOOx loudspeakers for deep and powerful bass
- 30W RMS high audio power

### Easy to connect and enjoy

- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- PC-input allows you to use your TV as a PC monitor

**PHILIPS**

# Highlights

## Ambilight

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

## Pixel Plus 2 HD

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colors and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

## Full HD LCD display 1920x1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources,

including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

## HD Natural Motion

Philips invented HD Natural Motion to eliminate juddering effects that are visible with movie based picture content. HD Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level. HD Natural Motion removes judder from SD and HD pictures, including 1080p, for a motion performance that surpasses the cinema!

## 28.9 billion colors

Vibrant and natural images from most advanced color processing. The 3 color channels (RGB) are optimized using 10 bit resolution, a total processing power of 28.9 billion colors. It produces vibrant colors while retaining excellent sharpness. The advanced algorithms detect subtle color shades, skin tones and processes these to give most natural colors.

## Integrated wOOx loudspeakers

wOOx technology creates a superior bass sound by capturing and enhancing low frequency bass for a dramatically enhanced bass and sound experience.

## 4 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources and includes digital audio. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and game console or digital Camcorder. Your TV is fully prepared for the HD future.

## EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 30000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus 2 HD, 3D Comfilter, Active Control + Light sensor, Contrast Plus, Digital Noise Reduction, Jagged Line Suppression, Luminance Transient Improver, Progressive Scan, HD Natural Motion
- Screen enhancement: Anti-Reflection coated screen

## Ambilight

- Ambilight Features: Ambilight 2 Channel

## Supported Display Resolution

### • Computer formats

| Resolution  | Refresh rate     |
|-------------|------------------|
| 640 x 480   | 60, 72, 75, 85Hz |
| 720 x 400   | 70Hz             |
| 800 x 600   | 60, 72, 75, 85Hz |
| 1024 x 768  | 60, 70, 75, 85Hz |
| 1280 x 768  | 60Hz             |
| 1280 x 1024 | 60Hz             |
| 1360 x 768  | 60Hz             |

### • Video formats

| Resolution | Refresh rate |
|------------|--------------|
| 480i       | 60Hz         |
| 480p       | 60Hz         |
| 576i       | 50Hz         |
| 576p       | 50Hz         |
| 720p       | 50, 60Hz     |
| 1080i      | 50, 60Hz     |
| 1080p      | 24, 50, 60Hz |
| 1080p      | 24, 25, 30Hz |

## Sound

- Equalizer: 7-bands
- Output power (RMS): 30W
- Sound Enhancement: Auto Volume Leveller, Graphic Equaliser, Incredible Surround
- Sound System: Mono, Stereo, BBE

## Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: wOOx loudspeakers

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer, Wake Up Timer
- Connection Enhancement: Easy link
- Ease of Installation: Autostore, Fine Tuning, Program Name, Sorting
- Ease of Use: 8 channel smart surf list, Auto Volume Leveller (AVL), Program List, Side Control
- On-Screen Display languages: English, Simplified Chinese, Arabic, Thai, Vietnamese
- Remote Control: TV
- Remote control type: PF04A08B
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Smart Text
- Signal strength indication
- Smart mode: Game, Movie, Personal, Power saver, Standard, Vivid

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K
- Video Playback: NTSC, SECAM, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 99
- Tuner Display: PLL

## Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, System info (menu language), System standby
- Front / Side connections: Audio L/R in, CVBS in, Headphone out, S-video in, HDMI v1.3
- Other connections: PC-in VGA + Audio L/R in

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 100-240V, 50/60Hz


- Power consumption: 210 W
- Standby power consumption: (typical) <0.15W

## Dimensions

- Set dimensions (W x H x D): 1046 x 645 x 108 mm
- Set dimensions with stand (W x H x D): 1046 x 716 x 262 mm
- Weight incl. Packaging: 32 kg
- Product weight: 20.5 kg
- Product weight (+stand): 26 kg
- Box dimensions (W x H x D): 1171 x 810 x 333 mm
- VESA wall mount compatible: 400 x 400 mm

## Accessories

- Included Accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control

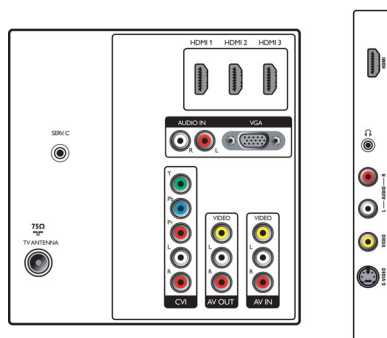

Issue date 2019-06-28

Version: 1.0.59

12 NC: 8670 000 36839  
EAN: 87 12581 39347 2

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)