

Philips
Flat TV with Crystal Clear
III

58 cm (23")

LCD
HD Ready

23PF5320



Turn up your viewing experience

with Crystal Clear III

Here is a wonderful new TV that not only gives you great picture and sound but also modern styling and quality finish. It features Crystal Clear III for natural, vivid images and Virtual Dolby Surround for superb audio.

Vivid, natural and razor sharp images

- HD LCD WXGA display, with a 1366 x 768p resolution
- HD Ready for the highest quality display of HD signals
- Crystal Clear III for natural images with enhanced quality
- Active Control optimizes picture quality whatever the source

Superb sound reproduction

- Virtual Dolby Surround for a cinema-like audio experience

Slim, stylish design to complement your interior

- Compact and slim design that fits in every room

My personal entertainment center

- Built-in FM radio to enjoy your favorite radio stations.
- PC input lets you also use your TV as a PC monitor

Leading interface for digital quality audio/video

- DVI-I provides the best picture and flexible connectivity

PHILIPS

Highlights

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Crystal Clear III

Crystal Clear III combines a whole range of enhancements to provide a better picture. They include a 2D Comb filter, Dynamic contrast, Blue stretch and Green enhancement so that you always get the most natural looking colors.

Active Control

Active Control ensure that noise and sharpness improvements are continuously made at a rate of 60 times per second. By continually adjusting picture setting over 3,000 times per minute, Active Control Plus ensures that the viewing experience is optimized.

Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

FM Radio

An FM radio capable of storing 40 preset stations is built in. On-screen station naming makes navigation simple, and a handy Clock Screensaver is also included for use while listening.

PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

DVI-I Input

A DVI-I input connects the non-compressed high-bandwidth digital RGB signal from source to screen. By eliminating the conversion of the digital signals to analog, it delivers an unblemished and noise-free image, that is clear and flicker-free. The DVI input supports HDCP copy protection that allows viewing of copy protected programs from Digital Settop boxes, DVD players and HD recorders. DVI-I is future proof as it can be connected to all HDMI devices (a converter cable is required). The DVI-I input also supports analog PC-VGA signals.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 450 cd/m²
- Contrast ratio (typical): 450:1
- Diagonal screen size: 23 inch / 58 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Picture enhancement: Crystal Clear III, Progressive scan, 2D Combfilter, Active Control, Sharpness Adjustment, Color Temperature Adjustment
- Screen enhancement: Anti-Reflection coated screen
- Viewing angle (H / V): 140 / 120 degree
- Panel resolution: 1366 x 768p
- Response time (typical): 16 ms
- Color cabinet: Silver Frost

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 67, 72, 75Hz
720 x 400	70Hz
800 x 600	56, 60, 72, 75Hz
832 x 624	75Hz
1024 x 768	60, 70, 75Hz
1280 x 768	60Hz

Video Formats

Resolution	Refresh rate
640 x 480i	1Fh
640 x 480p	2Fh
720 x 576i	1Fh
720 x 576p	2Fh
1280 x 720p	3Fh
1920 x 1080i	2Fh

Sound

- Sound Enhancement: Dynamic Bass Enhancement
- Sound System: Mono, Nicam Stereo, Virtual Dolby Surround
- Output power (RMS): 2 x 5W
- Equalizer: 5-bands

Convenience

- Ease of Installation: Auto Program Naming,

- Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), FM Radio, Menu Control, On Screen Display, Program List, Smart Picture, Smart Sound
- Remote control type: RCFE05SMU00
- Teletext: 10 page Smart Text
- Picture in Picture: Twin page text
- Remote Control: TV
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Clock: Sleep Timer
- VESA Mount: 100 x 100 mm

Tuner/Reception/Transmission

- Tuner bands: FM, Hyperband, S-Channel, UHF, VHF
- TV system: PAL, PAL B/G, PAL D/K, PAL I, SECAM, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, PAL, SECAM
- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner Display: PLL
- Number of Preset Channels: 100

Connectivity

- Number of Scarts: 1
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Other connections: Antenna IEC75, DVI-I, FM Antenna, PC Audio in
- Front / Side connections: Audio in, CVBS in, Headphone Out, S-video in

Power

- Power consumption: 92 W
- Standby power consumption: < 1W
- Ambient temperature: 5 °C to 40 °C
- Power supply: AC 90-240

Dimensions


- Product weight: 8.8 kg
- Set dimensions (W x H x D): 716 x 375 x 98 mm
- Dimensions (with base) (W x H x D):

- 716 x 420 x 195 mm
- Box dimensions (W x H x D): 780 x 551 x 210 mm
- Set weight: 8.8 kg
- Weight incl. Packaging: 11.64 kg

Accessories

- Included accessories: Power cord, Quick start guide, Registration card, Remote Control, Table top stand, User Manual
- FM antenna: FM antenna
- Cables: DVI-I to YPbPr cable

stereo system					transmission system						
2CS	NICAM	2CS	NICAM	NICAM	PAL	PAL	PAL	SECAM	SECAM	SECAM	
DK	DK	BG	I	LL'	BG	DK	I	BG	DK	LL'	
o	o	o	o	o	o	o	o	o	o	o	o

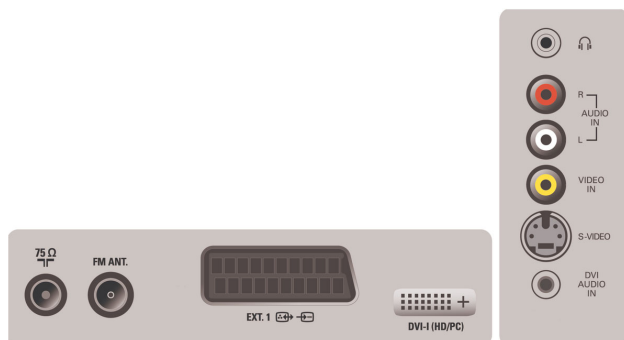

Issue date 2019-06-28

Version: 15.0.18

12 NC: 8670 000 22258
EAN: 87 10895 87551 6

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com