



Philips
widescreen flat TV with
Digital Crystal Clear

66 cm (26")
LCD HD Ready

26TA2800



Turn up your viewing experience

with Digital Crystal Clear

Tuned for picture-perfect quality, the Philips 26TA2800 HDTV delivers superb display and increased picture depth plus virtual surround sound, compact design, smart audio/video presets, 1000 page Hypertext and even doubles as a PC monitor.

Vivid, natural and razor sharp images

- HD LCD WXGA display, with a 1366 x 768p resolution
- HD Ready for the highest quality display of HD signals
- Digital Crystal Clear provides vivid cinema-like images
- Progressive Scan component video for optimized image quality

Crisp and Clear sound

- Virtual Surround Sound for enhanced sound

Stylish design

- Compact and slim design that fits in every room

Designed for your convenience

- Smart Picture and Smart Sound to personalize your viewing
- 1000 page Hypertext for instant fast access to teletext

For advanced performance

- DVI-D provides the best digital picture

PHILIPS
sense and simplicity

Highlights

LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Virtual surround sound

Virtual surround sound creates additional audio channels for a theater-like audio experience.

Smart Picture and Smart Sound

Philips preset modes for Smart Picture and Smart Sound provide you with direct access via a single key on the remote control. You can select optimized picture and sound settings for the various picture and sound modes.

1000 page Hypertext

The teletext is a common system transmitted by most broadcasters. The 1000 page smart text feature gives you extremely fast access to information when changing pages.

DVI-D input

A DVI-D input makes an uncompressed digital RGB connection from source to screen. By eliminating the conversion of the digital signal to analog, it delivers an unblemished image. Thanks to the non-degraded signal, you get less flicker and a clearer picture. The DVI input is fully backward compatible with HDMI sources, and also uses HDCP copy protection.



Specifications

Picture/Display

- Color cabinet: black, high gloss black strip
- Aspect ratio: 16:9
- Brightness: 500 cd/m²
- Contrast ratio (typical): 700:1
- Response time (typical): 8 ms
- Viewing angle (H / V): 178 / 178 degree
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Digital Crystal Clear, 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Blue stretch, Black stretch, White stretch, Green enhancement, Progressive scan, Smart Picture, Automatic skin tone correction
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	56, 60Hz
1024 x 768	60Hz
1280 x 720	60Hz
1280 x 768	60Hz
1360 x 768	60Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz

Sound

- Output power (RMS): 2 x 5W
- Sound Enhancement: Virtual Surround Sound
- Sound System: Mono, Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer

- Ease of Installation: Autostore, Fine Tuning, PLL Digital Tuning, Sorting
- Ease of Use: Auto Volume Leveller (AVL), On Screen Display, Program List, Smart Picture, Smart Sound, Top Controls
- Remote Control: TV
- Remote control type: RC2023611/01B
- Screen Format Adjustments: 4:3, Subtitle Zoom, Superwide, Widescreen, Zoom 14:9, Zoom 16:9
- Teletext: 1000 page Smart Text

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM D/K
- Video Playback: NTSC, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS in, S-Video
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in
- Other connections: DVI-D, PC Audio in, PC-In VGA

Power


- Ambient temperature: 5 °C to 40 °C
- Mains power: 100-240V, 60-50 Hz
- Power consumption: 130 W
- Standby power consumption: < 2 W

Accessories

- Included accessories: Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

Dimensions

- Set dimensions (W x H x D): 661.8 x 473 x 100.4 mm
- Set dimensions with stand (W x H x D): 661.8 x 511 x 240 mm
- Product weight: 10.97 kg
- Product weight (+stand): 12.4 kg
- Box dimensions (W x H x D): 898 x 582 x 243 mm
- Weight incl. Packaging: 15.98 kg
- VESA wall mount compatible: 200 x 100 mm

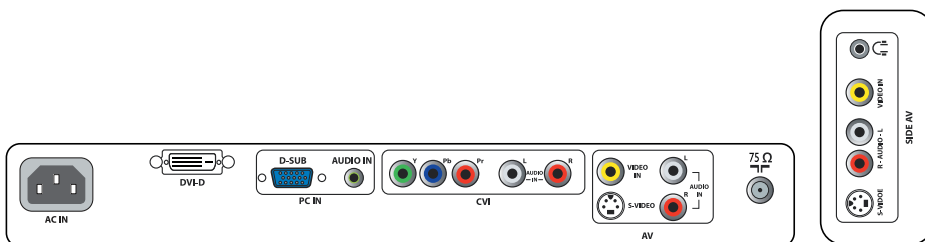

Issue date 2012-05-20

Version: 5.1.15

12 NC: 8670 000 27465
EAN: 87 12581 31851 2

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com