



Philips
widescreen flat TV with
Pixel Plus HD

94 cm (37")
LCD
HD Ready

37PFL5322



Turn up your viewing experience

with Pixel Plus HD

Here is a wonderful new TV that not only gives you great picture and sound but also modern styling and quality finish. It features Pixel Plus HD for natural, vivid images and Incredible Surround for superb audio.

Vivid, natural and razor sharp images

- HD LCD WXGA display, with a 1366 x 768p resolution
- HD Ready for the highest quality display of HD signals
- Pixel Plus HD for better details, depth and clarity
- 3D combfilter separates colors for a razor-sharp image

Exciting and lifelike sound

- Incredible Surround™ for enhanced audio enjoyment

Slim, stylish design to complement your interior

- Compact and slim design that fits in every room

Designed for your convenience

- 1000 page Hypertext for instant fast access to teletext

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

widescreen flat TV
94 cm (37") LCD, HD Ready

37PFL5322/12

Highlights

LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or

HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewers to watch content that is vivid, natural, and real. The result means superbly life-like pictures with incredible details and depth from any HD source.

3D Combfilter

The 3D comb filter separates brightness and color signals better in 3D domain to eliminate cross-color, cross-luminance and dot-crawl distortion - all of which detract from your viewing pleasure. The 3D digital comb filter performs field-by-field comparisons of the television image to accurately separate the color from the black-and-white information and remove both horizontally and vertically

hanging dots, as well as dot crawl. The result is a razor sharp image.

Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.

Pixel
Plus HD

HD
ready



2x
HDMI

Specifications

Picture/Display

- Color cabinet: Bicolour - Silver and high gloss Black
- Aspect ratio: Widescreen, 16:9
- Brightness: 500 cd/m²
- Dynamic screen contrast: 7500:1
- Response time (typical): 6 ms
- Viewing angle (H / V): 178 / 178 degree
- Diagonal screen size: 37 inch / 94 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus HD, Luminance Transient Improver, Color Transient Improvement, Dynamic contrast enhancement, Contrast Plus, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Digital Noise Reduction, Jagged Line Suppression, Progressive scan
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz

Sound

- Equalizer: 7-bands
- Output power (RMS): 2 x 10 W
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Dynamic Bass Enhancement
- Sound System: Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Program List, Side Control, Smart Picture, Smart Sound
- Remote Control: TV
- Remote control type: RC2023601/01
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Picture in Picture: Text dual screen
- Teletext: 1000 page Hypertext
- Teletext enhancements: 4 favourite pages, Program information Line
- VESA Mount: 600 x 400 mm

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, SECAM, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 100
- Tuner Display: PLL

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Ext 3: S-video in, CVBS in, Audio L/R in
- Ext 4: YPbPr, Audio L/R in
- Ext 5: HDMI
- Ext 6: HDMI
- Number of Scarts: 2
- Other connections: Headphone out

Power

- Ambient temperature: 5 °C to 40 °C

- Mains power: 220 - 240V, 50/60Hz
- Power consumption: 175 W
- Standby power consumption: < 1W



Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control
- Optional accessories: Floor stand

Dimensions

- Set dimensions (W x H x D): 935 x 626 x 117 mm
- Set dimensions with stand (W x H x D): 935 x 688 x 265 mm
- Product weight: 21 kg
- Product weight (+stand): 28 kg
- Box dimensions (W x H x D): 1000 x 701 x 289 mm
- Weight incl. Packaging: 32 kg

Stereo system					Transmission system					
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL'	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK	SECAM LL'
•	•	•	•	•	•	•	•	•	•	•

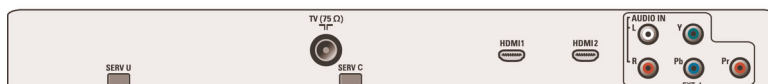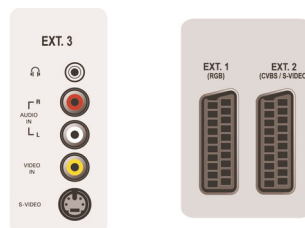

Issue date 2022-04-26

Version: 5.0.9

12 NC: 8670 000 25491
EAN: 87 12581 30323 5

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com