



Philips  
widescreen flat TV with  
Pixel Plus

**42"**  
LCD  
HD Ready

**42PF7420**



# Turn up your viewing experience

with Pixel Plus

Experience the superior picture quality of this excellent Flat TV with the latest LCD technology and Pixel Plus. It's packed into a stunning design that will complement your interior.

## **Breathtaking natural pictures**

- HD LCD WXGA display, with a 1366 x 768p resolution
- HDTV Monitor for the highest quality display of HDTV signals
- Pixel Plus for detail, depth and clarity
- Progressive Scan component video for optimized image quality
- Active Control with Light Sensor optimizes picture quality

## **Superb sound reproduction**

- Virtual Dolby Surround for a cinema-like audio experience

## **Slim, stylish design to complement your interior**

- Matching stand with elegant design included

## **One touch convenience**

- Smart Picture and Smart Sound to personalize your viewing

## **Leading interface for digital quality audio/video**

- HDMI input for full digital HD connection in one cable

# PHILIPS

# Highlights

## LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## HDTV Monitor

HDTV is the latest and best television signal available. It produces picture quality more than twice that of traditional analog broadcasts. In order to effectively maximize the HDTV signal, a television must incorporate advanced signal input connectivity

## Pixel Plus

Pixel Plus is a digital picture processing technology that increases the number of lines and the number of pixels. The result is razor sharp pictures with incredible detail and depth, every time from any source.

## Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## Active Control + Light Sensor

Active Control is a unique and intelligent way of optimizing picture quality by measuring and analyzing the incoming signal to automatically adjust picture quality settings. Active Control with Light Sensor uses a sensor to adjust the picture brightness depending on the room light conditions.

## Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional

rear speakers. You become totally immersed in your television experience.

## Bypacked tabletop stand

A table-top stand with matching design is packed with the set.

## Smart Picture and Smart Sound

Philips preset modes for Smart Picture and Smart Sound provide you with direct access via a single key on the remote control. You can select optimized picture and sound settings for the various picture and sound modes.

## HDMI input

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection.



# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Brightness: 550 cd/m<sup>2</sup>
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Picture enhancement: Pixel Plus, Progressive Scan, Active Control + Light sensor, 3/2 - 2/2 motion pull down, 3D Combfilter, Contrast Plus, Digital Noise Reduction, Dynamic contrast, Jagged Line Suppression
- Screen enhancement: Anti-Reflection coated screen
- Panel resolution: 1366 x 768p
- Response time (typical): 8 ms
- Viewing angle: 176° (H) / 176° (V)
- Contrast ratio (typical): 700:1

## Supported Display Resolution

### Computer formats

| Resolution  | Refresh rate     |
|-------------|------------------|
| 640 x 480   | 60, 67, 72, 75Hz |
| 800 x 600   | 56, 60, 72, 75Hz |
| 1024 x 768  | 60, 70, 75Hz     |
| 1280 x 1024 | 60Hz             |

### Video Formats

| Resolution   | Refresh rate |
|--------------|--------------|
| 640 x 480i   | 1Fh          |
| 640 x 480p   | 2Fh          |
| 720 x 576i   | 1Fh          |
| 720 x 576p   | 2Fh          |
| 1280 x 720p  | 3Fh          |
| 1920 x 1080i | 2Fh          |

## Sound

- Sound System: Virtual Dolby Surround
- Output power (RMS): 2 x 15W
- Sound Enhancement: Dynamic Bass Enhancement
- Equalizer: 5-bands

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Ease of Installation: Autostore, Plug & Play, Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Fine Tuning, Program Name, Sorting
- Ease of Use: Side Control, Smart Picture Control,

- Auto Volume Leveller (AVL), Program List, Smart Sound Control
- Remote control type: RCFE05SPS00
- Teletext: 10 page Smart Text
- Picture in Picture: Picture in graphics, Twin page text
- Remote Control: Amp, DVD, TV, Multi-functional
- Screen Format Adjustments: Auto Format, Subtitle and Heading Shift, 4:3, Subtitle Zoom, Super Zoom, Widescreen, Zoom 14:9, Zoom 16:9
- Clock: Sleep Timer

## Tuner/Reception/Transmission

- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: NTSC, PAL, SECAM
- Video Playback: NTSC, PAL, SECAM
- Aerial Input: 75 ohm coaxial (IEC75)
- Number of Preset Channels: 100
- Tuner Display: PLL

## Connectivity

- AV 1: Audio L/R in
- AV 2: Audio L/R in, CVBS, S-Video Y/C
- AV 3: VGA PC-in, HDMI compatible
- AV 4: HDMI
- Front / Side connections: Audio L/R in, CVBS in, Headphone out, S-video in

## Power

- Power consumption: 246 W
- Standby power consumption: < 2 W
- Mains power: AC 220 - 240 V +/- 10%
- Ambient temperature: 5 °C to 40 °C

## Dimensions


- Weight incl. Packaging: 55 kg
- Set dimensions (W x H x D): 1240 x 680 x 104 mm
- Set weight: 42 kg
- Color cabinet: Bicolour Black and Silver Frost
- VESA wall mount compatible: 800 x 400 mm
- Product weight: 27 kg
- Stand dimensions (W x H x D): 820 x 40 x 280 mm

## Accessories

- Included Accessories: Table top stand, Wall mounting bracket, Power cord, Quick start guide, Registration card, Remote Control, RF antenna

- cable, User Manual, Warranty certificate, VGA to YPbPr-Cinch cable
- Optional accessories: Floor stand

## Rear connectors

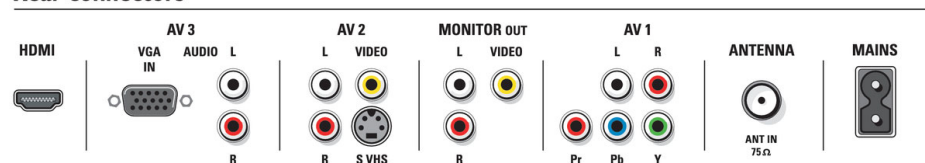

## Side connectors



Issue date 2019-06-28

Version: 15.0.17

12 NC: 8670 000 22676  
EAN: 87 10895 89279 7

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)