



Philips 5200 series  
Slim LED TV

**60 cm (24")**  
LED TV  
DVB-T/C



**24PHH5210**

## Slim LED TV

With Digital Crystal Clear

Designed to go anywhere, beautifully. The 5210 series Slim LED TV with Digital Crystal Clear has all the features you'd expect in a quality Philips TV. Its slim contour and clean white frame make it a welcome addition to any room in your home

### Television viewing at your convenience

- Two HDMI input ports and Easylink for integrated connectivity
- USB for multimedia playback
- PC Input lets you use your TV as a PC monitor

### As flexible as you are

- Compact portable TV: designed to be where the fun is
- The elegant white colour lends a fresh modern look to every room
- Ultra Narrow bezel gives you more picture to love

### A clear, vivid picture every time

- Digital Crystal Clear: precision you'll want to share
- 100 Hz PMR for sharp moving images

**PHILIPS**

Slim LED TV  
60 cm (24") LED TV, DVB-T/C

# Highlights

## Modern white design

We know you want a small screen TV that looks as great as it performs. That's why our design team paired an elegant frame of sophisticated white and brushed metal finish to create a fresh, modern design that compliments any room.

## Portable Design

Stylish, compact and lightweight. This small-screen TV lets you catch up with your favourite programmes in the kitchen, keeps you up to date with the news while you work in the garage, and gives you the latest sports scores as you BBQ. A TV this portable likes to be where the fun is!

## Ultra narrow bezel



Traditional TVs have a bezel that wraps around the TV like a picture frame. Our Ultra Narrow

bezel is modern and thin, so you have more picture to enjoy.

## Digital Crystal Clear

For natural-looking pictures from any source, Philips created the Digital Crystal Clear. Because whether you indulge in your favourite soap, the news, or have friends over to watch a video—you'll enjoy it all in optimal contrast, colour and sharpness.

## 100 Hz Perfect Motion Rate

100Hz  
PERFECT MOTION RATE



Perfect Motion Rate combines Philips display technology and advanced video processing techniques to improve the quality of each picture frame. So whether you like gaming, fast-paced sporting events or action films, you'll experience the ultimate in sharpness and smooth moving images.

24PHH5210/88

## Two HDMI input ports with Easylink

Avoid cable clutter with a single HDMI cable to carry both picture and audio signals from your devices to your TV. HDMI uses uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you'll need only one remote control to perform most operations on your TV, DVD, Blu-ray, set top box or home theatre system.

## USB (photos, music, video)



Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.

## PC input (VGA)

Use your TV as a monitor. Simply connect using a VGA cable and you are ready to go.

# Specifications

## Picture/Display

- Aspect ratio: 4:3/16:9
- Diagonal screen size (inch): 24 inch
- Diagonal screen size (metric): 60 cm
- Display: LED HD TV
- Panel resolution: 1366 x 768p
- Brightness: 200 cd/m<sup>2</sup>
- Picture enhancement: Digital Crystal Clear, 100 Hz Perfect Motion Rate

## Supported Display Resolution

- Computer inputs: up to 1366x768 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1366x768p

## Tuner/Reception/Transmission

- Digital TV: DVB-T/C
- Video Playback: NTSC, PAL, SECAM
- MPEG Support: MPEG2, MPEG4

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2)
- Subtitles Formats Support: .SMI, .SRT, .SSA, .SUB, .TXT, .ASS
- Picture Playback Formats: JPEG, BMP, GIF, PNG

## User Interaction

- Programme: Pause TV, USB Recording\*
- Ease of Use: One-stop Home button
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Screen Format Adjustments: Autozoom, Superzoom, Movie expand 16:9, Unscaled, 4:3, 16:9
- Signal strength indication
- Teletext: 1000 page Hypertext
- Electronic Programme Guide\*: 8 day Electronic Programme Guide

## Sound

- Output power (RMS): 5 W
- Sound Enhancement: Incredible Surround, Clear

Sound, Auto Volume Leveller, Bass Control, Smart Sound

## Connectivity

- Number of HDMI connections: 2
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 1
- Other connections: Antenna F-type, Common Interface Plus (CI+), Digital audio out (optical), Audio in (VGA/DVI), Headphone out, Service connector, Satellite Connector, PC-In VGA

## Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Ambient temperature: 5°C to 35°C
- Standby power consumption: <math><0.3\text{ W}</math>
- Energy Label Class: A
- EU Energy Label power: 24 W
- Power Saving Features: Auto switch-off timer, Eco mode, Picture mute (for radio)
- Off mode power consumption: <math><0.3</math>
- Annual energy consumption: 35 kWh


## Accessories

- Included accessories: Remote Control, Tabletop stand, Power cord, Quick start guide, Legal and safety brochure, Warranty Leaflet

## Dimensions

- Set Width: 549 mm
- Set Height: 323 mm
- Set Depth: 37 mm
- Product weight: 3 kg
- Set width (with stand): 549 mm
- Set height (with stand): 332 mm
- Set depth (with stand): 102 mm
- Product weight (+stand): 3.2 kg
- Box width: 630 mm
- Box height: 424 mm
- Box depth: 100 mm
- Weight incl. Packaging: 4.3 kg
- Wall-mount compatible: 75 x 75 mm

## Connections

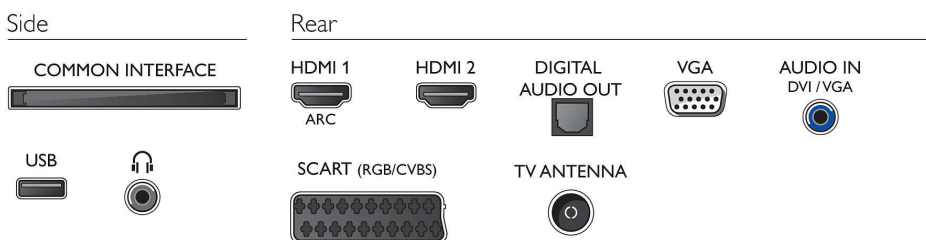

Issue date 2023-10-18

Version: 5.1.1

EAN: 87 18863 00299 5

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* EPG and actual visibility (up to 8 days) is country- and operator-dependent.

\* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

\* (Philips) only compatible with specific Philips player device.