



Philips Cineos
digital widescreen flat TV
with Pixel Plus 2 HD and
Ambilight 2 channel

127 cm (50")

plasma
integrated digital

CINEOS

50PF9631D



Turn up your viewing experience

with Pixel Plus 2 HD and Ambilight 2

Enjoy the ultimate viewing experience of this Philips Cineos Flat TV with Pixel Plus 2 HD, Ambilight 2, the latest PDP technology and table top stand. The Digital Media Reader via USB gives you full access to multimedia content.

Immersive viewing experience

- High Definition plasma WXGA display, 1366 x 768p
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus 2 HD for great details, depth and clarity
- 2-channel active Ambilight enhances the viewing experience

Unrivalled audio performance

- Virtual Dolby Digital for a true life audio experience

True beauty lies in the details

- Matching stand with elegant design included

Perfect picture quality from your digital photos

- USB Connector for easy, instant multimedia playing

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

Highlights

Plasma WXGA panel, 1366 x 768p

This state-of-the-art plasma screen technology gives you widescreen HD resolution of up to 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures in with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Pixel Plus 2 HD

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colors and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

Ambilight 2 channel

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

Virtual Dolby Digital

Virtual Dolby Digital is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic

without the necessity of additional rear speakers. You become totally immersed in your television experience.

Bypacked tabletop stand

A table-top stand with matching design is packed with the set.

USB Multimedia Connector

The USB connector allows access to multimedia jpg, mp3 and alb files of most USB-sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes you easily viewing and sharing your photos and music.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.



Specifications

Picture/Display

- Color cabinet: High Gloss Black
- Aspect ratio: 16:9
- Brightness: 1000 cd/m²
- Contrast ratio (typical): 10000:1
- Viewing angle: 160° (H) / 160° (V)
- Diagonal screen size: 50 inch / 127 cm
- Display screen type: Plasma HD panel
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus 2 HD, Digital Natural Motion, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Jagged Line Suppression, Progressive scan, Pulse Killer Chip, Widescreen Plus
- Screen enhancement: Anti ageing circuit, Anti-Reflection coated screen

Ambilight

- Ambilight Features: Ambilight 2 Channel, Auto adaptive to video content, Efficient low energy lamp
- Color Settings: Full Multi Color
- Dimming Function: Manual and via Light Sensor

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz

Video Formats

Resolution	Refresh rate
1280 x 720p	3Fh
1920 x 1080i	2Fh
640 x 480i	1Fh
640 x 480p	2Fh
720 x 576i	1Fh
720 x 576p	2Fh

Sound

- Output power (RMS): 2x15W
- Sound Enhancement: Digital Signal Processing, Graphic Equaliser, Dynamic Bass Enhancement
- Sound System: Virtual Dolby Digital

Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: Integrated woofers with wOOx, Dome tweeter

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Smart Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Side Control
- Electronic Program Guide: Now + Next EPG
- Remote Control: Amp, DVD, Sat, STB (Set-Top Box), VCR, Multi-functional
- Remote control type: RC4401
- Screen Format Adjustments: 4:3, 6 Widescreen Modes, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen
- Picture in Picture: Text dual screen
- Teletext: 1200 page Hypertext
- Teletext enhancements: Habit Watch, Program information Line
- VESA Mount: Vesa compliant

Multimedia Applications

- Digital Content Management: Digital Media Reader
- Multimedia connections: USB (streaming video capable)
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, MPEG1, MPEG2

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K, PAL, SECAM
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial *
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB, Y/C
- Ext 3: YPbPr
- Ext 4: HDMI
- Ext 5: HDMI
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, USB
- Other connections: Analog audio Left/Right out, PC-In VGA, S/PDIF in (coaxial), S/PDIF out

(coaxial), Common Interface

Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: AC 110 - 240 V +/- 10%
- Power consumption: 400 W
- Standby power consumption: 1W


Accessories

- Included accessories: Table top stand, RF antenna cable
- Optional accessories: Floor stand

Dimensions

- Set dimensions (W x H x D): 1327 x 908 x 114 mm
- Set dimensions with stand (H x D): 968 x 320 mm
- Product weight: 57 kg
- Box dimensions (W x H x D): 1412 x 1223 x 353 mm
- Weight incl. Packaging: 83.4 kg
- VESA wall mount compatible: 600 x 200 mm

Rear connectors

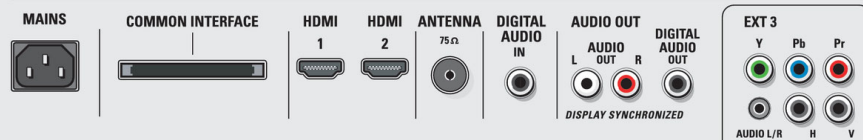

Side connectors



Issue date 2019-06-25

Version: 6.1.13

12 NC: 8670 000 23315
EAN: 87 10895 92054 4

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DVB-T, supported in selected countries only