



Philips Cineos  
widescreen flat TV with  
Pixel Plus 3 HD and  
Ambilight Full Surround

107cm (42")  
LCD  
integrated digital

**CINEOS**

**42PF9831D**



## Turn up your viewing experience

with Pixel Plus 3 HD and Ambilight

Enjoy the ultimate viewing experience of this Philips Cineos Flat TV with Pixel Plus 3 HD, Ambilight Full Surround and Clear LCD technology. The Digital Media Reader with PC link gives you full access to multimedia content.

### Immersive viewing experience

- HD LCD WXGA display, with a 1366 x 768p resolution
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus 3 HD for most sharp and clear pictures
- Clear LCD with 3ms response for extreme motion sharpness
- Ambilight Full Surround for immersive viewing experience

### Unrivalled audio performance

- Compact lambda/4 subwoofer technology for powerful deep bass

### Perfect picture quality from your digital photos

- Access your photos, music and movies via PC-link
- Wireless prepared for connection to your PC
- USB and Memory-Card slot for instantly playing multimedia

### For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable



**PHILIPS**

widescreen flat TV  
107cm (42") LCD, integrated digital

42PF9831D/10

# Highlights

## LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

## HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

## Pixel Plus 3 HD

Pixel Plus 3 HD offers the unique combination of ultimate sharpness, natural detail, vivid colors and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clean and razor sharp.

## Clear LCD with 3 ms response

Clear LCD creates extreme motion sharpness for clear and vibrant images even with fast on-screen motion. The high refresh rates of the scanning backlight technology increases the

sharpness of motion reproduction down to an effective response time of 3 milliseconds (measured in Perceived Blur-Edge-Width; BEW). On top it creates a higher dynamic contrast and an increased viewing angle. The unique Philips technology brings motion sharpness of LCD displays to an unprecedented level, better than any other Flat display technology.

## Ambilight Full Surround

Ambilight 4 makes an impressive contribution to the overall viewing experience and the design of the TV. It produces a fully surrounding glow of light that complements the colors and light intensity on all 4 sides of the image and with the unique design creates a 'floating display'. The Ambilight is cast onto a reflective area that is an integrated part of the TV's unique design and makes it independent from TV position or mounting. The surrounding glow creates ambiance, stimulates more relaxed viewing, improves perceived picture detail, contrast and color, and will completely immerse you.

## Lambda/4 sound system

You want a deeper sound experience in music and movies. The integrated subwoofer with lambda/4 technology creates a very deep and powerful bass in a highly compact enclosure, keeping the TV slim and flat. The lambda/4 subwoofer unit utilizes resonating acoustic masses in a system of ducts to produce powerful bass with low distortion. The lambda/4 sound system, combined with high quality midrange and tweeters also gives a very spacious stereo image.

## PC-link

The PC-link provides fun and easy access to your personal digital media files and multimedia content\*. The widely used Ethernet (LAN) and WiFi open standards are used for wired and (optional) wireless\*\* connection and ensure interoperability. Browse your PC collection of digital photographs, multimedia videos and music files via your home LAN network. The intuitive user interface of the TV and the

Philips Multimedia Manager for your PC makes it available at the push of a button (\* see product for supported formats, PC-LAN functionality required \*\* Additional 'Ethernet-bridge' device required)

## Wireless PC link prepared

Wi-Fi is the leading standard for wireless broadband. With the wireless prepared function\* in the Philips TV you can share PC multimedia content anywhere in your house, without the hassle of wires. High Bandwidth means you can enjoy high quality multimedia pictures, music or video, over distances that can reach up to 100 meters\*\*. Access your WiFi PC or your home WiFi network (router). (\*requires optional, WiFi Ethernet-bridge. \*\*may vary under local conditions)

## USB and Memory Card slot

Instantaneously view and share your movies, photos and music. The Memory Card slot will accept cards of type Compact Flash I and II, Memory Stick, SD Card / Mini SD Card, Smart Media, Micro Drive (up to 2 GB) and Multi Media Card. Simply plug the memory card into slot at the side of the TV, and access the multimedia files stored on the card. The USB connector allows access to multimedia files of most USB-sticks and most digital cameras (USB memory-class device).

## 2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.



widescreen flat TV  
107cm (42") LCD, integrated digital

42PF9831D/10

# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Brightness: 550 cd/m<sup>2</sup>
- Dynamic screen contrast: 7000:1
- Response time (typical): (BEW equiv.) 3 ms
- Viewing angle: 176° (H) / 176° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus 3 HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Clear LCD, Digital Natural Motion, Dynamic contrast enhancement, Jagged Line Suppression, Progressive scan, Pulse Killer Chip, Widescreen Plus
- Screen enhancement: Anti-Reflection coated screen
- Color cabinet: High Gloss Black & Brilliant Pearl

## Ambilight

- Ambilight Features: Ambilight Full Surround, Auto adaptive to video content, Efficient low energy lamp, Full operation in stand-by
- Color Settings: Full Multi Color
- Dimming Function: Manual and via Light Sensor

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz

### Video Formats

Resolution	Refresh rate
640 x 480i	1Fh
640 x 480p	2Fh
720 x 576i	1Fh
720 x 576p	2Fh
1280 x 720p	3Fh
1920 x 1080i	2Fh

## Sound

- Output power (RMS): 2x12W + 1x24 W
- Sound Enhancement: Digital Signal Processing, Dynamic Bass Enhancement, Graphic Equaliser
- Sound System: Virtual Dolby Digital, BBE

## Loudspeakers

- Built-in speakers: 5
- Loudspeaker types: Integrated subwoofer, Dome tweeter

## Multimedia Applications

- Digital Content Management: Digital Media Reader
- Memory Card Types: Compact Flash type I, Compact Flash type II, Memory Stick, Microdrive, MultiMedia Card (MMC), Secure Digital Card (SD), Smart Media Card
- Multimedia connections: Ethernet-UTP5, UPnP, Wi-Fi (opt. Ethernet-bridge), 7-in-1 Memory Card Reader, USB (streaming video capable)
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, DivX 3.11, DivX 5, MPEG1, MPEG2, MPEG4, XviD

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K, PAL, SECAM
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial \*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB, Y/C
- Ext 3: YPbPr
- Ext 4: HDMI
- Ext 5: HDMI
- Ext 6: VGA PC-in, Audio L/R in
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, 2x USB, Multi-slot memory card reader
- Other connections: Analog audio Left/Right out, Ethernet, PC-in VGA + Audio L/R in, S/PDIF in (coaxial), S/PDIF out (coaxial), Common Interface

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Smart Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Side Control

- Electronic Program Guide: Now + Next EPG
- Picture in Picture: Full dual screen (2 tuners), Text dual screen
- Remote Control: Amp, DVD, Sat, STB (Set-Top Box), VCR, Multi-functional
- Remote control type: RC4410
- Screen Format Adjustments: 4:3, 6 Widescreen Modes, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen
- Teletext: 1200 page Hypertext
- Teletext enhancements: Habit Watch, Program information Line
- VESA Mount: Vesa compliant

## Accessories


- Included accessories: Table top stand, Wall mounting bracket, RF antenna cable
- Optional accessories: Floor stand

## Dimensions

- Set dimensions (W x H x D): 1279 x 872 x 114 mm
- Set dimensions with stand (H x D): 932 x 290 mm
- Weight incl. Packaging: 62 kg
- Product weight: 38 kg
- Box dimensions (W x H x D): 1354 x 1211 x 339 mm
- VESA wall mount compatible: 800 x 400 mm

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: AC 110 - 240 V +/- 10%
- Power consumption: 248 W
- Standby power consumption: 0,8W

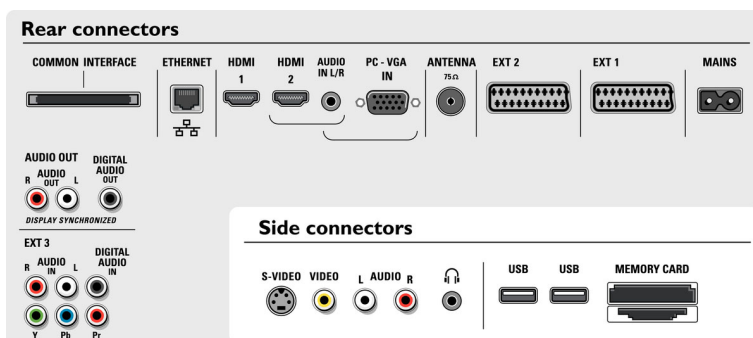

Issue date 2019-06-26

Version: 8.0.14

12 NC: 8670 000 23308  
EAN: 87 10895 92049 0

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DVB-T, supported in selected countries only