

Philips Jewel
Vacuum cleaner with bag

2000W

425W suction power
HEPA 13 washable filter
Animal

FC9078/01



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle that gives you three cleaning actions in one stroke.

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS

Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Active fragrance control

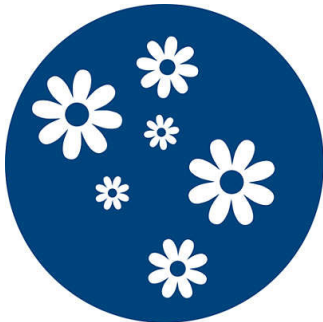

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Additional nozzle: Turbo brush
- Accessory storage: On handgrip

Design

- Color: Denim blue

Weight and dimensions

- Weight of product: 5.7 kg

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA AirSeal

Usability

- Action radius: 10 m
- Cord length: 7 m
- Tube coupling: Button
- Carrying handle: Front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette
- Active fragrance control



Issue date 2023-08-07

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com