




Philips Avance Collection  
Airfryer

### TurboStar

QuickClean  
Non-stick surface  
Black, 1425 W, 0.8 kg

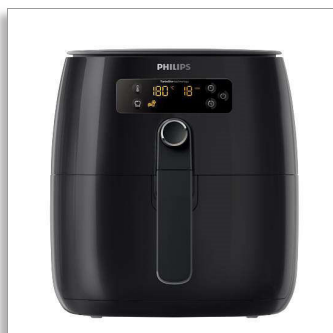

HD9641/91

## Great-tasting chips with up to 80% less fat\*

### TurboStar technology, perfectly cooked fried food

Philips' unique TurboStar technology lets you fry with little to no added oil while still making your food crispy on the outside and tender on the inside. Now with QuickControl dial, it's even easier. Your favourite fried food in one click!

#### Fast, easy and time efficient

- Easily cleaned in 90 secs — QuickClean basket with non-stick mesh
- Tasty food in less time: no preheating required
- 4 Presets for most popular dishes
- QuickControl dial with digital display
- Keep warm function for flexible serving time

#### Healthy and tasty results every time

- Delicious dishes: tender on the inside, crispy on the outside
- Over 200 recipes in app and free recipe book included
- Cooks fried food 50% more evenly\*
- Unique TurboStar technology for healthier frying

#### Thoughtfully designed

- Large 0.8-kg capacity
- Universal EasyClick handle — easily exchange accessories

# PHILIPS

# Highlights

## Crispy and tender results



Thanks to Philips TurboStar technology, all food is exposed to this constant, circulating heat and is cooked through simultaneously. The result is evenly fried food with no turning needed, even when food is piled up. In addition to the heated air flow, powerful direct heat from above quickly crisps the food for delicious, golden-brown results. Crispy on the outside, tender on the inside.

## QuickClean basket



With Philips' Airfryer QuickClean basket, which includes a removable non-stick mesh, cleaning becomes easier and faster. The removable non-stick coated drawer and the food basket are dishwasher safe for easy cleaning. Philips Airfryer with TurboStar technology saves you and your home from the smell of fried oil compared to a standard fryer.

## Inspiring recipes



The Philips Airfryer app is free and filled with delicious recipes and easy-to-follow step-by-step cooking instructions. Get inspired with quick, healthy snacks or meals for special occasions.

## Instant heat-up



The Philips Airfryer is ready to use immediately. Inherently faster from start to finish, it drives everyday usage with its superiority throughout the cooking process.

## Presets for most popular dishes



We created pre-set programs for popular dishes, so you can cook them with just one click. You'll enjoy the ease of our pre-set programs for frozen chips, meat, fish and drumsticks.

## Cooks fried food 50% more evenly



The unique TurboStar technology swirls hot air continuously through the whole cooking chamber, resulting in even heat distribution throughout the entire basket. "TurboStar achieves the most optimal airflow so food cooks 50% more evenly"

## Small in size, big in capacity



Airfryer has been thoughtfully designed for your kitchen. It allows you to save space on your counter top while still enabling you to cook large amounts of food (800 g of chips).

## QuickControl dial



The new QuickControl dial is your main Airfryer control. Just turn it to set the right temperature, then click. Turn again to set the time — then click to start cooking.

## Airfryer

TurboStar QuickClean, Non-stick surface, Black, 1425 W, 0.8 kg

HD9641/91

# Specifications

### Design

- Colour: Black

### Accessories

- Included: Recipe booklet

### Technical specifications

- Cord length: 0.8 m
- Voltage: 220 V
- Power: 1425 W
- Frequency: 50/60 Hz
- Capacity basket: 0.8 kg

### Service

- 2-year worldwide guarantee

### Weight and dimensions

- Dimensions of product (LxWxH): 365 x 266 x

287 mm

- Weight of product: 5.5 kg

### Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

### General specifications

- Product features: Automatic shut-off, Cool wall exterior, Cord storage, Dishwasher safe, Non-slip feet, Pre-set cooking function, Ready signal, Temperature control, Power-on light, Keep Warm function, QuickClean, Recipe book and app
- Prefix programs: 4
- Technology: TurboStar technology
- Time control: Up to 60 minutes

### Finishing

- Material of main body: Plastic



Issue date 2023-03-09

Version: 2.2.1

EAN: 87 10103 77808 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compared to fresh chips prepared in a conventional Philips fryer.  
\* compared to Airfryer without TurboStar