

# PHILIPS

Professional TV

43" Studio

DVB-T2/T/C HEVC

43HFL2869T



## Delight your guests

with pure taste

Show your guests how much you care with this affordable Hospitality TV. You will enjoy dedicated hospitality features like a branded welcome page, installation via USB and menu and control locking.

### **Great viewing experience and guest comfort**

- LED TV for images with incredible contrast
- Low power consumption
- USB for multimedia playback

### **Advanced hotel features and future proof**

- Greet your guests with a customizable welcome page
- USB cloning of all settings for quick installation
- Off-line channel editor to edit a channel list on a PC
- One combined channel list for Analog and Digital channels
- Installation menu locking
- Prevent unauthorized use by joystick control locking
- Advanced volume control to avoid guest disturbance


# Highlights

## Welcome page



A welcome page is displayed each time the TV set is switched on. The welcome page can be branded and customized easily at the time of installation via a simple welcome image in .png format.

## USB Cloning

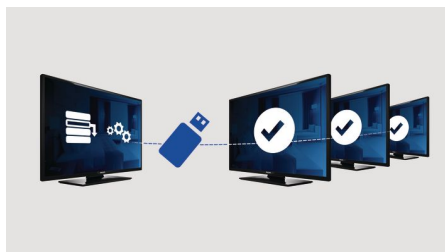

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less

than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

## USB (photos, music, video)



Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.

## One combined channel list

One integrated channel list for digital and analogue channels. This allows the guest to zapp seamless between Analogue and Digital channels.

## Advanced volume control

With advanced volume control you can install the start-up volume of the TV and predetermine the volume range with which the TV set is allowed to operate, preventing excessive volume adjustments and avoiding disturbance of next door guests.

## Joystick control locking

By disabling or enabling the joystick control locking, the administrator can prevent unauthorized use of the TV via the joystick, saving the hotelier overheads.

## Installation menu locking

Prevents unauthorized access to installation and configuration settings, to ensure maximum guest convenience and avoid unnecessary reinstalling costs.

## Low power consumption

Philips TVs are designed to minimize power consumption. This will not only reduce environmental impact but also lower operating costs.

# Specifications

## Picture/Display

**Display:** LED Full HD  
**Diagonal screen size:** 43 inch / 108 cm  
**Aspect ratio:** 16:9  
**Panel resolution:** 1920x1080p  
**Brightness:** 300 cd/m<sup>2</sup>  
**Viewing angle:** 178° (H) / 178° (V)  
**Contrast ratio (typical):** 1200

## Audio

**Sound output Power:** 16 (2x8) W  
**Speakers:** 2.0, Down Firing  
**Sound Features:** Equalizer, Balance, AVL, Incredible surround, Dynamic Bass

## Design

**Colour:** Black

## Tuner/Reception/Transmission

**Digital TV:** DVB-T/T2/C, HEVC FHD (up to 1080p60)  
**Analog TV:** PAL, SECAM

## Connectivity Rear

**Antenna:** IEC-75  
**HDMI1:** HDMI 1.4, ARC  
**HDMI2:** HDMI 1.4  
**Digital Audio out:** Optical  
**Scart:** CVBS, RGB, SVHS  
**VGA input:** 15 pin D-sub

## Connectivity Side

**Common Interface Slot:** CI+ 1.3  
**AV input:** CVBS+L/R (Cinch)  
**Headphone out:** Mini-Jack  
**USB1:** USB 2.0

## Connectivity Enhancements

**EasyLink (HDMI CEC):** One touch play, System Standby, RC pass through

## Features

**Digital services:** Subtitles, Teletext, MHEG, Now&Next, 8d EPG  
**Ease of use:** Picture Style, Sound Style  
**Local control:** Joystick

## Hospitality Features

**Hotel mode:** Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation (incl. HP)

**Prison mode:** high security mode, TXT/MHEG/USB/EPG/Subtitle Lock

**Your brand:** Welcome Logo

**Cloning and Firmware update:** via USB, Instant Initial Cloning

**Switch On control:** Channel/Source, Picture Style, Volume (incl. HP)

**Timer:** Sleep Timer, Wake Up Alarm

**Channels:** Combined List, Off-Line Channel Editor

**Control:** Block Automatic Channel Update

**Power control:** Green/fast startup

**Remote Control:** Cable Strap Ready, RC Battery Door Lock

**Anti-Theft:** Kensington Lock

## Healthcare features

**Control:** Multi-Remote Control

**Convenience:** Headphone out

## Multimedia

**Multimedia connections:** USB

**Video playback supported:** Containers: AVI, MKV, Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, HEVC, TS

**Subtitle formats supported:** SRT, SSA SUB, ASS, SMI, TXT

**Music formats supported:** MP3, AAC, WAV, WMA (v2 up to v9.2)

**Picture formats supported:** BMP, JPG, PNG

**Supp. Video Resolution on USB:** up to 1920x1080p@30Hz

## Accessories

**Included:** Remote Control 22AV1407A/12, 2xAAA Batteries, Tabletop Stand, Warranty Leaflet, Legal and Safety brochure

**Optional:** Setup RC 22AV9573A, Remote Control 22AV1601A/12

## Power

**Mains power:** AC 220-240V; 50-60Hz

**Energy Label Class:** A++

**Eu Energy Label power:** 37 W

**Annual energy consumption:** 54 kW·h

**Standby power consumption:** <0.3 W

**Power Saving Features:** Eco mode

**Ambient temperature:** 5 °C to 45 °C

## Dimensions

**Set dimensions (W x H x D):**

974 x 572 x 64/93 mm

**Set dimensions with stand (W x H x D):**

974 x 615 x 220 mm

**Product weight:** 8.3 kg

**Product weight (+stand):** 9.2 kg

**VESA wall mount compatible:** M6, 200 x 200 mm

