



Philips  
LCD TV with Pixel Plus  
HD

119 cm (47")  
integrated digital

47PFL5603D



## Brilliant design, powerful performance.

Style and performance meet in one complete experience. Combining a full HD 1080p display, Pixel Plus HD engine and fantastic invisible sound, this Flat TV provides brilliant design and powerful performance for years to come.

### **Vivid and razor sharp pictures**

- Pixel Plus HD for better details, depth and clarity
- Full HD LCD display, with a 1920 x 1080p resolution
- 28.9 billion colours for brilliant natural images
- Dynamic contrast 30000:1 for incredible rich black details

### **Pure and powerful sound**

- Superb audio enjoyment from unique invisible speakers
- Virtual Dolby Digital for a true life audio experience

### **Connect, install and enjoy**

- Enjoy photo and music playback via USB
- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV and connected device via HDMI CEC

### **Ready for digital**

- Integrated Digital Tuner for DVB-T reception

# PHILIPS

# Highlights

## Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewers to watch content that is vivid, natural and real. This results in superb lifelike pictures with incredible details and depth from any HD source.

## Full HD LCD display 1920 x 1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future-proof as it supports 1080p signals from all sources, including the most recent sources such as Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colours.

## Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an

additional set top box. Enjoy quality TV clutter free.

## Virtual Dolby Digital

Virtual Dolby Digital is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

## USB for photo and music playback

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your photos and music.

## 4 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI intelligently

communicates the highest output resolution with the source device. The HDMI input is fully backwards-compatible with DVI sources and includes digital audio. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, such as an HD set-top box, a Blu-ray player and game console or digital camcorder. Your TV is fully prepared for the HD future.

## EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.

# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 30000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H)/176° (V)
- Diagonal screen size: 47 inch / 119 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920 x 1080p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Colour Transient Improvement, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, 1080p 24/25/30 Hz processing, 1080p 50/60 Hz processing
- Screen enhancement: Anti-Reflection coated screen
- Colour cabinet: Black cabinet with High Gloss deco front

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85 Hz
800 x 600	60, 72, 75, 85 Hz
1024 x 768	60, 70, 75, 85 Hz
1920 x 1080i	60 Hz

Via HDMI/DVI input

### Video formats

Resolution	Refresh rate
480i	60 Hz
480p	60 Hz
576i	50 Hz
576p	50 Hz
720p	50, 60 Hz
1080i	50, 60 Hz
1080p	24, 50, 60 Hz
1080p	24, 25, 30 Hz

## Sound

- Equalizer: 5-bands

- Output power (RMS): 2 x 15 W
- Sound Enhancement: Auto Volume Leveller, Graphic Equalizer
- Sound System: Nicam Stereo, Virtual Dolby Digital, BBE

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake-up Clock
- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play
- Ease of Use: 4 favourite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On-Screen Display, Programme List, Settings assistant Wizard, Side Control
- Electronic Programme Guide: Now + Next EPG
- Picture in Picture: Text dual screen
- Remote Control: TV
- Remote control type: RCPF05E08B
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1200-page Hypertext
- Teletext enhancements: 4 favourite pages, Programme information Line
- Smart mode: Movie, Standard, Vivid

## Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial\*
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Tuner Display: PLL

## Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB
- Ext 3: YPbPr, Audio L/R in
- Ext 4: HDMI v1.3
- Ext 5: HDMI v1.3
- Ext 6: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, System standby
- Front/Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphones Out, USB
- Other connections: Analogue audio Left/Right out, PC Audio in, S/PDIF out (coaxial), Common Interface

## Power

- Ambient temperature: 5°C to 35°C
- Mains power: 220 - 240 V, 50/60 Hz
- Power consumption: 260 W
- Standby power consumption: 0.15 W


## Dimensions

- Set dimensions (W x H x D): 1163 x 712 x 104 mm
- Set dimensions with stand (W x H x D): 1163 x 786 x 310 mm
- Weight incl. Packaging: 48.7 kg
- Product weight: 27.5 kg
- Product weight (+stand): 34.3 kg
- Box dimensions (W x H x D): 1287 x 883 x 391 mm
- VESA wall mount compatible: 400 x 400 mm

## Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

Stereo system				Transmission system						
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK	SECAM LL
•	•	•	•	•	•	•	•	•	•	•

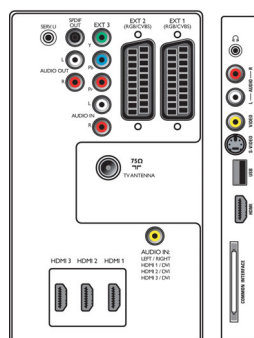

Issue date 2019-06-26

Version: 4.0.26

12 NC: 8670 000 36253  
EAN: 87 12581 38878 2

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

www.philips.com