

Philips DesignLine Edge  
Smart LED TV with  
Ambilight Spectra 2 and  
Pixel Precise HD

107cm (42")

Easy 3D  
DVB-T/C

DesignLine

42PDL6907H



## Designed to blend into your interior

### Smart 3D LED TV in stunning design

Like a piece of furniture, DesignLine Edge features a beautiful design to fit your living room. Combined with brilliant LED pictures, Smart TV Premium and Ambilight, this TV is a fusion of function and form for an immersive TV experience.

#### Enjoy a world of content with Smart TV Premium

- Integrated Wi-Fi to use Smart TV wirelessly
- A wealth of online apps, videos to rent and catch-up TV
- Control the TV with your smart phone, tablet or keyboard
- Find, schedule, record\* & pause TV
- Watch TV wherever you like at home with Wi-Fi smart screen\*
- Make voice and video calls with Skype™ on your TV

#### Fascinating viewing experience in your living room

- Ambilight Spectra 2-sided intensifies the viewing experience
- Easy 3D Clarity 700 for a comfortable 3D movie experience
- Enjoy any 2D content in flawless 3D at a push of a button
- Unique 3D depth adjustment to view 3D the way you like it
- Unique Two Player Full Screen Gaming mode for your 2D games
- Full HD TV with Pixel Precise HD for details in action
- 600Hz Perfect Motion Rate (PMR) for superb motion sharpness



PHILIPS

# Highlights

## Integrated Wi-Fi



With integrated Wi-Fi in your Philips TV, you can access a world of content with Smart TV wirelessly at home.

## Ambilight Spectra 2



Add a new dimension to your viewing experience with Ambilight Spectra 2. This patented Philips technology enlarges the screen by projecting a glow of light from 2 sides of the back of the TV screen onto the surrounding wall. Ambilight automatically adjusts the color and brightness of the light to match the TV picture. Thanks to the wall-adaptive function, the color of the light is perfect, regardless of your wall color.

## 3D Conversion

Watch your entire movie collection in vivid and flawless 3D – even old black-and-white classics. Philips offers real-time high-quality conversion of any 2D content at the push of a

button. It ensures that subtitles are shown at a constant depth and that there are no errors such as the background appearing in the foreground.

## 3D Depth Adjustment

Everyone perceives 3D differently. This is why Philips offers you the possibility of customizing the 3D depth level to your personal liking. The unique 3D depth adjustment allows you to choose the image depth that best suits the content on-screen and your personal preference. This also makes it more comfortable for your eyes. Now you can fully enjoy the 3D experience.

## 600Hz Perfect Motion Rate

600Hz Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images in fast action movies. The new Philips PMR standard shows the combined visible effect of the fastest panel refresh rate, Perfect Natural Motion and unique processing formula, for unprecedented motion sharpness.

## Skype™ on your TV

Add a new dimension to your calls and share experiences with the people that matter to you, wherever they are. With Skype™ on your TV, make voice and video calls from your living room. Just plug in the optional Philips TV camera (PTA317/00) to your TV and enjoy excellent video and sound quality from the comfort of your couch.

## Two Player Full Screen Gaming

With Philips Two Player Full Screen Gaming glasses (PTA436/00), your TV can deliver the ultimate Two Player Full Screen Gaming experience. In 2D two-player games, each

gamer usually sees their game on half the screen. Using 3D technology, each player can now enjoy the game in 2D in full screen at the same time.



## Smart TV Premium

A world of content for you. Enjoy the freedom to watch your program on a tablet, smart phone or TV. With the new Smart TV home screen, access a broad selection of apps easily. With Wi-Fi smart screen\*, your iPhone/iPad interacts wirelessly with your Philips Smart LED TV so that you can easily pull digital TV towards the device and enjoy your favorite shows anywhere at home! Also, you can pause your TV program easily - simply connect a USB hard disk to your TV and record digital TV broadcasts.

## Philips MyRemote App

The Philips MyRemote App is a smart app to organize your TV viewing experience around you.

Enjoy a great variety of possibilities: browse through the Program Guide on your tablet whilst watching TV. Additional features like easy text entry, volume and program control as well as pushing pictures, videos or music to your TV really turn your smart devices into smart remote controls. Download the MyRemote App now from the iTunes App Store or Android Market.



# Specifications

## Ambilight

- Ambilight Version: 2 sided
- Ambilight Features: Wall colour adaptive, Lounge light mode

## Picture/Display

- Display: LED Full HD
- Diagonal screen size: 42 inch / 107 cm
- Panel resolution: 1920x1080p
- 3D: Easy 3D Clarity 700, 2 Player Full Screen Gaming\*, 3D Depth adjustment, 2D to 3D conversion
- Aspect ratio: 16:9
- Brightness: 400 cd/m<sup>2</sup>
- Dynamic screen contrast: 500,000 : 1
- Picture enhancement: Pixel precise HD, 600 Hz Perfect Motion Rate, Micro Dimming

## CPU

- Processor type: Dual-Core

## Smart TV Applications

- Net TV: Catch-up TV, Online Video stores, Open Internet browser, Online apps
- Control: MyRemote app (iOS & Android), USB Keyboard & Mouse support
- SimplyShare: DLNA media browser, USB media browser, WiFi Smart Screen
- Program: Pause TV, USB recording

## Sound

- Output power (RMS): 20W (2 x 10W)
- Sound Enhancement: Auto Volume Leveller, Clear Sound, Incredible Surround, Pure Bass

## Connectivity

- Number of HDMI connections: 5
- Number of component in (YPbPr): 1
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 3
- Wireless connections: WiFi Certified
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical), PC-in VGA + Audio L/R in, Headphone out, Service connector
- HDMI features: 3D, Audio Return Channel
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Plug & play add to Homescreen, Auto subtitle shift

(Philips), Pixel Plus link (Philips), One touch play

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

## Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

## Convenience


- PC network link: SimplyShare
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, Onscreen Usermanual, Touch control buttons
- Screen Format Adjustments: Autofill, Autozoom, Movie expand 16:9, Super Zoom, Unscaled, Widescreen
- Signal strength indication
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Electronic Program Guide: 8 day Electronic Program Guide

## Tuner/Reception/Transmission

- Digital TV: DVB-C MPEG2\*, DVB-C MPEG4\*, DVB-T MPEG2\*, DVB-T MPEG4\*
- Video Playback: NTSC, PAL, SECAM

## Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Energy Label Class: A+
- Eu Energy Label power: 54 W
- Annual energy consumption: 75 kWh
- Standby power consumption: < 0.15 W
- Power Saving Features: Auto switch-off timer, Eco mode, Light sensor, Picture mute (for radio)
- Off mode power consumption: < 0.01 W

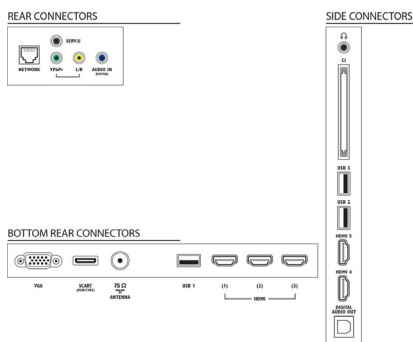

Issue date 2019-06-22

Version: 6.13.7

12 NC: 8670 000 88479  
EAN: 87 12581 63929 7

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

## Dimensions

- Box dimensions (W x H x D): 1176 x 740 x 265 mm
- Set dimensions (W x H x D): 989 x 635.8 x 35.3 mm
- Set dimensions with stand (W x H x D): 989 x 635.8 x 261.6 mm
- Product weight: 19.5 kg
- Product weight (+stand): 27.8 kg
- Weight incl. Packaging: 37.7 kg
- Compatible wall mount: 400 x 400mm

## Accessories

- Included accessories: Power cord, Remote Control, 2 x AAA Batteries, Quick start guide, Legal and safety brochure, SCART Adaptor, Component cable adaptor, Smart TV Quick Guide, Warranty Leaflet, 4x Passive 3D Glasses
- Optional accessories: 3D glasses PTA417, 3D glasses PTA416, 3D glasses PTA426, 3D glasses Game kit PTA436

\* Net TV: Visit [www.philips.com/smarttv](http://www.philips.com/smarttv) to discover the services offering in your country.  
\* USB recording only for digital channels covered by the TV IP bases Electronic Programme Guide (country and channel restrictions may apply), recordings may be limited by broadcast copy protection (CI+). An internet connection is required.  
\* Wi-Fi smart screen available via software update in autumn 2012  
\* DivX Certified® to play DivX® video up to HD 1080p, including premium content.  
\* Skype camera is sold separately  
\* Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under 6 years of age as their visual system is not fully developed yet.  
\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.  
\* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.  
\* 8 days EPG, service not available in all countries