

Philips Small screens -
white
LCD TV with Digital
Crystal Clear

56 cm (22")
HD Ready
digital TV

22PFL3415H



Ideal for any room

With true to life LED picture performance

Whether movies, sports or games - experience great LED pictures with this HD Ready TV. With Philips quality and its sophisticated design this TV is the right choice for any room of your house

A clear, vivid LCD picture every time

- Digital Crystal Clear for depth and clarity
- HD Ready for the highest quality display of HD signals
- Brilliant LED images with low power consumption
- 28.9 billion colours for brilliant natural images
- Dynamic contrast 150.000:1 for incredible rich black details

Rich and clear sound.

- Incredible Surround for powerful sound

Complete digital connectivity made simple

- Seamless connectivity with 1 HDMI input and Easylink
- Enjoy photo and music playback via USB
- PC-input allows you to use your TV as a PC monitor
- Integrated MPEG-4 tuner for HD reception without set top box

Greener every day

- Energy efficiency through LED technology



PHILIPS

LCD TV
56 cm (22") HD Ready, digital TV

Highlights

Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimises picture quality to optimal contrast, colour and sharpness levels. The result is extremely clear pictures from any source.

HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

LED



The most advanced LED lighting technology in this TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlight you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colours.

28.9 billion colours

Vibrant and natural images from the most advanced colour processing. The 3 colour channels (RGB) are optimised for a total processing power of 28.9 billion colours. The advanced algorithms detect even the subtlest shades and skin tones, creating the best colour possible.

Incredible Surround


Feel the power of the music beat and the atmosphere of the movies. Incredible Surround allows you to experience total surround sound with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.

1 HDMI inputs with Easylink



HDMI is a single cable, which carries both picture and audio signals from your devices to your TV, helping to avoid cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

USB for photo and music playback

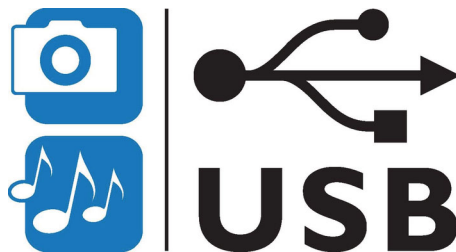

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into

22PFL3415H/12

the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your photos and music.

PC input (VGA)

With PC input you can connect your TV to a computer using a VGA cable and use the TV as a PC monitor.

Integrated DVB tuner MPEG-4

The integrated digital tuner lets you receive terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

Dynamic Contrast 150.000:1



Dynamic Contrast 150 000:1

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight-boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.

EU Eco Label



The Philips eco-design process aims to create products that are increasingly eco-friendly.

Our efforts have been

recognised and Philips has been awarded the EU Eco Label (Eco flower) for the majority of its models because of their high energy efficiency, ultra low standby powers (up to 50% less than the required EU Eco Label level), absence of hazardous substances (e.g. lead) and design for easier recycling.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 300 cd/m²
- Dynamic screen contrast: 150,000:1
- Response time (typical): 6 ms
- Viewing angle: 170° (H)/160° (V)
- Diagonal screen size: 22 inch / 56 cm
- Display screen type: LCD WXGA+ Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Active Control, Colour Enhancement, Colour Transient Improvement, Digital Crystal Clear, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, Progressive scan, Sharpness Adjustment, Automatic skin tone correction, 1080p 24/25/30 Hz processing, 1080p 50/60 Hz processing
- Screen enhancement: Anti-Reflection coated screen
- Peak Luminance ratio: 65 %
- Colour cabinet: Silver tint deco front with Alpine white high gloss cabinet

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60 Hz
800 x 600	60 Hz
1024 x 768	60 Hz
1280 x 720	60 Hz
1280 x 768	60 Hz
1280 x 1024	60 Hz
1360 x 768	60 Hz

Via HDMI/DVI input

Video formats

Resolution	Refresh rate
480i	60 Hz
480p	60 Hz
576i	50 Hz
576p	50 Hz
720p	50, 60 Hz
1080i	50, 60 Hz
1080p	24, 50, 60 Hz
1080p	24, 25, 30, 50, 60 Hz

Sound

- Output power (RMS): 2 x 3 W, Invisible Sound
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Smart Sound
- Sound System: Nicam Stereo

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake-up Clock, Wake-Up Timer
- Connection Enhancement: Easy link
- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, On-Screen Display, Settings assistant Wizard, Side Control
- Electronic Programme Guide: Now + Next EPG, 8-day Electronic Programme Guide*
- Screen Format Adjustments: 4:3, Auto Format, Super Zoom, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Widescreen
- Teletext: 1000-page Hypertext
- Teletext enhancements: Fast text, Programme information Line
- Multimedia: USB media browser
- Smart mode: Personal, Vivid, Natural, Cinema, Game, Energy saving, Standard, Movie

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM L/L, DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB-T MPEG4*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, RGB
- Number of Scarts: 1
- Ext 2: YPbPr in, Audio L/R in
- HDMI 1: HDMI v1.3
- Front/Side connections: CVBS in, Audio L/R in, Headphones Out, USB 2.0

- Other connections: Composite video (CVBS) out, PC-in VGA + Audio L/R in, S/PDIF out (coaxial), Common Interface
- EasyLink (HDMI-CEC): One touch play, EasyLink, System audio control, System standby
- Audio Output - Digital: Coaxial (cinch)
- Summary: 1 x HDMI, 1 x USB, 1 x SCART

Power

- Green label: ECO label certified
- Ambient temperature: 5°C to 40°C
- Mains power: 220-240 V, 50 Hz
- Power consumption (typical): 31 W
- Standby power consumption: 0.3 W
- Annual energy consumption: 52.56 kWh
- Presence of lead: Yes*


Dimensions

- Set dimensions (W x H x D): 526 x 343 x 49.4 mm
- Set dimensions with stand (W x H x D): 526 x 369 x 149 mm
- Product weight: 4 kg
- Product weight (+stand): 4.2 kg
- Box dimensions (W x H x D): 580 x 426 x 133 mm
- VESA wall mount compatible: 75 x 75 mm

Accessories

- Included accessories: Tabletop stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, 2 x AAA Batteries, Software declaration

Rear connectors

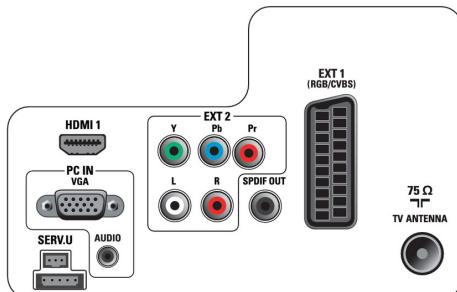

Side



Issue date 2019-11-12

Version: 10.4.10

12 NC: 8670 000 63542
EAN: 87 12581 54603 8

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 8 days EPG, service not available in all countries

* DVB-T, supported in selected countries only

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Typical on-mode power consumption measured according to IEC62087 Ed 2.

* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.