



Philips
Professional LCD TV

56cm (22") System
LCD
integrated digital



22HFL5550D

For delighted guests

Philips Digital Interactive Hospitality TV

This modern and energy efficient Hospitality TV is fully prepared for interactivity. Your guests can connect their own devices, enjoy music in the bathroom and have a tailored welcome message.

System ready and future proof

- SmartCard Xpress Box compatible for interactive systems
- Remote software upgrading
- HD Ready with integrated DVB-T tuner

Differentiating guest experience

- Integrated clock display with wake up and message alarm
- USB Connector for easy, instant multimedia playing
- PC input lets you also use your TV as a PC monitor
- Philips Connectivity Panel compatible to enjoy guest devices

Best total cost of ownership

- USB cloning of all settings for quick installation
- External loudspeaker connector

Sustainable and safe

- SmartPower for energy saving
- Eco-friendly design & flame retardant housing

PHILIPS

Highlights

SmartCard Xpress Box

The optional SmartCard Xpress Box can be mounted at the rear side of the TV set and allows third party decoders and application cards to interface with the TV adding new functionality to the TV. The TV can also be connected to external decoders and set-top boxes of all major interactive system providers, through the Serial Xpress Control Interface (supporting UART and RS232 protocols) and the SmartPlug Control interface.

USB Cloning

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

Integrated clock display

The built-in clock display, which is also a wake-up alarm, eliminates the need and investment for an additional clock with cables and connections in the room.

USB multimedia playing

This Philips TV allows the guest to connect a USB stick for easy and instant playing of multimedia content. Playback formats supported are MP3, Slideshow files (.alb) and JPEG Still pictures.

PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

External loudspeaker connector

Amplified audio connector for easy installation of external speakers (like for bathrooms), eliminating the need for investments in external equipment

Connectivity Panel compatible

This TV work seamlessly with Philips Connectivity Panels. The guest can easily connect and enjoy media from a PC, MP3 player, DVD player, camcorder and various other devices. With autosensing the Connectivity Panel and the TV will automatically switch to display the content from the connected guest device.

SmartPower

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

Eco-friendly design

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimizing overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to the fire.



Specifications

Picture/Display

- Diagonal screen size: 22 inch / 56 cm
- Aspect ratio: Widescreen
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1680 x 1050p
- Brightness: 300 cd/m²
- Contrast ratio (typical): 1000:1
- Dynamic screen contrast: 30000:1
- Response time (typical): 5 ms
- Viewing angle (H / V): 170 / 160 degree
- Screen enhancement: Anti-Reflection coated screen
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Black stretch, Blue stretch, Color Enhancement, Color Transient Improvement, Digital Noise Reduction, Luminance Transient Improver, Motion adaptive de-interlacing, Progressive scan, Automatic skin tone correction, Dynamic contrast enhancement, White stretch, Green stretch, Pixel Plus HD
- Color cabinet: Black

Supported Display Resolution

Video formats	
Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
1080i	50, 60Hz
720p	50, 60Hz
Computer formats	
Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 1024	60Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Number of Preset Channels: 250
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Tuner Display: PLL
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: PAL, SECAM, NTSC
- Digital TV: DVB Terrestrial *

Sound

- Output power (RMS): 2 x 5W
- Sound System: Mono, Stereo, Nicam Stereo, BBE, Dolby Digital (AC-3), Virtual Dolby Digital
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Smart Sound
- Equalizer: 5-bands

Loudspeakers

- Built-in speakers: 2

Connectivity

- Number of Scarts: 2
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out
- Ext 3: Audio L/R in, YPbPr
- Ext 4: HDMI v1.3
- Ext 5: HDMI v1.3
- Ext 6: HDMI v1.3
- Front / Side connections: Audio L/R in, CVBS in, S-video in, USB 2.0, HDMI v1.3
- Other connections: Analog audio Left/Right out, S/PDIF out (coaxial), Headphone out, PC-In VGA, Common Interface
- Connectivity Enhancements: Serial Xpress interface, SmartPlug Xpress Interface, RJ12 connector, RJ45 connector, SmartCard Xpress box ready, Fast Infrared loop through, HM-Link, External Loudspeaker connector, Power on scart, USB2.0

Convenience

- Ease of Installation: Advanced Hotel Mode, Fine Tuning, PLL Digital Tuning, Program Name, Cloning of TV settings via USB, Installation menu locking, Security menu access, Keyboard lock-out
- Ease of Use: Auto Volume Leveller (AVL), 1 channel list analog/digital, Smart Picture, Smart Sound
- Comfort: Hotel Guest features, Auto power on, Welcome message, Message indicator, Switch on channel, Volume limitation, Fast startup
- Interactive hotel features: Connectivity panel compatible
- Prison mode: Teletext and MHEG disable
- Clock: Integrated LCD Clock Display, Sleep Timer, Wake up Clock
- Clock Enhancements: Synchro Time via TXT/DVB
- Teletext: 1000 page Smart Text

- Teletext languages: Western European, Eastern European, Cyrillic
- Electronic Program Guide: Now + Next EPG
- Screen Format Adjustments: 4:3, Full screen, Movie expand 14:9, Movie expand 16:9, Widescreen, Subtitle Zoom, Super Zoom, Auto Format
- Firmware upgradeable: Local upgrade total TV softw., Remote upgrade hotel TV softw, Firmware upgradeable via USB
- Other convenience: Kensington lock

Healthcare

- Control: Multi remote control
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation Class II

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures, Slideshow files (.ab)

Green Specifications

- Safety: Flame retardant housing
- SmartPower

Power


- Mains power: 220-240V, 50/60Hz
- Power consumption: 55 W
- Passive stand-by consumption: 1.2 W
- Standby power consumption: <2 W (w. clock)
- Active stand-by consumption: 20 W
- Ambient temperature: 5 °C to 35 °C

Dimensions

- Set dimensions (W x H x D): 534 x 397 x 92 mm
- Set dimensions with stand (W x H x D): 534 x 442 x 181 mm
- Box dimensions (W x H x D): 580 x 510 x 137 mm
- Product weight: 6 kg
- Product weight (+stand): 6.5 kg
- Weight incl. Packaging: 7.77 kg
- VESA wall mount compatible: 100 x 100 mm

Accessories

- Included accessories: Power cord, Tabletop swivel stand, Warranty Leaflet
- Optional accessories: Set up Remote RC2573GR, Guest remote control 22AV1105, Wallmount (tilt) 22AV3100/10, Smart-card XP Box SBB103U/10, XP Box Power Supply SBP103A

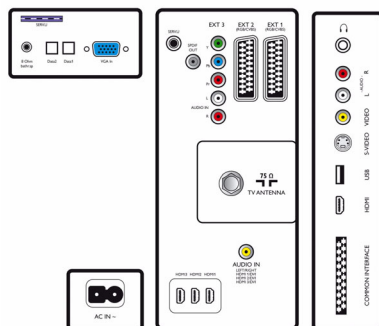

Issue date 2014-02-05

Version: 3.2.12

12 NC: 8670 000 41577
EAN: 87 12581 43716 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* For information on DVB-T enrolled countries please ask your Philips contact.