




Philips 5300 series
Full HD Ultra-Slim LED TV

55 cm (22")

200 Picture Performance Index
FHD
Pixel Plus HD

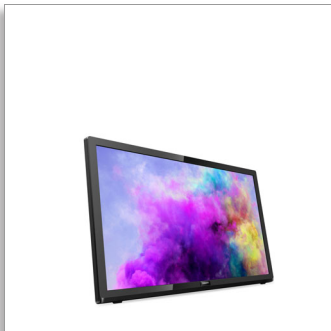

22PFS5303

Ultra-Slim Full HD LED TV

with Pixel Plus HD

Philips 5300 brings picture quality to the small screen. Thanks to its easy-to-use controls and compact design, it's the perfect companion for your kitchen, bedroom or study.

Television viewing at your convenience

- Two HDMI input ports and Easylink for integrated connectivity
- USB for multimedia playback

As flexible as you are

- Compact portable TV: designed to be where the fun is

A clear, vivid picture every time

- Full HD LED TV—brilliant LED images with incredible contrast
- Pixel Plus HD gives you beautiful images you'll love

PHILIPS

Specifications

Picture/Display

- Aspect ratio: 4:3/16:9
- Diagonal screen size (inch): 22 inch
- Diagonal screen size (metric): 55 cm
- Display: LED Full HD
- Panel resolution: 1920 x 1080p
- Picture enhancement: Pixel Plus HD
- Diagonal screen size (inch): 22 inch

Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: up to 1920 x 1080p

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- Video Playback: NTSC, PAL, SECAM
- MPEG Support: MPEG2, MPEG4

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC (H.265)
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2)
- Subtitles Formats Support: .SMI, .SRT, .SSA, .SUB, .TXT, .ASS
- Picture Playback Formats: JPEG, BMP, GIF, PNG

User Interaction

- Programme: Pause TV, USB Recording*
- Ease of Use: One-stop Home button
- Firmware upgradeable: Firmware upgradeable via USB
- Screen Format Adjustments: Autozoom, Superzoom, Movie expand 16:9, Unscaled, 4:3, 16:9
- Signal strength indication
- Teletext: 1000 page Hypertext
- Electronic Programme Guide*: 8 day Electronic Programme Guide

Sound

- Output power (RMS): 6 W
- Sound Enhancement: Incredible Surround, Clear Sound, Auto Volume Leveller, Bass Control, Smart Sound

Connectivity

- Number of HDMI connections: 2
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 1
- Other connections: Antenna IEC75, Satellite Connector, Common Interface Plus (CI+), Digital audio out (optical), Audio in (DVI), Headphone out, PC-In VGA

Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Ambient temperature: 5°C to 35°C
- Standby power consumption: 0.3 W
- Energy Label Class: A
- EU Energy Label power: 20 W
- Power Saving Features: Auto switch-off timer, Eco mode, Picture mute (for radio)
- Off mode power consumption: N/A
- Annual energy consumption: 30 kWh a
- Presence of lead: Yes*
- Mercury content: 0 mg

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Power cord, Quick start guide, Legal and safety brochure, Tabletop stand

Colour & Finish

- TV Front: Black High Gloss

Dimensions

- Set Width: 512.3 mm
- Set Height: 308 mm
- Set Depth: 54.1 mm
- Product weight: 2.6 kg
- Set width (with stand): 512.3 mm
- Set height (with stand): 311 mm
- Set depth (with stand): 118 mm
- Product weight (+stand): 2.7 kg
- Box width: 595 mm
- Box height: 425 mm
- Box depth: 112 mm
- Weight incl. Packaging: 3.5 kg

Highlights

Pixel Plus HD compatible: 75 x 75 mm Philips Pixel Plus HD engine optimises picture quality to deliver crisp images with beautiful contrast. So whether you're streaming online or watching from a disc, you'll enjoy sharper images with brighter whites and blacker blacks.

Full HD LED TV

Picture Quality matters. Regular HDTVs deliver quality, but you expect more. Imagine crisp detail paired with high brightness, incredible contrast and realistic colours for a true to life picture.

Two HDMI input ports with Easylink

Avoid cable clutter with a single HDMI cable to carry both picture and audio signals from your devices to your TV. HDMI uses uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you'll need only one remote control to perform most operations on your TV, DVD, Blu-ray, set top box or home theatre system.


USB (photos, music, video)



Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.



Connections

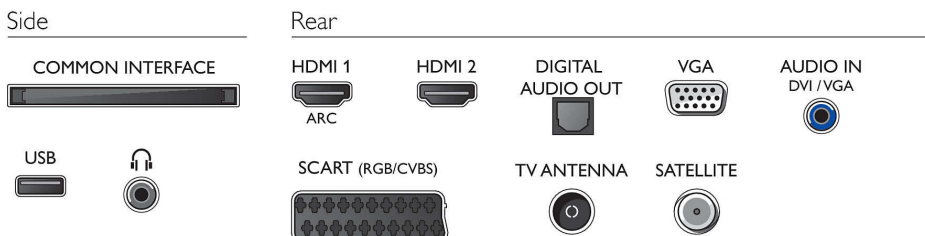

Issue date 2023-10-21

Version: 4.1.1

EAN: 87 18863 01467 7

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

* EPG and actual visibility (up to 8 days) is country- and operator-dependent.

* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* (Philips) only compatible with specific Philips player device.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.