

Register your product and get support at

www.philips.com/welcome



22AV8573/00 Setup Remote Controller

DFU-OCT2010

PB1

Table of contents

- 1. INTRODUCTION TO HOSPITALITY MODE SETUP**
- 2. REMOTE CONTROL**
 - 2.1 PBS Set-Up Remote control 22AV8573**
 - 2.2 Remote control mapping guest RC**

1. INTRODUCTION TO HOSPITALITY MODE SETUP


The Philips' Professional Hospitality Television offers settings that allow these televisions to be used in application environments that will offer additional setup features but (controlled) limited normal user setup functionality.

This mode limits the amount of TV controls (e.g. like volume limitation), that a normal user (i.e. hotel guest) can use. The amount of access can be configured in the setup menu by a super-user (e.g. hotel installer).

This manual describes the setup remote controller that can be used to bring up the specific hotel mode menu for setting those specific settings.

2. REMOTE CONTROL

2.1 PBS Set-Up Remote control 22AV8573

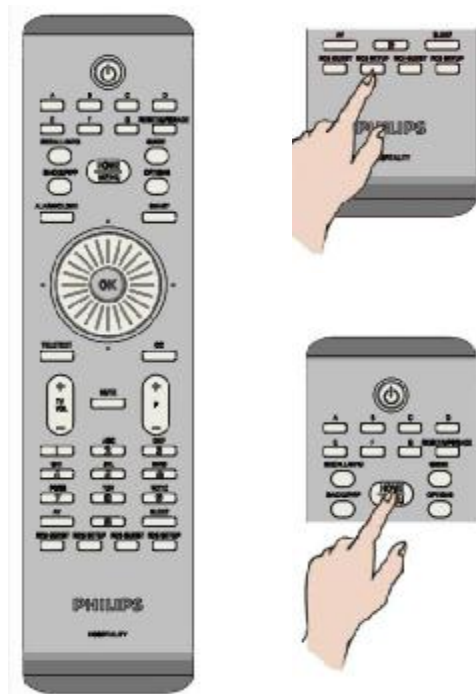

Other Remote Control behavior can be selected using the mode button.

Check the TV specifications if it supports RC5 and/or RC6 remote control commands.




RC5 GUEST:
Guest RC functionality with RC5 RC commands

RC6 GUEST:
Guest RC functionality with RC6 RC commands

RC5 SETUP:
Setup RC functionality. This is currently supporting all Philips Hospitality TVs.

RC6 SETUP:
Future feature. Not supported in TVs (yet).

 **Note:** Setup mode should be selected for hotel installer.

Step 1: Press RC5 SETUP

Step 2: Press HOME/MENU

2.2 Remote control mapping guest RC

22AV8573 Function	SETUP	GUEST	
	RC5	RC5	RC6
Standby	Standby	Standby	Standby
A*	--	--	--
B*	--	--	--
C*	--	--	--
D*	--	--	--
E*	--	--	--
F*	--	--	--
G*	--	--	--
Reset/Upgrade	Reset/Upgrade	--	--
Recall/Info	Recall/Info		Info
Guide	Guide		Guide
Home/Menu	Home/Menu		Guest Menu
Back/PP	Back/PP		Prev. channel
Options	Options		Options
Alarm/Clock	Alarm/Clock		Alarm
Smart	Smart		Smart
^	^	^	^
<	<	<	<
>	>	>	>
v	v	v	v
Teletext	Teletext	Teletext	Teletext
CC	CC	--	--
Vol +	Vol +	Vol +	Vol +
Vol -	Vol -	Vol -	Vol -
Mute	Mute	Mute	Mute
P +	P +	P +	P +
P -	P -	P -	P -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	AV	AV
Sleep	Sleep	Sleep	Sleep

* Exact functionality depends on TV model.