



Philips  
LCD TV with Digital  
Crystal Clear

**119 cm (47")**

Full HD 1080p



**47PFL3605**

## Enjoy a great TV night - guaranteed

with Full HD images & superb sound

Developed by the leading European TV brand, the Philips 3000 series LCD TV offers well recognized performance in picture and sound and can be used for many years to come.

### **A clear, vivid LCD picture everytime**

- Full HD TV with Digital Crystal Clear for depth and clarity
- Dynamic contrast 50000:1 for incredible rich black details
- 28.9 billion colors for brilliant natural images

### **Rich and clear sound.**

- Feel the atmosphere with 16W RMS and Incredible Surround

### **Complete connectivity made simple**

- Seamless connectivity with 2 HDMI inputs and Easylink
- Enjoy photo and music playback via USB
- PC-input allows you to use your TV as a PC monitor

# PHILIPS

sense and simplicity

# Highlights

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. The result is extremely clear pictures from any source.

## Dynamic contrast ratio 50000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## 28.9 billion colors



Vibrant and natural images from the most advanced color processing. The 3 color channels (RGB) are optimized for a total processing power of 28.9 billion colors. The advanced algorithms detect even the subtlest shades and skin tones, creating the best color possible.

## 2x8W RMS Incredible Surround

Feel the power of the music beat and the atmosphere of the movies. The powerful 2x8W RMS amplifiers create a lifelike sound stage. Incredible Surround allows you to experience total surround with greater depth and width of sound helping complement the rich viewing experience.


## 2 HDMI inputs with Easylink



HDMI is a single cable to carry both picture and audio signals from your devices to your

TV, avoiding cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

## USB for photo & music playback

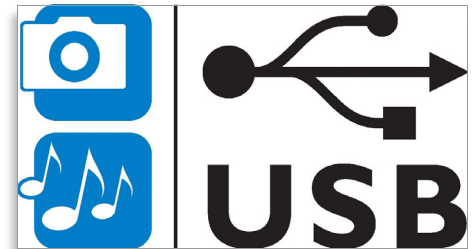

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your photos and music.

## PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.

# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 400 cd/m<sup>2</sup>
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 47 inch / 119 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Color Enhancement, Digital Crystal Clear, Digital Noise Reduction, Dynamic contrast enhancement, Sharpness Adjustment, 2D/3D noise reduction, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing
- Screen enhancement: Semi-glare

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 25, 30, 50, 60Hz

## Sound

- Output power (RMS): 2 x 8W
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Smart Sound, Treble and Bass Control
- Sound System: Mono, Nicam Stereo, Stereo

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake Up Timer
- Connection Enhancement: Easy link
- Ease of Installation: Autostore, Fine Tuning, PLL

## Digital Tuning, Plug & Play

- Ease of Use: Auto Volume Leveller (AVL), On Screen Display, Side Control, Smart Picture, Smart Sound, EasyLink
- On-Screen Display languages: Arabic, English, French, Simplified Chinese, Thai, Traditional Chinese, Vietnamese
- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Super Zoom, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Widescreen
- Teletext: 1000 page Smart Text
- Firmware upgradeable: Firmware upgradeable via USB

## Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K
- Video Playback: NTSC, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 99

## Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- Front / Side connections: S-video in, CVBS in, Audio L/R in, USB 2.0
- Other connections: Audio constant level out, PC Audio in, PC-In VGA
- EasyLink (HDMI-CEC): One touch play, System info (menu language), EasyLink, System audio control, System standby

## Power

- Ambient temperature: 5 °C to 35 °C
- Mains power: 220-240V; 50Hz
- Power consumption: 230 W
- Standby power consumption: 1W


## Dimensions

- Compatible wall mount: adjustable 400 x 300mm
- Set dimensions (W x H x D): 1139 x 731 x 85 mm
- Set dimensions with stand (W x H x D):

- 1139 x 796 x 292 mm
- Product weight: 19.5 kg
- Product weight (+stand): 22.3 kg
- Box dimensions (W x H x D): 1438 x 887 x 297 mm

## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Warranty Leaflet, Remote Control, 2 x AAA Batteries
- User Manual: Arabic, English, French, Simplified Chinese, Thai, Traditional Chinese, Vietnamese

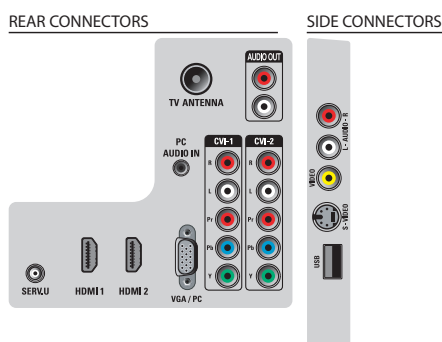

Issue date 2012-05-20

Version: 4.1.4

12 NC: 8670 000 59884  
EAN: 87 12581 52491 3

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

