



Philips
widescreen flat TV with
Pixel Plus HD

107cm (42")
LCD
integrated digital

42PFL7682D



Turn up your viewing experience

with Integrated Digital Tuner

With this TV you can now enjoy the benefits of digital TV, Electronic Program Guide and digital quality content. At the same time, you can also watch superb pictures with Pixel Plus HD clarity and details on a Full HD 1080p LCD panel

Vivid, natural and razor sharp images

- Full HD LCD display, 1920x1080p
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus HD for better details, depth and clarity
- 3D combfilter separates colors for a razor-sharp image

Exciting and lifelike sound

- Incredible Surround™ for enhanced audio enjoyment

Slim, stylish design to complement your interior

- Compact and slim design that fits in every room

Designed for your convenience

- 1000 page Hypertext for instant fast access to teletext

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

widescreen flat TV
107cm (42") LCD, integrated digital

42PFL7682D/12

Highlights

Full HD LCD display 1920x1080p

This display has a resolution that is referred to as Full HD. The state-of-the-art LCD screen technology has the full high-definition widescreen resolution of 1080 progressive lines, each with 1920 pixels. This allows the best possible picture quality for HD input signals with up to 1080 lines. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and

uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewers to watch content that is vivid, natural, and real. The result means superbly life-like pictures with incredible details and depth from any HD source.

3D Combfilter

The 3D comb filter separates brightness and color signals better in 3D domain to eliminate cross-color, cross-luminance and dot-crawl distortion - all of which detract from your viewing pleasure. The 3D digital comb filter performs field-by-field comparisons of the television image to accurately separate the color from the black-and-white information and remove both horizontally and vertically hanging dots, as well as dot crawl. The result is a razor sharp image.

Incredible Surround™

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting,

Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.

Pixel
Plus HD



DVB-T
TERRESTRIAL

HD
ready



HYPER
T E X T
1000 P

2x
HDMI

Specifications

Picture/Display

- Color cabinet: Black cabinet with glass deco front, Titanium speaker foil, Titanium RC, rounded glass black stand
- Aspect ratio: Widescreen, 16:9
- Brightness: 500 cd/m²
- Dynamic screen contrast: 4000:1
- Response time (typical): 8 ms
- Viewing angle (H / V): 178 / 178 degree
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus HD, Luminance Transient Improver, Color Transient Improvement, Dynamic contrast enhancement, Contrast Plus, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Digital Noise Reduction, Jagged Line Suppression, Progressive scan
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz

Sound

- Equalizer: 7-bands
- Output power (RMS): 2 x 10 W
- Sound Enhancement: Auto Volume Leveller,

- Incredible Surround, Dynamic Bass Enhancement
- Sound System: Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Easy toggle Dig/Analog modes, Program List, Side Control, Smart Picture, Smart Sound
- Electronic Program Guide: 8 day Electronic Program Guide
- Remote Control: TV
- Remote control type: RC2034301/01
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Picture in Picture: Text dual screen
- Teletext: 1000 page Hypertext
- Teletext enhancements: 4 favourite pages, Program information Line

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial *
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 100
- Tuner Display: PLL

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Ext 3: S-video in, CVBS in, Audio L/R in
- Ext 4: YPbPr, Audio L/R in
- Ext 5: HDMI

- Ext 6: HDMI
- Number of Scarts: 2
- Other connections: Headphone out, Common Interface

Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 220 - 240V, 50/60Hz
- Power consumption: 240 W
- Standby power consumption: < 1 W


Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control
- Optional accessories: Floor stand

Dimensions

- Set dimensions (W x H x D): 1046 x 686 x 118 mm
- Set dimensions with stand (W x H x D): 1046 x 749 x 265 mm
- Product weight: 26 kg
- Product weight (+stand): 32 kg
- Box dimensions (W x H x D): 1152 x 788 x 313 mm
- Weight incl. Packaging: 40 kg
- VESA wall mount compatible: 600 x 400 mm

Stereo system					Transmission system					
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK	SECAM LL'
•	•	•	•	•	•	•	•	•	•	•

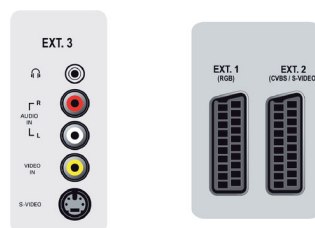

Issue date 2019-06-28

Version: 3.0.3

12 NC: 8670 000 32177
EAN: 87 12581 34986 8

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com