



Philips  
widescreen flat TV with  
Pixel Plus HD

**94 cm (37")**

LCD  
integrated digital

**37PFL5522D**



# Turn up your viewing experience

with Integrated Digital Tuner

With this TV you can now enjoy the benefits of digital TV, Electronic Program Guide and digital quality content. At the same time, you can also watch superb pictures with Pixel Plus HD clarity and details.

#### **Vivid, natural and razor sharp images**

- HD LCD WXGA display, with a 1366 x 768p resolution
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus HD for better details, depth and clarity
- 3D combfilter separates colors for a razor-sharp image

#### **Exciting and lifelike sound**

- Incredible Surround™ for enhanced audio enjoyment

#### **Slim, stylish design to complement your interior**

- Compact and slim design that fits in every room

#### **Designed for your convenience**

- 1000 page Hypertext for instant fast access to teletext

#### **For advanced performance**

- 2 HDMI inputs for full digital HD connection in one cable

# PHILIPS

widescreen flat TV  
94 cm (37") LCD, integrated digital

37PFL5522D/12

# Highlights

## LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

## HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

## Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewers to watch content that is vivid, natural, and real. The result means superbly life-like pictures with incredible details and depth from any HD source.

## 3D Combfilter

The 3D comb filter separates brightness and color signals better in 3D domain to eliminate cross-color, cross-luminance and dot-crawl distortion - all of which detract from your viewing pleasure. The 3D digital comb filter performs field-by-field comparisons of the television image to accurately separate the color from the black-and-white information and remove both horizontally and vertically hanging dots, as well as dot crawl. The result is a razor sharp image.

## Incredible Surround™

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers.

This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

## 2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.

Pixel  
Plus HD

DVB-T  
TERRESTRIAL

HD  
ready

3D  
COMBIFILTER

active  
control

HYPER  
TEXT  
1000P

2x  
HDMI

# Specifications

## Picture/Display

- Color cabinet: Full Black cabinet with High Gloss deco front
- Aspect ratio: Widescreen, 16:9
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 7500:1
- Response time (typical): 6 ms
- Viewing angle (H / V): 178 / 178 degree
- Diagonal screen size: 37 inch / 94 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus HD, Luminance Transient Improver, Color Transient Improvement, Dynamic contrast enhancement, Contrast Plus, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Digital Noise Reduction, Jagged Line Suppression, Progressive scan
- Screen enhancement: Anti-Reflection coated screen

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz

## Sound

- Equalizer: 7-bands
- Output power (RMS): 2 x 10 W
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Dynamic Bass Enhancement
- Sound System: Nicam Stereo, Stereo

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Easy toggle Dig/Analog modes, Program List, Side Control, Smart Picture, Smart Sound
- Electronic Program Guide: 8 day Electronic Program Guide
- Remote Control: TV
- Remote control type: RC2034301/01
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Picture in Picture: Text dual screen
- Teletext: 1000 page Hypertext
- Teletext enhancements: 4 favourite pages, Program information Line
- VESA Mount: 600 x 400 mm

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial \*
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 100
- Tuner Display: PLL

## Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Ext 3: S-video in, CVBS in, Audio L/R in
- Ext 4: YPbPr, Audio L/R in
- Ext 5: HDMI
- Ext 6: HDMI

- Number of Scarts: 2
- Other connections: Headphone out, Common Interface

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 220 - 240V, 50/60Hz
- Power consumption: 175 W
- Standby power consumption: < 1 W


## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control
- Optional accessories: Floor stand

## Dimensions

- Set dimensions (W x H x D): 935 x 626 x 116 mm
- Set dimensions with stand (W x H x D): 935 x 688 x 265 mm
- Product weight: 24 kg
- Product weight (+stand): 26 kg
- Box dimensions (W x H x D): 1000 x 701 x 289 mm
- Weight incl. Packaging: 33 kg

Stereo system					Transmission system					
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL'	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK	SECAM LL'
•	•	•	•	•	•	•	•	•	•	•

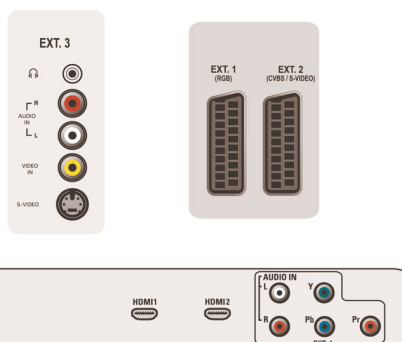

Issue date 2020-05-07

Version: 7.0.10

12 NC: 8670 000 26866  
EAN: 87 12581 31491 0

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)