



Philips 5000 series
LCD TV with Pixel Plus
HD

42"
Full HD 1080p

42PFL5609S



Brilliant design, powerful performance

With superb picture and sound.

Experience brilliant performance with a Full HD 1080p display. Combined with a powerful Pixel Plus HD Engine and fantastic invisible sound, this Flat TV will never let you down.

Vivid and razor sharp pictures

- Pixel Plus HD for better details, depth and clarity
- Full HD LCD display, with a 1920x1080p resolution
- Dynamic contrast 50000:1 for incredible rich black details
- Active Control with Light Sensor optimizes picture quality
- Native cinema mode for real movie experience

Pure and lifelike sound

- 2.1 channel surround with subwoofer for deep bass
- 20W for superior sound clarity
- Dynamic Bass Enhancement for cinematic sound
- Invisible speakers with incredible surround

Easy to connect and enjoy

- USB for fantastic multimedia playback
- 3 HDMI inputs with Easylink for a full HD connection
- Smart Picture and Smart Sound to personalize your viewing

PHILIPS

Highlights

Pixel Plus HD

Pixel Plus HD is a picture processing technology that enables viewers to watch content that is vivid, natural and real. The result are superbly life-like pictures with incredible details and depth from any HD source.

Full HD LCD display 1920x1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

2.1 channel surround

This 2.1 channel surround with integrated subwoofer is a complete sound system that

utilises Philips incredible surround sound processing technology. It amplifies the bass frequencies from the subwoofer and at the same time optimizing mid and low frequencies. The result is a system that powerfully reproduces the full range of audio frequencies from deep bass to crystal clear high notes.

USB (multimedia)

The USB connector allows access to jpeg photos, mp3 music and video files of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your videos, photos and music.

3 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from

the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

Smart Picture and Smart Sound

Philips preset modes for Smart Picture and Smart Sound provide you with direct access via a single key on the remote control. You can select optimized picture and sound settings for the various picture and sound modes.

Invisible speakers

An invisible sound system that blends perfectly with the design of the cabinet. The Incredible Surround allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.

Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m²
- Dynamic screen contrast: 50 000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Color Enhancement, Dynamic contrast enhancement, Jagged Line Suppression, Sharpness Adjustment, Dynamic Noise Reduction, 2D/3D noise reduction, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing
- Screen enhancement: Semi-glare

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz

Via HDMI/DVI input

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 25, 30, 50, 60Hz

Sound

- Output power (RMS): 20W
- Sound Enhancement: Auto Volume Leveller, Dynamic Bass Enhancement, Incredible Surround, Subwoofer, Treble and Bass Control
- Sound System: Mono, Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer, Wake up Clock, Wake Up Timer
- Connection Enhancement: EasyLink
- Ease of Installation: Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, On Screen Display, Side Control, Smart Picture, Smart Sound, EasyLink
- On-Screen Display languages: Arabic, English, French, Thai, Traditional Chinese
- Picture in Picture: Picture in graphics
- Remote Control: TV
- Remote control type: PF02A09B
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Smart Text
- Teletext enhancements: 4 favourite pages
- Signal strength indication
- Firmware upgradeable: Firmware upgradeable via USB
- Multimedia: USB media browser

Multimedia Applications

- Playback Formats: MP3, JPEG Still pictures, MPEG1, MPEG4, RealMedia Video
- Playback enhancement: Picture slideshow

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL B/G, PAL D/K
- Video Playback: NTSC, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 99

Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: Audio L/R in, CVBS in
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone out, USB
- Other connections: Monitor out, CVBS, L/R (cinch), PC-in VGA + Audio L/R in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, EasyLink, Remote control pass-through, System audio

control, System standby

Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 110-240V; 50-60Hz
- Power consumption: 198 W
- Standby power consumption: (typical) <0.15W


Dimensions

- Set dimensions (W x H x D): 1033 x 664 x 83 mm
- Set dimensions with stand (W x H x D): 1033 x 694 x 271 mm
- Weight incl. Packaging: 26.5 kg
- Product weight: 16.5 kg
- Product weight (+stand): 19.5 kg
- Box dimensions (W x H x D): 1285 x 767 x 271 mm
- VESA wall mount compatible: 400 x 400 mm

Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Remote Control, 2 x AAA Batteries
- User Manual: Arabic, English, French, Malay, Thai, Traditional Chinese

Rear connectors

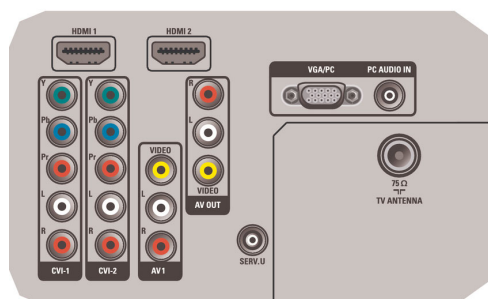

Side



Issue date 2019-06-28

Version: 5.4.4

12 NC: 8670 000 51785
EAN: 87 12581 47816 2

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com