


PHILIPS

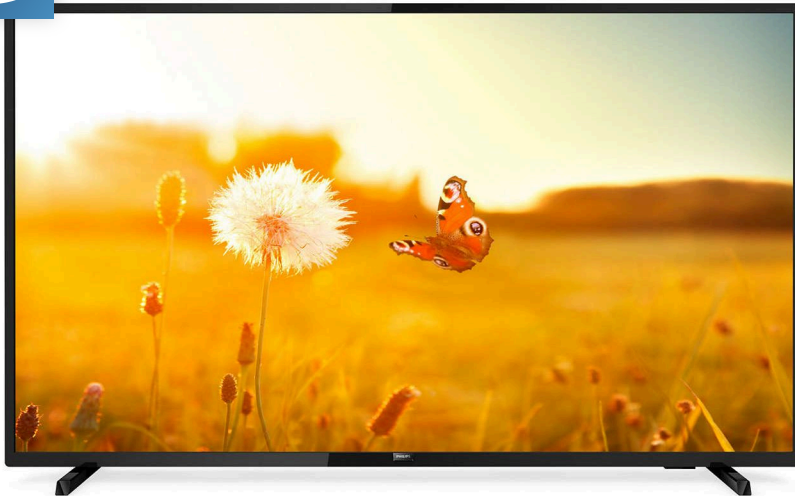

Professional TV

EasySuite

Full HD 1080p



43HFL3014

Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

Cost-effective solution

- 3 years warranty, extendable to 5 years
- Multilingual customer support

Simple set up. **ADVANCED performance**

- Instant initial USB cloning. Rapidly configure Pro TVs
- MyChoice compatible. Built-in pay-to-view solution
- Mixed channel map to combine analogue and digital channels
- CMND and Control: effortless maintenance of your TVs
- Be seen. Brand the TV's UI with your logo

Highlights

CMND&Control

CMND and Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

Built-in pay-to-view solution

Offer pay-to-view content in any situation-from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

UI branding

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI), which you can customize with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

Instant initial USB cloning.

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

Mixed channel map

One integrated channel list for digital and analogue channels. This allows the guest to flick seamlessly between Analogue and Digital channels.

Specifications

Picture/Display

Diagonal screen size (inch): 43 inch
Diagonal screen size (metric): 108 cm
Display: LED Full HD, D-LED
Panel resolution: 1920x1080p
Brightness: 250 cd/m²
Viewing angle: 178° (H) / 178° (V)

Tuner/Reception/Transmission

Digital TV: DVB-T/T2/C, HEVC FHD (up to 1080p60)
Video Playback: NTSC, PAL, SECAM
Analog TV: PAL, SECAM

Features

Ease of use: Picture Style, Sound Style, Picture Format, Independent volume control
Digital services: 8d EPG, Now&Next, MHEG, Teletext, Subtitles
Local control: Joystick

Hospitality Features

Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
Prison mode: high security mode,

TXT/MHEG/USB/EPG/Subtitle Lock
Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds
Switch On control: Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language
Anti-Theft: Battery Anti-theft Protection, Kensington Lock
Power control: Green/fast startup
Your brand: Welcome Logo, Customizable Home Screen
Clock: Glow-in-the-Dark RC button, On-screen Clock
Cloning and Firmware update: Instant Initial Cloning, Via USB/RF
CMND&Control: Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor
Control: Block Automatic Channel Update
Revenue generation: MyChoice
Languages: Guest language control
Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock, Glow-in-the-

Dark Clock button
Channels: Combined List, Off-Line Channel Editor

Healthcare features

Control: Multi-Remote Control, Healthcare RC compatible
Convenience: Headphone out, Independent main speaker mute, Headphone Detection
Safety: Double isolation class II, Flame retardant

Multimedia

Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV
Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2)
Subtitle formats supported: SRT, SMI, SSA SUB, TXT, ASS
Picture formats supported: BMP, JPG, PNG, GIF
Supp. Video Resolution on USB: up to 1920x1080p@60Hz
Multimedia connections: USB

Specifications

Audio

Sound output Power: 16 (2x8) W

Speakers: 2.0, Down Firing

Sound Features: AVL, Dynamic Bass, Incredible surround, Dolby MS10

Power

Mains power: AC 220-240V; 50-60Hz

Ambient temperature: 0 °C to 40 °C

Standby power consumption: $\leq 0.3\text{W}$

Energy Label Class: D

Eu Energy Label power: 34 W

Power Saving Features: Eco mode, Auto switch-off timer

EPREL registration number: 345117

Accessories

Included: Edge Stand, 2x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12

Optional: Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

Connectivity Side

Common Interface Slot: CI+ 1.3.2

Headphone out: Mini-Jack

USB1: USB 2.0

Connectivity Rear

Scart: CVBS, RGB

DVI audio in: Mini-Jack

Antenna: IEC-75

HDMI1: ARC, HDMI 1.4

Digital Audio out: Optical

VGA input: 15 pin D-sub

HDMI2: HDMI 1.4

Connectivity Enhancements

EasyLink (HDMI CEC): One touch play, System

Standby, RC pass through, system audio control

HDMI: ARC (HDMI1)

Scart: Power on scart

Design

Colour: Black

Dimensions

Set Width: 970 mm

Set Height: 563 mm

Set Depth: 78/84 mm

Product weight: 7.2 kg

Set width (with stand): 970 mm

Set height (with stand): 581 mm

Set depth (with stand): 212 mm

Product weight (+stand): 7.3 kg

Wall mount compatible: 200 x 200 mm, M6

