

Philips 6000 series
LED TV

140 cm (55")
Full HD 1080p

55PFL6556



Experience powerful performance

with Full HD images and superb sound

Treat yourself to an immersive experience with the latest LED TV from Philips. Powerful picture performance from Pixel Precise HD, incredible surround sound through flat woofers and a slim frame ensures you are always part of the action.

See brilliant picture quality

- 480Hz Perfect Motion Rate (PMR) for superb motion sharpness
- Dynamic contrast 8000.000:1 for incredible rich black detail
- Full HD LCD display for better depth and clarity
- HD Natural Motion for ultra-smooth motion in Full HD movies
- Pixel Plus HD for better details, depth and clarity
- "LED technology ensures natural color and thin design"

Hear crisp and clear sound

- Hear every word with Clear Sound
- Incredible Surround for enhanced audio enjoyment
- Feel the power of 16W RMS+10W Subwoofer

Easy to connect and enjoy

- 3 HDMI inputs with Easylink for a full HD connection
- Fantastic photo and music playback via USBThe USB connector

PHILIPS

LED TV
140 cm (55") Full HD 1080p

Highlights

LED



LED

"LED lighting technology is the most advanced available. In this TV it combines an eye-catching minimalistic design with stunning image quality, as well as being the lowest power consumption in its category. Another environmental benefit is that LED lighting technology does not contain hazardous materials. With an LED backlight you can enjoy low power consumption, high brightness, incredible contrast and sharpness and vibrant colors.."

Full HD LCD display, 1920 x 10



"The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.. "

480Hz, 2ms



480 Hz

Perfect Motion Rate

480Hz Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images with fast on-screen motion. The new Philips PMR standard shows the combined visible effect of the fastest panel refresh rate, backlight, HD Natural Motion and unique image processing, for unprecedented motion sharpness. Experience motion clarity like never before !!!

Pixel Plus HD

Pixel Plus HD

Pixel Plus HD offers the unique combination of ultimate sharpness, natural detail, vivid colours and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Artefacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clear and razor sharp

HD Natural Motion



"Philips invented HD Natural Motion to minimise juddering effects that are visible with

55PFL6556/V7

movie-based picture content. The award winning algorithm estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level.."


Dynamic contrast 8000000:1



Dynamic Contrast 8000000:1

"You want the LED flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight-boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.."

Clear Sound

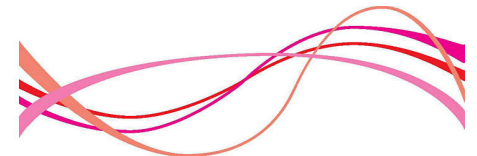

Clear Sound

Critical moments in a movie or your favourite show are too often missed. Clear Sound is an innovative audio technology that significantly increases the intelligibility of vocalisations, whether spoken or sang. It ensures you hear every word, so you can enjoy what you're watching to the fullest



Specifications

Picture/Display

- Diagonal screen size (inch): 55 inch
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction
- Dynamic screen contrast: 8000000:1
- Response time (typical): 2 ms

Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 1280 x 1024, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, 800 x 600, 56, 60Hz, Via HDMI/DVI input,
- Video formats: 1080i, 50, 60Hz, 1080p, 50Hz, 1080p, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

Convenience

- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- On-Screen Display languages: English

Sound

- Output power (RMS): 26W

- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler, Subwoofer, Incredible Surround

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: Integrated subwoofer

Connectivity

- USB: USB
- HDMI 1: HDMI
- HDMI 2: HDMI
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input, PC-in VGA + Audio L/R in
- HDMI 3: HDMI

Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 130 W
- Standby power consumption: Less than .5 Watt

Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Software declaration, Tabletop swivel stand, User Manual, Warranty certificate



Issue date 2023-10-23

Version: 1.0.2

EAN: 87 12581 61951 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com