

Philips 3000 series
LED TV

70 cm (28")
HD Ready

28PFL3030



Bring entertainment to life

with superb picture quality, sound & design

A perfect combination of clear picture and sound that makes this TV a best choice for your home entertainment

See brilliant picture quality

- 120Hz Perfect Motion Rate (PMR) for superb motion sharpness
- HD LCD Display 1366x768p
- Pixel Plus HD for better details, depth and clarity

Hear crisp and clear sound

- Feel 2x5w RMS with Incredible Surround & Clear Sound

Easy to connect and enjoy

- Seamless connectivity with 1 HDMI input
- Fantastic video, photo and music playback via USB

PHILIPS

LED TV
70 cm (28") HD Ready

28PFL3030/V7

Highlights

HD LCD Display 1366x768p

HD ready

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience..

Pixel Plus HD

Pixel Plus HD

Pixel Plus HD offers the unique combination of ultimate sharpness, natural detail, vivid colours and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Artefacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clear and razor sharp

120Hz Perfect Motion Rate



Combining the refresh rate of the panel and unique image processing, Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images even with the fastest on-screen motion.

Rich & clear sound experience




"Feel the power of the music beat and the atmosphere of the movies. The powerful 10W RMS (2 x 5W RMS) amplifiers create a lifelike soundstage. The Incredible Surround Sound allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

1 HDMI input

HDMI

"HDMI is a single cable to carry both picture and audio signals from your devices to your TV, saving you from cable clutter. It carries uncompressed signals, ensuring that you have the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, Blu-ray, set top box or home theatre system. Enjoy high quality picture and sound without clutter or fuss.."

USB with Video Playback

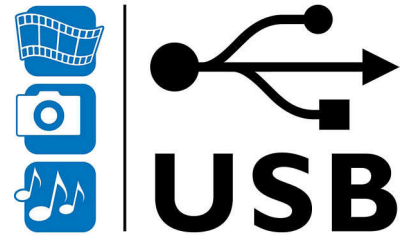

The USB connector allows access to jpeg photos, mp3 music and video files through USB drives. Plug the USB into the slot at the side of the TV and access multimedia content using the easy on screen content browser. Now view your videos, photos and music effortlessly in your TV!

HD
ready



Specifications

Picture/Display

- Diagonal screen size (inch): 28 inch
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction

Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, Via HDMI/DVI input, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1920 x 1080, 60Hz, 720 x 480, 60Hz, 800 x 600, 56, 60, 72, 75Hz
- Video formats: 1080i, 50, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- TV system: PAL B/G
- Video Playback: NTSC, PAL, SECAM

Multimedia Applications

- Playback Formats: AVI, JPEG Still pictures, MPEG1, MPEG2, MPEG4, WMA v2 up to v9.2, H.264/MPEG-4 AVC, PNG still pictures
- Music Playback Formats: MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

Convenience

- Child Protection: Child Lock
- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- Screen Format Adjustments: 16:9
- On-Screen Display languages: English

USB - File Extension

- Video: *.avi, *.mkv, *.mov, *.mp4, *.mpg, *.mpeg, *.wmv

USB - Container

- Video: ASF, AVI, MKV, MP4, PS

USB - Video Decoder

- Compression Format: H.264, MPEG 1, MPEG 2, MPEG 4, VC-1

Sound

- Output power (RMS): 10W
- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler

Loudspeakers

- Built-in speakers: 2

Connectivity

- AV 1: Audio L/R in, YPbPr, CVBS in, VGA-in (5x cinch RGB+H/V)
- USB: USB
- HDMI 1: HDMI
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input, PC-In VGA
- AV output: Composite (CVBS) x1

Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 50 W
- Standby power consumption: Less than 1 watt

Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Warranty certificate, Power cord, Safety/legal instructions, Table top stand, Wall mounting bracket
- User Manual: English

Dimensions

- Set Width: 646 mm
- Set Height: 396 mm
- Set Depth: 83 mm
- Product weight: 4 kg
- Set width (with stand): 646 mm
- Set height (with stand): 452 mm
- Set depth (with stand): 172 mm
- Product weight (+stand): 4.2 kg

