

Philips NeoPix Start+  
Mini projector

**LED LCD**

Up to 60"  
Integrated battery  
Built in speaker



**NPX245**

# Don't be afraid of the dark

with the ultra accessible projector

Get a super easy experience and project pictures up to 60", enjoy a comfortable image and all the connectivity you need for streaming your favorite contents with this mini projector that includes an integrated battery.

#### **Play, connect, repeat**

- Built-in Media Player for unlimited binge watching
- Fully Connected (HDMI, USB or MicroSD)
- Make It smart!

#### **Radiant pictures**

- Project images up to 60"
- Focus adjustment for clear images
- Advanced LED Light Source

#### **Portable**

- Entertainment on the go
- Built-in battery for cable-free projection

#### **Sound everywhere**

- Built-in speaker for captivating sound
- Audio jack

**PHILIPS**

Mini projector  
LED LCD Up to 60", Integrated battery, Built in speaker

NPX245/INT

# Highlights

## Advanced LED Light Source



The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## Focus adjustment



Place your projector at any distance and adjust the focus to fine-tune images to your needs.

## Project images up to 60"



Project images and videos up to 60" (150cm) from less than 2 meters from the wall.

## Built-in Media Player



Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

## Fully Connected



Connect any multimedia devices such as set top boxes, gaming consoles, and streaming devices like Fire Stick or Apple TV with the USB, HDMI or MicroSD ports.

## Make It smart!



Access to unlimited content by connecting to any smart gaming console or TV boxes like Fire Stick or Apple TV.

## Built-in battery




Get entertainment on the go with the built-in battery providing up to 60mins of power so you can watch movies and share videos without the hassle of wires or cables.

## Entertainment on the go



Brint it from room to room or to your friends.

## Audio jack

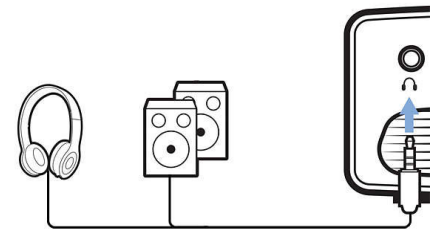

Connect any headphones or external powered speakers with the built-in 3.5 jack.

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Contrast ratio: 800:1
- Resolution: 240 x 320 pixel
- Throw ratio: 1,4:1
- Aspect ratio: 4:3
- Focus adjustment: Manual
- Integrated media player
- LED lifetime: Up to 20.000h
- Projection image size: up to 60" (150cm)
- Projection distance: 80 cm - 200 cm / 24"- 60"
- Resolution supported: 1920 x 1080 pixel

## Connection

- HDMI: x1
- USB: x1
- micro-USB: for battery charging

- Micro SD: x1
- Audio out: 3.5 mm jack
- AV in: 3,5mm jack
- DC-IN: DC jack

## Sound

- Internal speaker: 1W

## Dimensions

- Weight: 0.66lbs / 0.3 kg
- unpacked (WxDxH): 129x81.5x55mm / 5.09x3.2x2.16 inch

## Power source

- Power consumption: Operation: 24W, Stand by <0,5W
- DC-in: 12V, 2A (AC 100-240V)



Issue date 2023-10-27

Version: 5.5.2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Projectors for direct connection to and for use with an automatic data processing machine such as a smartphone, laptop, PC, Blue-ray Player etc.