

Philips 3000 series  
LED TV

98 cm (39")  
Full HD 1080p

39PFL3559



## Experience power performance

with superb picture, sound & connectivity

Enjoy a great night in brilliant LED quality on the Philips 3500 series. Powered by superior connectivity & sound, now you can enjoy great content in clear, vivid details.

### "See brilliant picture quality"

- Pixel Precise HD for razor sharp images
- MHL technology for enjoying mobile content on big screen

### See brilliant picture quality

- 240Hz Perfect Motion Rate (PMR) for superb motion sharpness
- Full HD LCD display for better depth and clarity

### Hear crisp and clear sound

- Feel the power of 20 W(2x 10W) RMS

### Easy to connect and enjoy

- Seamless connectivity with 3 HDMI inputs
- Fantastic video, photo and music playback via USB

# PHILIPS

LED TV  
98 cm (39") Full HD 1080p

# Highlights

## Full HD LCD display, 1920 x 10



"The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.. "

## Pixel Precise HD

# Pixel Precise HD

Pixel Precise HD builds on the Pixel Plus foundation. It brings the high definition picture quality to the next level . With Super Resolution, Pixel Precise HD now brings you the best HD TV picture quality whether you are watching a video or good quality Blu-ray movies.

## 240Hz PMR



240Hz Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images in fast action movies. The new Philips PMR standard shows the combined visible effect of the fastest panel refresh rate, HD Natural Motion and unique processing formula, for unprecedented motion sharpness.

## MHL



Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to high-definition displays/ TVs. An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL LED TV, and watch your HD videos come to life with full digital sound. Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.

39PFL3559/V7

## 3 HDMI inputs




"HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder."

## Rich & clear sound experience



"Feel the power of the music beat and the atmosphere of the movies. The powerful 20 W RMS (2 x 10 W RMS) amplifiers create a lifelike soundstage. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

## USB with Video Playback

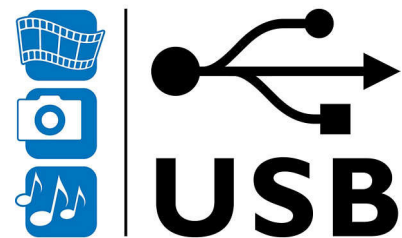

The USB connector allows access to jpeg photos, mp3 music and video files through USB drives. Plug the USB into the slot at the side of the TV and access multimedia content using the easy on screen content browser. Now view your videos, photos and music effortlessly in your TV!



# Specifications

## Picture/Display

- Diagonal screen size (inch): 39 inch
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction

## Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, Via HDMI/DVI input, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1920 x 1080, 60Hz, 720 x 480, 60Hz, 800 x 600, 56, 60, 72, 75Hz
- Video formats: 1080i, 50, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

## Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- TV system: PAL B/G
- Video Playback: NTSC, PAL, SECAM

## Multimedia Applications

- Playback Formats: AVI, JPEG Still pictures, MPEG1, MPEG2, MPEG4, WMA v2 up to v9.2, H.264/MPEG-4 AVC, PNG still pictures
- Music Playback Formats: MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

## Convenience

- Child Protection: Child Lock
- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- Screen Format Adjustments: 16:9
- On-Screen Display languages: English

## USB - File Extension

- Video: \*.avi, \*.mkv, \*.mov, \*.mp4, \*.mpeg, \*.mpg, \*.wmv

## USB - Container

- Video: ASF, AVI, MKV, MP4, PS

## USB - Video Decoder

- Compression Format: H.264, MPEG 1, MPEG 2, MPEG 4, VC-1

## Sound

- Output power (RMS): 20W
- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- AV 1: Audio L/R in, CVBS in, VGA-in (5x cinch RGB+H/V), YPbPr
- USB: USB
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input, PC-In VGA
- HDMI 3: HDMI
- AV output: Composite (CVBS) x1

## Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 90 W
- Standby power consumption: Less than 5 watt

## Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Warranty certificate, Power cord, Safety/legal instructions, Table top stand, Wall mounting bracket
- User Manual: English

## Dimensions

- Set Width: 900 mm
- Set Height: 540 mm
- Set Depth: 83 mm
- Product weight: 7.7 kg
- Set width (with stand): 900 mm
- Set height (with stand): 599 mm
- Set depth (with stand): 172 mm
- Product weight (+stand): 8.1 kg

