

Philips 3000 series  
LED TV

81 cm (32")  
HD Ready

32PFL3057



## Great performance, great design

with great picture and sound

Regardless of what you are watching - experience clear LED picture and sound performance with your Philips TV. A functional design makes this LED TV the perfect choice for any room of your house.

### **Save a little everyday**

- "LED TVs up to 40% more energy efficient than normal LCD TVs

### **See brilliant picture quality**

- Digital Crystal Clear for detail depth and clarity
- HD LCD Display 1366x768p

### **Hear crisp and clear sound**

- Hear every word with Clear Sound
- Feel the power of 20 W(2x 10W) RMS

### **Easy to connect and enjoy**

- Seamless connectivity with 3 HDMI inputs
- Enjoy video, photo & music playback via USB

# PHILIPS

LED TV  
81 cm (32") HD Ready

32PFL3057/V7

## Highlights

### Digital Crystal Clear




"Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images. The result is extremely clear pictures from any source.."

### HD LCD Display 1366x768p



This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience..

### Clear Sound

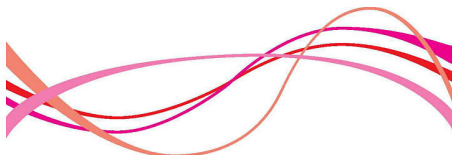

## Clear Sound

Critical moments in a movie or your favourite show are too often missed. Clear Sound is an

innovative audio technology that significantly increases the intelligibility of vocalisations, whether spoken or sang. It ensures you hear every word, so you can enjoy what you're watching to the fullest

### Rich & clear sound experience



"Feel the power of the music beat and the atmosphere of the movies. The powerful 20 W RMS (2 x 10 W RMS) amplifiers create a lifelike soundstage. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

### USB with video playback



The USB connector allows access to jpeg photos & music files of most USB-sticks (USB memory-class device).

### 3 HDMI inputs



"HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder."

### Eco mode



"Up to 40% more energy efficient than conventional flat TVs. Using the latest LED backlight technology, LED-backlit TVs are considered a more sustainable choice, with a longer life and far lower energy consumption than plasmas and conventional LCD TVs. Unlike CCFL backlights, LEDs do not use mercury in their manufacture. In addition, Philips TV designs have improved generation after generation resulting in an increase in material efficiency and a reduction in energy usage without compromising on safety and wellbeing. That's good news for you today - your children tomorrow..."

DIGITAL  
CRYSTAL CLEAR



# Specifications

## Picture/Display

- Diagonal screen size (inch): 32 inch
- Panel resolution: 1366 x 768p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Crystal Clear, Digital Noise Reduction
- Response time (typical): 6.5 ms

## Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 1280 x 1024, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, 800 x 600, 56, 60Hz, Via HDMI/DVI input,
- Video formats: 1080i, 50, 60Hz, 1080p, 50Hz, 1080p, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

## Convenience

- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- On-Screen Display languages: English

## USB - File Extension

- Video: \*.avi, \*.mkv, \*.mov, \*.mp4, \*.mpg

## USB - Container

- Video: ASF, AVI, MKV, MP4, PS

## USB - Video Decoder

- Compression Format: H.264, MPEG 1, MPEG 2, MPEG 4, VC-1

## Sound

- Output power (RMS): 20W

- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- USB: USB
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input, PC-in VGA + Audio L/R in
- HDMI 3: HDMI

## Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 100 W
- Standby power consumption: Less than 1 Watt

## Accessories

- Included accessories: Quick start guide, Remote Control, User Manual, Warranty certificate

## Dimensions

- Set Width: 784 mm
- Set Height: 526 mm
- Set Depth: 49 mm
- Product weight: 11 kg
- Set width (with stand): 784 mm
- Set height (with stand): 478 mm
- Set depth (with stand): 240 mm
- Product weight (+stand): 13 kg
- Stand width: 400 mm
- Stand depth: 240 mm



Issue date 2023-10-23

Version: 2.0.1

EAN: 87 12581 64531 1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)