




Philips PerfectCare Elite
Steam generator iron

Max 7.2 bar pressure

Up to 490g steam boost
1.8 L water tank capacity
Detachable water tank

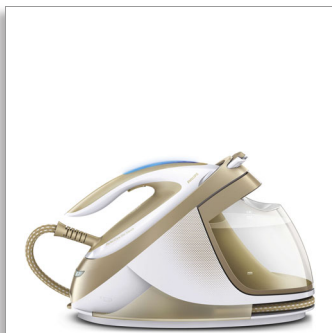

GC9642/60

Most powerful steam for the fastest ironing* with Ultra-light iron

PerfectCare Elite is the best and most efficient steam generator iron from Philips. With OptimalTEMP technology, you can now iron from jeans to silk with no temperature setting needed. Guaranteed no burns on all ironable garments.

No temperature setting needed, guaranteed no burn

- Safe to leave the hot soleplate on the ironing board
- Iron jeans to silk, no need to change temperature setting

Fast ironing with continuous powerful steam

- Easy and efficient descaling system
- Powerful steam for ultimate crease removal
- Save energy with ECO mode
- Philips best gliding and most scratch resistant soleplate

Ultimate ironing experience

- Automatic switch off for safety and energy saving
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Light weight and comfortable to handle

PHILIPS

Steam generator iron
Max 7.2 bar pressure Up to 490g steam boost, 1.8 L water tank capacity, Detachable water tank

GC9642/60

Highlights

Ultra powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even rough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

1.8L detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8L capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top-up the tank.

Energy saving



ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

Safe carry lock



Your steam generator iron includes a safe carry lock which securely fastens your iron to its base without the risk of slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.


Safety auto off



The safety auto off function automatically switches off your steam generator iron if it has

not been used for a few minutes. This saves energy and gives you safety peace of mind.

Safe rest

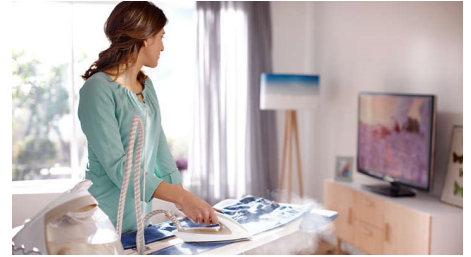

Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

T-ionicGlide soleplate



The T-ionic Glide is Philips' most premium soleplate, promising superior gliding for more effortless and fast ironing. It has a stainless steel base which is harder and more durable than aluminum, with an integrated titanium oxide layer for advanced scratch resistance. Plus the carefully designed shape and vents provide an even better steam distribution for faster crease removal.

Specifications

Storage

- Carry lock: For transportation and safety
- Cord storage: Cord storage compartment, Velcro fix
- Hose storage: Hose storage compartment

Easy to use

- Safe on all ironable fabrics: Even delicates like silk
- Water tank capacity: 1800 ml
- Heat up time: 2 minute(s)
- Soleplate gliding performance: 5 stars
- Soleplate name: T-ionicGlide
- Safety auto off
- Detachable water tank
- Low water alert
- Refill any time during use
- Tap water suitable
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Precision steam tip
- Ready to use: Light indicator, Sound indicator
- Soleplate scratch resistance: 5 stars
- Extra large filling hole

Guarantee

- 2 year worldwide guarantee

Technology

- OptimalTEMP technology
- Cyclonic steam chamber
- For all ironable fabrics

- No burns
- No temperature settings needed
- Smart Control Processor

Fast crease removal

- Pressure: Max 7.2 bar
- Power: Max 2400 W
- Steam boost: Up to 490 g
- Continuous steam: Up to 145 g/min
- Voltage: 220 - 240 V
- Vertical steam
- Ready to use: 2 minute(s)
- Variable steam levels
- Steam-on-demand

Green efficiency

- Energy saving mode
- Product packaging: 100% recycable
- User manual: 100% recycled paper

Scale management

- Descaling and cleaning: Easy De-calc Plus
- Descaling reminder: Light, Yes

Size and weight

- Packaging dimensions (WxHxL): 31 x 35 x 51 cm
- Weight of iron: 0.8 kg
- Product dimensions (WxHxL): 23.3 x 28.5 x 45.3 cm
- Weight of iron + base: 5.1 kg



Issue date 2023-10-18

Version: 1.1.2

EAN: 87 10103 74575 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Iron weight & steam rate (norm IEC60311), vs. the 10 best selling steam generators; tested Dec. 2014