



Philips NeoPix 520  
Home projector

100" in True FULL HD 1080p

Android TV experience  
Powerful 2.1 Sound System  
Super Silent

NPX520

## Pay Less, Watch More.

NeoPix 520 displays great 100" 1080p True Full HD pictures! Android TV gives access to all of your favorite applications. Auto-keystone and 4 corner correction along with digital zoom. Stunning 2.1 speakers, Dual band Wi-Fi and Bluetooth.

### Ultra connected

- Wireless Sound
- NeoPix 520 connection

### Deep silence and punchy sound

- 2.1 Powerful sound system
- Super silent

### Amazing Images

- NeoPix 520 in True Full HD 1080p
- Advanced LED Light Source
- Multiple Picture Correction

### Android TV 11 Experience

- Android TV 11 Experience
- ChromeCast Built-in
- OK Google Ready

# PHILIPS

Home projector  
100" in True FULL HD 1080p Android TV experience, Powerful 2.1 Sound System, Super Silent


# Highlights

## Advanced LED Light Source



The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## Multiple Picture Correction

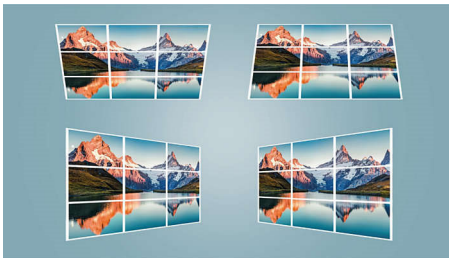

Place the projector wherever you wish! Auto keystone and 4 corner correction help eliminate crooked, distorted images for a perfectly proportioned picture even if the device is not straight in front of the wall. It also gives users an optimal image from virtually any angle and eliminates many of the hassles of an optimal set-up. Big space, small wall? Easy! The digital zoom maximizes the image size even if your projector is far away from a wall.

## NeoPix 520 in True Full HD 108




Watch movies and more in True Full HD 1080p high-definition sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal-clear when displayed.

## 2.1 Powerful sound system



Thanks to its 2.1 audio system (two speakers and a subwoofer), immerse yourself in an exceptional sound sensation. Thanks to its 3.5mm jack output, connect your earphones or even bigger sound with speakers.

## Android TV 11 Experience

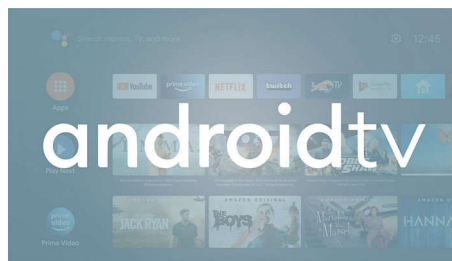

Android TV 11 is integrated to deliver the movie experience you deserve. Enjoy thousands of movies and shows from your favorite apps. Launch the latest episode, pick up where you left

NPX520/INT

off, or switch to a new show. Even find music, games, and videos music, games, and YouTube videos right from your customizable home screen. NeoPix delivers a flawless, industry-leading Android TV experience.

## ChromeCast Built-in



Chromecast built-in is a technology that allows you to stream your favorite entertainment and apps from your phone, tablet, or laptop right to your TV or speakers. Your phone acts as a simple, powerful remote. Just open the mobile apps you already know and love to quickly access your TV shows and playlists. No new log-ins or downloads required. You can use your phone to search, browse, queue and control the projector from anywhere in the home, and keep using it without disrupting what's playing or draining your battery.

## OK Google Ready



Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your projector. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on movie night.

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Brightness: up to 350 lumens\*
- Contrast ratio: 3000:1
- Resolution: 1920 x 1080 pixel
- Throw ratio: 1,43:1
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Integrated media player
- Keystone correction: Digital
- LED lifetime: Up to 30.000h
- Projection image size: up to 100" (255cm)
- Projection distance: 100" @120" distance (306cm)
- Recommended usage: 100" max in dark room

## Connection

- Wi-Fi: Wireless screen mirroring
- Bluetooth: Connect external speaker

- HDMI: x2
- USB: USB 2.0, USB Type-C
- Audio out: 3.5 mm jack
- DC-IN: DC jack

## Sound

- Internal speaker: 2x7 Watts with bass boost
- 2.1
- Surround mode, Equalization

## Dimensions

- Weight: 5.9lbs / 2.7 kg
- unpacked (WxDxH): 274x294x107 mm / 10.79x11.57x4.21 inch

## Power source

- Power consumption: Operation: 100W, Stand by <0.5W
- DC-in: 24V, 4A (AC 100-240V)



Issue date 2023-03-16

Version: 3.3.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Color brightness (color light output) and white brightness (white light output) will vary depending on projector settings. Color light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.