

Philips PowerPro  
Bagless vacuum cleaner

**2000W**

PowerCyclone 5  
HEPA 10 washable filter

**FC8760/61**



## Effortless cleaning, powerful performance

With PowerCyclone technology

The new Philips PowerPro effortlessly cleans your floors thanks to the PowerCyclone 5 technology. The advanced dust container is easy to empty and helps avoiding dust clouds.

### **Easy to clean**

- Advanced dust container design for hygienic emptying
- Washable foam filter for life-long performance

### **Powerful cleaning performance**

- 2000 Watt motor for high performance
- PowerCyclone 5 technology separates dust and air in one go

### **Extra long reach for convenient cleaning**

- More cleaning with less effort

**PHILIPS**

# Highlights

## PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

## 2000 Watt motor



The 2000 Watt motor generates max. 360 Watt suction power for high performance.

## Easy to empty dust container




The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

## Life-long washable foam filter



The foam filter can be easily washed under the tap for life-long performance.

## 10 m action radius

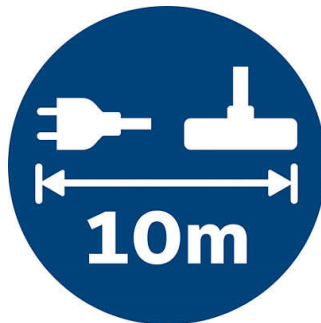

10 m action radius for cleaning with less effort.

# Specifications

## Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 80 dB
- Suction power (max): 360 W
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s

## Design

- Color: Juicy red

## Usability

- Tube coupling: Easy release
- Cord length: 7 m
- Action radius: 10 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

## Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: Wheeled all-purpose nozzle
- Accessory storage: On tubeclip

## Weight and dimensions

- Dimensions of product (LxWxH): 440 x 300 x 290 mm
- Weight of product: 5.5 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Consumer Trade Item

- Height: 31
- Width: 65
- Length: 33
- Net Weight: 7.4
- Gross Weight: 9.2
- GTIN: 08710103585541
- Country of origin: CN
- Harmonized system code: 850819

## Filtration

- Dust capacity: 2 L
- Exhaust filter: EPA 10 filter
- Motor filter: Lifetime washable filter
- HEPA Air Seal



Issue date 2023-03-18

Version: 1.1.2

EAN: 87 10103 58554 1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)