

Philips 3000 Series
Steam iron

1250 W power
40g/min continuous steam
180 g steam boost
Ceramic

DST3031/20



Powerful steam to tackle every crease

Steamboost up to 180g

Our steam iron 3000 series makes ironing easy with the powerful steam boost that tackles tough creases. The ceramic soleplate ensures smooth gliding while the 300ml water tank is large enough to finish smaller ironing loads without a refill.

Fast ironing

- Continuous steam up to 40g/min for consistent performance
- Steam boost up to 180 gram for extra power

Easy ironing

- Iron more in one go with the 300ml water tank
- Automatic shut-off
- Smooth gliding ceramic soleplate
- Our drip stop prevents water dripping on your garment
- Reach difficult places easily with the triple precision tip
- Vertical steaming for hanging fabrics

Long lasting performance

- Built-in calc-clean slider, long-lasting steam performance

PHILIPS

Steam iron
1250 W power 40g/min continuous steam, 180 g steam boost, Ceramic

DST3031/20

Highlights

Steam boost up to 180 gram

The strong steam boost gives you that extra power to penetrate deeper into the fabric and cut through the tough creases easily.

Continuous steam up to 40g/min




Strong and consistent steam output to remove creases faster.

Ceramic soleplate



Our durable ceramic soleplate glides well on any ironable garment. It does not stick to your garment, is scratch resistant and easy to keep clean.

Auto shut-off

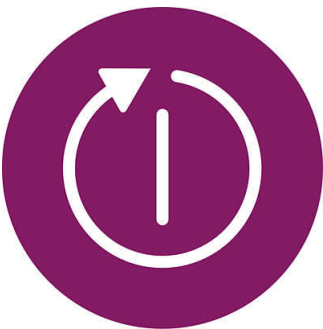

The iron shuts itself off if you leave it standing still. On its heel rest, it will automatically switch

off in 8 minutes. Lying flat, it shuts down after 30 seconds motionless.

Drip stop



Our drip-stop system prevents leakage to avoid stains from water droplets, so you can iron with confidence at any temperature.

Vertical steam



With the vertical steam function you can refresh garments right on the hanger and remove creases from hanging fabrics such as curtains. No ironing board required.

Triple precision tip



The tip is precise in 3 ways: it has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

Steam iron
1250 W power 40g/min continuous steam, 180 g steam boost, Ceramic

DST3031/20

Specifications

Calc management

- Built-in Calc Clean Slider
- Descaling and cleaning

Powerful performance

- Continuous steam: 40 g/min
- Steam boost: Up to 180 gram
- Power: 1250 W
- Ready to use: 35 sec.

Easy to use

- Water tank capacity: 300 ml
- Drip stop
- Tap water suitable
- Power cord length: 1.9 m
- Auto shut off
- Soleplate: Ceramic

- Vertical steam
- Voltage: 220-240 V
- Water spray

Guarantee

- 2 year worldwide guarantee

Green efficiency

- Energy saving mode
- Product packaging: 100% recyclable
- User manual: 100% recycled paper

Size and weight

- Weight of iron: 1.2 kg
- Packaging dimensions (WxHxL): 32x13x16.2 cm
- Product dimensions (WxHxL): 12.1x14.3x29 cm
- Total weight with packaging: 1.5 kg



Issue date 2023-11-10

Version: 4.4.3

UPC: 0 19659 20042 6

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com