




Saeco Minuto Super-automatic espresso machine

- Brews 7 coffee varieties
- Integrated milk jug & frother
- Black
- 5 step adjustable grinder

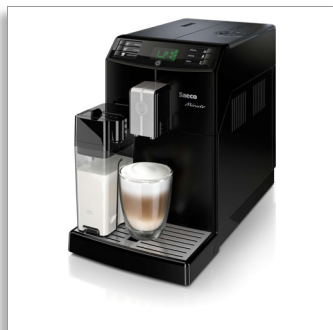

HD8763/18

Always your favorite coffee at just one touch

With the one-click removable brewing group

Only the Saeco Minuto super-automatic espresso machine delivers the real first bean to cup experience with maximum convenience, top-notch performance and large capacities in extra compact dimensions

Authentic Italian coffee perfection

- Coffee without burnt taste thanks to 100% ceramic grinders
- Coffee without waiting thanks to the quick heat boiler

Authentic Italian coffee perfection

- Perfect froth thanks to the dual chamber milk carafe

Ease of cleaning and maintaining

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group

Ease of cleaning and maintaining

- Easy cleaning thanks to dishwasher-safe parts

Set the beverages to suit your taste

- Save your favorite coffee settings
- Avoid heat loss and fit every cup with our adjustable spout
- Play with the coffee's richness with our adjustable grinders

 **Saeco**

Highlights

100% ceramic grinders



This espresso machine is equipped 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean for an impeccable espresso. Ceramic also ensures long-lasting performance and a totally silent operation.

Quick heat boiler



The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Patented dual chamber carafe



Enjoy your milk specialties fully automated with the new patented milk carafe with dual

chamber technology. Simply pour milk into the carafe, plug it into the machine and select your coffee drink. With the dual chamber technology you will always enjoy professional coffee drink with dense, long-lasting milk froth at the ideal temperature from a constant splash-free flow of milk.

Saves your coffee settings



You will always get a perfect cup of espresso brewed just for you, according to your personal preference, thanks to our innovative memo function to adjust the coffee length, strength and temperature. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevents the coffee splashing or cooling down while pouring in your cup. This way your espresso is always served at the right temperature while maintaining a clean machine.

Dishwasher-safe parts



For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter coffee.

Specifications

Features

- Pre-brewing system
- Simultaneous brewing

Technical specifications

- Power: 1850 W
- Voltage: 240 V
- Cord length: 80 cm
- Supported coffee types: Ground coffee, Whole coffee beans
- Frequency: 50 Hz
- Country of origin: Designed in Italy, Made in Europe
- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Design

- Colour: black
- Materials and finishing: ABS plastic

Weight and dimensions

- Product weight: 7.5 kg
- Waste container capacity: 15 servings
- Product dimensions (L x D x H): 215 x 429 x 330 mm
- Coffee bean capacity: 250 g
- Maximum cup height: 152 mm
- Milk carafe capacity: 0,5 L
- Water tank capacity: 1.8 L

Service

- 2-year worldwide guarantee