

Philips AquaAction
Bagless water filtration
vacuum cleaner

2000W

AquaWeb water filtration
HEPA 13 washable filter

FC8950



3x clean with the power of water

Clean floors, clean air, clean hands

The new Philips AquaAction with AquaWeb water filtration technology combines a powerful cleaning performance and efficient anti-allergy system with an easy to clean experience. Let the water do the work, without getting your hands dirty.

Powerful cleaning performance

- 2000 Watt motor for powerful cleaning performance
- Trap dust with AquaWeb water filtration technology

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Fresh and clean air in your home

- Ultra Clean Air HEPA 13 filter with 99.95% filtration
- Effective with/without non-foaming soap or perfume

Keep your hands clean

- Advanced AquaWeb filter design to keep your hands clean
- Bucket handle to keep your hands clean

PHILIPS

Highlights

TriActive nozzle




The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

2000 Watt motor



The 2000 Watt motor generates max. 220 Watt suction power for powerful cleaning performance.

AquaWeb technology

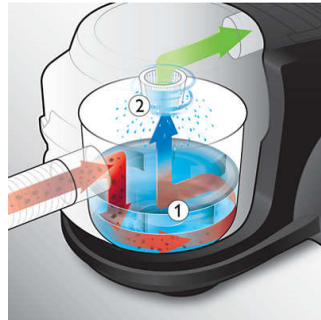

AquaWeb water filtration technology delivers a powerful cleaning performance through two highly efficient steps: 1) The AquaWeb filter has two layers of blades, which create a very dense web of water droplets. When the dirty air passes through this web, the water droplets capture the dust and will not release it again. 2) The active separator effectively separates the clean air and dirty water, ensuring that only clean air will leave the vacuum cleaner.

Bucket handle



The bucket is designed to keep your hands clean, thanks to the external handle. This external handle facilitates both easy carrying and easy pouring, so you can empty the bucket without getting your hands dirty.

Ultra Clean Air HEPA 13 filter




The Ultra Clean Air HEPA 13 filter captures at least 99.95% of all dust, ensuring a clean & allergen-free environment.

Advanced AquaWeb filter design



With its advanced shape, the AquaWeb filter is designed to keep your hands clean. Thanks to the integrated handle, you can easily remove the filter from the bucket, and rinse it under the tap without getting your hands dirty.

Non-foaming soap or perfume

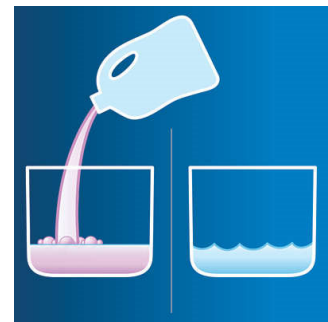

Non foaming soap or perfume can be added to the water to ensure a fresh environment.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle

Design

- Color: Juicy red

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 330 x 290 mm
- Weight of product: 7.5 kg

Performance

- Input power (max): 2000 W
- Input power (IEC): 1700 W
- Noise level (Lc IEC): 87 dB

- Suction power (max): 220 W
- Vacuum (max): 25 kPa
- Airflow (max): 25 l/s

Filtration

- Dust capacity: 5.8 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter

Usability

- Action radius: 11 m
- Tube coupling: Easy release
- Cord length: 8 m
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber
- Park or storage assist: Back



Issue date 2023-12-15

Version: 1.1.2

EAN: 87 10103 66074 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com