

Philips EasyClean
Bagless vacuum cleaner

1800W
HomeCare

FC8716/01



Take the effort out of cleaning

No bag required

The Philips EasyClean bagless vacuum cleaner is designed for those people who want a thorough cleaning result at minimal effort.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy dust disposal

- Dust bucket can easily be removed and emptied

Easily removes dirt and dust

- 1800 Watt motor generating max. 300 Watt suction power


Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

PHILIPS

Highlights

Super Clean Air HEPA 12 filter

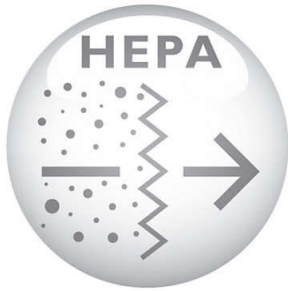

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

1800 Watt motor



Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure a perfect cleaning result.

Easy to empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor and makes it easy to find back accidentally sucked up valuables.

Specifications

Performance

- Input power (IEC): 1600 W
- Input power (max): 1800 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 300 W
- Vacuum (max): 26.5 kPa
- Airflow (max): 34 l/s

Design

- Color: Deep red

Usability

- Cord length: 7 m
- Action radius: 10 m
- Tube coupling: Button
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 6 kg

Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Filter type: Gore-Tex HEPA 10

