



Philips MiniVac
Handheld vacuum cleaner

12V battery

Bagless Cyclonic
5 accessories and storage bag
Home & Car (with car plug)



FC6149/61

Powerful MiniVac for a better cleaning result

Bagless cyclonic airflow and aerodynamic nozzle

Enjoy a better cleaning result with the powerful Philips MiniVac 12 V for your Home & Car. The 2-stage bagless cyclonic airflow guarantees lasting performance, while the aerodynamic nozzle design ensures a superior dust pick-up.

Easy to use

- Looped handle ensure optimum grip
- Charging stand with accessories holder

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration

High power guaranteed

- Powerful 12 V NiMH batteries for long-lasting performance

Superior cleaning results

- Aerodynamic nozzle design for a better dust pick-up

Ideal to clean your car

- Car plug for unlimited runtime
- Wide range of accessories for all purposes
- Storage bag for storage in your car

PHILIPS

Highlights

2-stage bagless cyclonic



The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

Aerodynamic nozzle design



The aerodynamic nozzle design of the Philips MiniVac is created to ensure an optimum dust pick-up of even the most fine dust particles. The ergonomic shape of the nozzle helps you to clean even the most hard-to-reach areas.

Charging stand



You can store the Philips MiniVac on a convenient charging base, mounted on a wall

or placed on a table. This means the Mini Vac, with its powerful rechargeable battery, is always ready when you are.

Clean all areas in your car




The Philips MiniVac Car is ideal to clean your car as it is equipped with a car plug to reach even the most difficult areas of your car without the hassle of charging the MiniVac. Therefore, it is always ready to use!

Comfortable grip



The Philips Mini Vac has a looped handle that ensures optimum grip. You can grab the Mini Vac in any way you like.

Powerful 12 V NiMH batteries

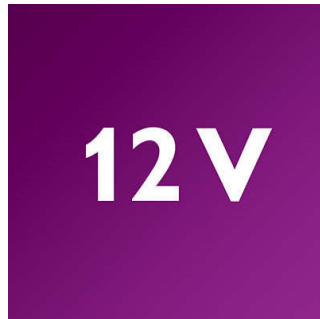

The powerful longer-lasting Nickel-Metalhydride (NiMH) batteries* of the Philips

MiniVac do not cope with memory effect. This effect reduces the capacity of the battery over time, reducing the runtime. This Mini Vac with NiMH batteries ensures longerlasting power versus products with the standard Nickel-Cadmium (NiCd) batteries that do have memory effect.

Wide range of accessories



The Philips MiniVac comes with a wide range of accessories to make the minimum effort when cleaning your home and car. It includes a small and large brush tool, small and large crevice tool and a long hose tube; ideal to clean even the hard-to-reach places. All in all, it is an ideal combination for cleaning your home or car!

Storage bag



The storage bag allows you to keep all the accessories and car plug in one place, to ensure you have all you need to clean your car at any time!

Specifications

Nozzles and accessories

- Other accessories: Charging base

Design

- Design features: Translucent dust chamber
- Color: Deep black with orange accents

Performance

- Battery voltage: 12 V
- Charging time: 16-18 hour(s)
- Runtime: 11 minute(s)
- Vacuum (max): 4.2 kPa

- Input power (max): 120 W
- Suction power (max): 22 W
- Noise level (Lc IEC): 81 dB
- Airflow (max): 840 l/min

Filtration

- Dust capacity: 0.5 L
- Filter system: 2-stage cyclonic action

Usability

- Special features: Charging indication, Soft touch handle



Issue date 2023-07-19

Version: 2.2.1

EAN: 87 10103 59435 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com