

Philips Marathon  
Bagless vacuum cleaner

2000 W

FC9208/01



## Professional cleaning

with high cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category, and it's the quietest bagless available.

### Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

### Traps dust and allergens inside

- EPA 12 filter with 99.5% filtration of dust

### Thorough cleaning results all the time

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power


### Right tool for each type of floor

- Super Parquet nozzle removes 3 x more sticky dirt
- Turbo nozzle removes 25% more hairs and fluff

# PHILIPS

# Highlights

## Powerful and quiet motor

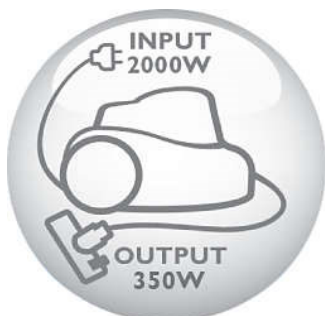

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design also makes it exceptionally quiet.

## Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

## EPA 12 filter



This special outlet filter captures 99.5% of the dust before the air is blown back into your


room, ensuring a clean, dust-free, environment.

## Turbo nozzle



The turbo brush nozzle removes 50% more fluff from carpets than standard nozzles. The rotating brushes also restore the pile during every cleaning job, keeping carpets and rugs in optimum condition.

## Super Parquet nozzle

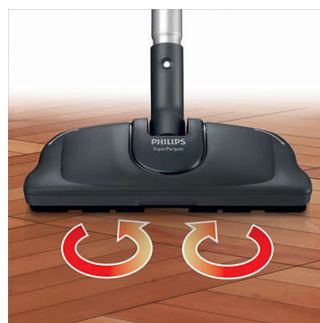

The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the

vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.



# Specifications

## Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

## Design

- Colour: Black

## Usability

- Tube coupling: Button
- Action radius: 12 m
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube

- Power control: Electronic on appliance
- Wheel type: Rubber

## Nozzles and accessories

- Accessories included: Brush, Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Parquet nozzle, Turbo brush

## Weight and dimensions

- Weight of product: 7.2 kg

## Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)