

Philips Marathon
Bagless vacuum cleaner

2000W

FC9226/01



Performs stronger for longer

Self-cleaning filter, no bag required

Marathon offers you very high cleaning performance thanks to its automatic filter cleaning system.

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Traps dust and allergens inside

- Ultra Clean Air HEPA 13 filter, 99.95% filtration

Right tool for each type of floor

- Super Parquet nozzle removes 3 x more sticky dirt
- Turbo Brush nozzle removes 25% more hairs and dust

Optimal cleaning power every time

- AutoClean filter optimizes suction power


Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

PHILIPS


Highlights

AutoClean filter

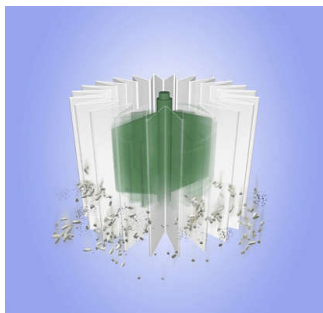

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2000 Watt motor

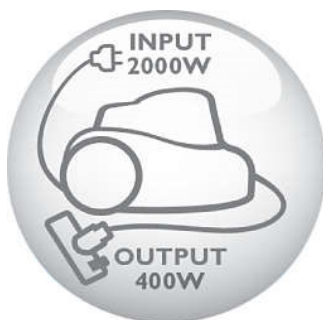

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

Ultra Clean Air HEPA 13, 99.95% filtration



Ultra Clean Air HEPA 13 filter, 99.95% filtration

Super Parquet nozzle




The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

TriActive nozzle

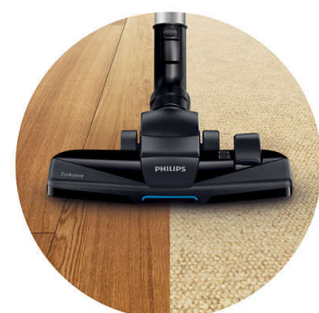

The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s

Design

- Color: Emperor red

Usability

- Action radius: 12 m
- Tube coupling: Button
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube

- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Additional nozzle: Super Parquet nozzle, Turbo brush
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com