



Philips DailyDuo  
Stick vacuum cleaner

Cordless 2in1: stick&handheld

Bagless Cyclonic  
16.8V battery  
2-stage HEPA filtration

FC6161/63

## Great performance for your daily cleaning

### Cordless 2-in-1 with long lasting suction power

Enjoy a clean feeling every day with Philips DailyDuo. This powerful 2-in-1 stick vacuum cleaner is cordless and helps you to clean both floors and furniture, with high suction power guaranteed. Always around for your quick daily cleaning!

#### **Optimal filtration**

- 2-stage bagless cyclonic airflow for optimal filtration
- Cyclonic HEPA filter system for longer-lasting filtration

#### **Instant parking anywhere**

- Self-standing position for instant parking anywhere

#### **Freedom to clean everywhere**

- Cordless operation for freedom to clean everywhere

#### **Multifunctional 2-in-1**

- 2-in-1 functionality for cleaning both floors and furniture
- AutoOff charging system guarantees efficient use of energy
- QuickDraw release system for easy removal of handheld

#### **Superior cleaning performance**

- Powerful 16.8V batteries ensuring high suction power

# PHILIPS

# Highlights

## Powerful 16.8V batteries




The DailyDuo has 16.8 V powerful batteries that ensures high suction power during the entire runtime. Combine with the high speed rotation of the PowerBrush, DailyDuo helps you to achieve a thorough clean with no effort.

## Cyclonic HEPA filter system



The pleated HEPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

## AutoOff charging system

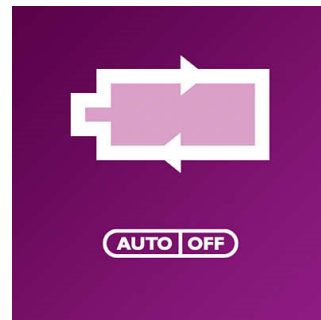

The AutoOff charging system automatically shuts off when the batteries are fully charged, and therefore saves energy that other systems waste.

## 2-stage bagless cyclonic



The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

## 2-in-1 functionality



The 2-in-1 functionality gives you both a stick and a handheld vacuum cleaner in one, to easily clean both floor and furniture.

## Self-standing parking position




The stick has a convenient parking position to stay upright, both with and without the handheld. Therefore, you can instantly park the stick anywhere you want, also while you are cleaning.

## QuickDraw release system



With the QuickDraw release system you can easily remove the handheld from the stick with only one hand, so you can quickly switch between using the stick and the handheld.

## Cordless operation

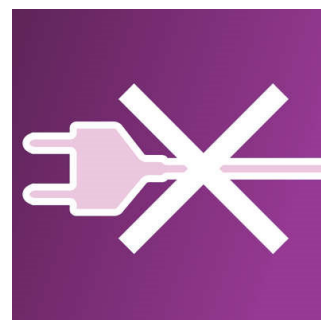

The rechargeable batteries for cordless operation give you freedom to clean everywhere.

# Specifications

## Weight and dimensions

- Dimensions of packaging (LxWxH): 225 x 235 x 625 mm
- Appliances per A-box: 2
- Weight of product: 3.2 kg
- Dimensions of A-box (LxWxH): 465 x 245 x 640 mm

## Performance

- Battery type: NiMH
- Battery voltage: 16.8 V
- Charging time: 7 hour(s)
- Vacuum (max): 4 kPa
- Runtime: 20 minute(s)
- Input power (max): 100 W
- Suction power (max): 17 W

- Noise level (Lc IEC): <84 dB
- Airflow (max): 850 l/min

## Design

- Color: Velvet violet
- Design features: Translucent dust chamber

## Nozzles and accessories

- Other accessories: Charging base
- Accessories included: Brush, Crevice tool
- Accessory storage: In charging base

## Filtration

- Dust capacity: 0.5 L
- Filter system: Cyclonic HEPA filter system



Issue date 2023-04-14

Version: 1.1.1

EAN: 87 10103 59543 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)