

Philips PowerPro Active  
Bagless vacuum cleaner

**2000 W**  
EPA 10 filter  
1.7 L

**FC8670/61**



## High suction power with PowerCyclone 4

### Quick and easy emptying

The new Philips PowerPro Active bagless vacuum cleaner delivers high cleaning performance, thanks to PowerCyclone technology and Multi Clean nozzle, engineered to maximize dust pick-up. The dust container is easy to empty, with no dust cloud

#### Remarkable cleaning results

- PowerCyclone 4 technology separates dust and air in one go
- 2000 W motor for strong suction power
- New Multi Clean nozzle for thorough cleaning on all floors

#### Clean air filter system

- EPA10 filter system with AirSeal for healthy air

#### Effortless cleaning

- Reach all corners thanks to the extra long ergonomic grip
- Soft brush integrated into handle, always ready to use
- Variable power setting

#### Effortless cleaning

- ActiveLock couplings to easily adjust to each cleaning task

# PHILIPS

# Highlights

## 2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

## PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## Multi Clean nozzle



The new Multi Clean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed to seal closely to the floor to ensure a good pick-up of even the fine dust.

## Soft brush at your fingertips




A dusting brush attachment is built right into the handle so it's always ready to use for furniture, flat surfaces and upholstery.

## ActiveLock couplings




The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

## Extra long ergonomic grip

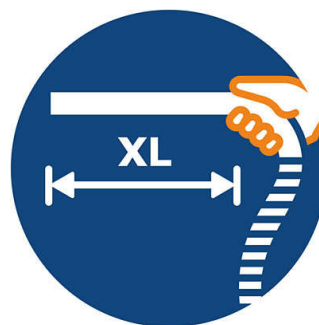

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## Power control

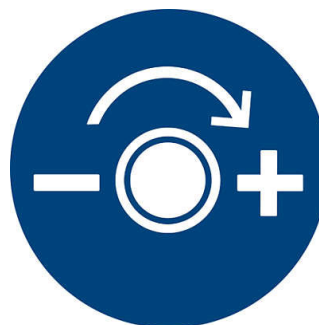

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

## EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

# Specifications

## Performance

- Input power (IEC): 1800 W
- Airflow (max): 37 l/s
- Sound power level: 80 dB
- Vacuum (max): 33 kPa
- Input power (max): 2000 W
- Suction power (max): 370 W

## Design

- Color: Ink Black

## Usability

- Action radius: 9 m
- Tube coupling: ActiveLock
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

## Nozzles and accessories

- Standard nozzle: Multi-purpose nozzle
- Accessories included: Crevice tool, Integrated brush
- Accessory storage: On tubeclip

## Weight and dimensions

- Dimensions of product (LxWxH): 473 x 304 x 301 mm
- Weight of product: 6 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Filtration

- Dust capacity: 1.7 L
- Exhaust filter: Microfilter
- Motor filter: EPA 10 washable filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)