

Philips  
Bagless vacuum cleaner

**1400 W**  
PowerCyclone 3  
3 accessories

**FC8087/01**



## Small on the outside, powerful on the inside

### Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

#### **Compact design**

- Small sized appliance for compact storage

#### **Compact design**

- Light weight and compact, giving you the freedom to move

#### **Easy to clean**

- Advanced dust container design for hygienic emptying
- Easy to clean washable filter

#### **Easy to clean**

- Extra handle for easy carrying with cord winder function

#### **Extra reach for perfect cleaning results**

- Crevice tool help you to clean your furniture.

# PHILIPS

# Highlights

## PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

## Crevice tool


Crevice tool help you to clean your furniture.

## Easy to clean filter



Washable foam filter for life-long performance.

## Extra long ergonomic grip

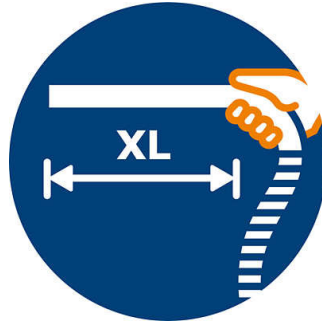

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## 1400 W motor



This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.


## Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust

cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

## Light weight and compact

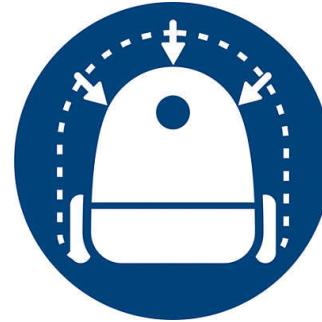

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

## Small sized appliance

Small sized appliance for compact storage.

## Extra handle for easy carrying



Extra handle for easy carrying with cord winder function.

# Specifications

## Performance

- Input power (IEC): 1200 W
- Input power (max): 1400 W
- Suction power (max): 200 W

## Design

- Color: Deep black

## Usability

- Action radius: 7 m
- Tube coupling: Conical
- Carrying handle: Top and front
- Cord length: 4.5 m
- Tube type: Plastic 2-P tube
- Wheel type: Plastic

## Nozzles and accessories

- Accessories included: Crevice tool, Long bend tool
- Standard nozzle: Hard and Soft Floor Nozzle

## Weight and dimensions

- Weight of product: 3.1 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Filtration

- Dust capacity: 1.1 L
- Exhaust filter: Foam filter
- Motor filter: Microfilter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)