



Philips EasySpeed
Vacuum cleaner with bag

1600W
3 accessories



FC5128/61

Tough on dust, Easy on you

Compact and Powerful

The new Philips EasySpeed vacuum cleaner will make cleaning easier for you. Easy to to carry, maneuver, store and powerful. You can enjoy better cleaning results in an easy way.

Compact design

- Small sized appliance for compact storage

Compact design

- Light weight and compact, giving you the freedom to move
- Soft rubber wheels to protect your floors

Extra reach for perfect cleaning results

- Small nozzle and 2-in-1 tool for cleaning furniture
- DiamondFlex Nozzle

Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip


Powerful cleaning performance

- Hard and soft floor nozzle for thorough cleaning
- 1600 Watt motor for high performance

PHILIPS

Highlights

Hard and soft floor nozzle

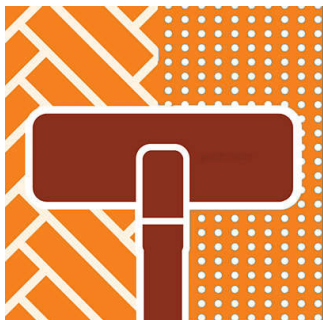

Great performance no matter the type of floor. You can easily adjust the nozzle with the foot pedal, using the protective brushes on your hard floor and the smooth soleplate for cleaning your carpet. No matter the type of surface you will always benefit from thorough and gentle cleaning.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

DiamondFlex Nozzle



A nozzle rotates 180° for easy reach in corners and around objects.

Re-usable dust bag




The dust bag is washable and re-usable, so you don't have to worry about buying replacements.

Light weight and compact




You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Small in size

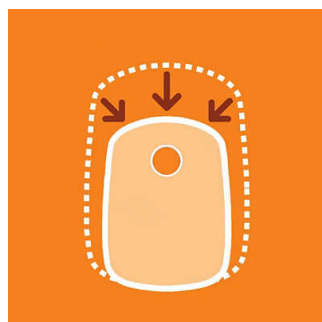

Thanks to its small size the appliance can easily be stored, saving valuable space.

Small nozzle and 2-in-1 tool

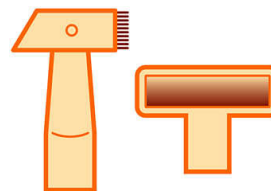

The small nozzle and the 2-in-1 cleaning tool - which consists of a brush and a crevice tool in one - help you to clean your furniture and delicate surfaces.

Soft rubber wheels



The vacuum cleaner moves smoothly over hard floors without leaving any marks thanks to the soft rubber wheels. To make sure your floors are well protected.

1600 Watt motor



1600 Watt motor for high performance

Specifications

Nozzles and accessories

- Accessories included: 2-in-1 brush/crevice tool, DiamondFlex Nozzle
- Standard nozzle: Hard and Soft Floor Nozzle
- Accessory storage: On tubeclip
- Additional nozzle: Hard floor nozzle

Design

- Color: Citrus orange

Weight and dimensions

- Weight of product: 5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Input power (IEC): 1400 W
- Input power (max): 1600 W

Filtration

- Dust capacity: 1.4 L
- Exhaust filter: Microfilter
- Motor filter: Washable filter

Usability

- Tube coupling: Conical
- Action radius: 8 m
- Cord length: 5 m
- Carrying handle: Top and front
- Tube type: Plastic 2-P tube
- Wheel type: Rubber



Issue date 2023-08-21

Version: 1.1.1

EAN: 87 10103 65688 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com