

Philips Marathon  
Bagless vacuum cleaner

**2000 W**  
350-W suction power  
HEPA 12 filter

**FC9200/01**



## Professional cleaning

with high cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon vacuum cleaner delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power, and it's the quietest bagless available.

### **Highly efficient anti-allergy system**

- EPA AirSeal plus EPA 12 filter

### **Easy cleaning, even around furniture**

- TriActive nozzle with unique 3-in-1 action

### **Extra long reach for convenience**

- More cleaning with less effort

### **Traps dust and allergens inside**

- EPA 12 filter with 99.5% filtration of dust


### **Thorough cleaning results all the time**

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power

# PHILIPS


# Highlights

## Powerful and quiet motor

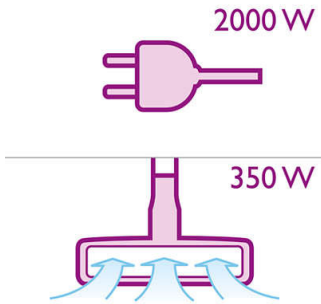

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design also makes it exceptionally quiet.

## Lasting suction power

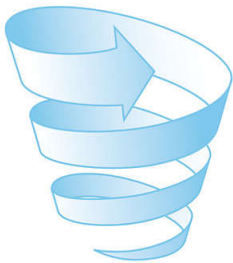


Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

## EPA 12 filter



This special outlet filter captures 99.5% of the dust before the air is blown back into your room, ensuring a clean, dust-free, environment.

## 10-m action radius

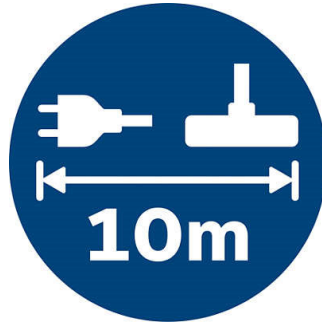

10 m action radius for cleaning with less effort.

## EPA AirSeal, EPA 12 filter



This vacuum cleaner has been designed in such a way that all the air taken in is passed through the EPA 12 filter (99.5% filtration) before it is exhausted. No escape is possible.

## Manual filter cleaning

Cleaning the filter manually

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

## Design

- Colour: Black

## Usability

- Tube coupling: Button
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

## Nozzles and accessories

- Accessories included: Brush, Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip

## Weight and dimensions

- Weight of product: 7.2 kg

## Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)