

Philips EasySpeed
Bagless vacuum cleaner

1400W

PowerCyclone 5
2 accessories

FC5226



Tough on dust, Easy on you

Compact and Powerful

The new Philips EasySpeed vacuum cleaner will make cleaning easier for you. Easy to carry, maneuver, store and powerful. Easy to empty dust container helps avoiding dust clouds. You can enjoy better cleaning results in an easy way

Easy to clean

- Advanced dust container design for hygienic emptying
- Easy to clean washable filter
- Extra handle for easy carrying

Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.

Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip

Powerful cleaning performance

- 1400 Watt motor for high performance

Powerful cleaning performance

- PowerCyclone 5 technology separates dust and air in one go

PHILIPS

Highlights

1400 Watt Motor



1400 Watt motor for high performance

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther


reach, so you can easily clean hard to reach places.

Crevice tool



Crevice tool help you to clean your furniture.

Easy to clean filter

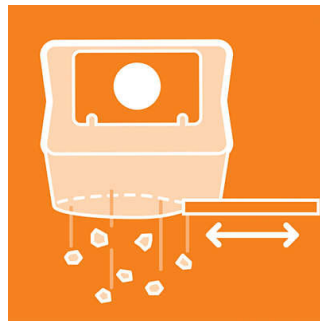

Washable foam filter for life-long performance.

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Light weight and compact




You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Easy Carrying



Extra handle for easy carrying.

Small in size

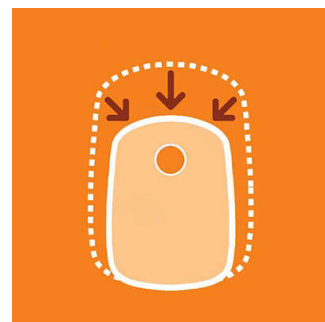

Thanks to its small size the appliance can easily be stored, saving valuable space.

Specifications

Performance

- Input power (IEC): 1400 W
- Suction power (max): 300 W

Design

- Color: Ferrero Red

Usability

- Action radius: 8 m
- Tube coupling: Conical
- Cord length: 5 m
- Carrying handle: Top and front
- Tube type: Plastic 2-P tube
- Wheel type: Plastic

Nozzles and accessories

- Standard nozzle: Hard and Soft Floor Nozzle
- Accessories included: Crevice tool
- Accessory storage: On tubeclip

Weight and dimensions

- Weight of product: 5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 0.5 L
- Exhaust filter: Microfilter
- Motor filter: Washable filter



Issue date 2023-04-14

Version: 1.1.1

EAN: 87 10103 65172 7

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com