

PHILIPS

20 inch double row
LED lightbar

Ultinon Drive 5003L

Road-legal ECE R149-45

3600 lm, 436m beam length

All-terrain, all-weather fit

LUMUD5003LX1

 Product Picture

Powerful brightness for a safer drive

Bright, durable gear for overland journeys

Projecting light for 436 meters, the Ultinon Drive 5003L LED lightbar is road-legal, rated ECE-R149-45. It ensures safety through brightness, is built to last, corrosion-free, and resistant to water and shocks.

Greater safety with powerful brightness

- Bright, long beam for superior visibility

Durable equipment for challenging conditions


- Sturdy one-piece body for tough environments
- IP69K waterproof to master the elements
- Corrosion-free, stainless-steel mounting brackets

Road-legal auxiliary lights

- Powerful road-legal LED lightbars

Highlights

Full visibility for 436 meters

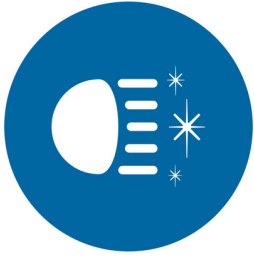

The Philips Ultinon Drive 5003L provides an outstanding beam that illuminates the road ahead for 436 meters.* With 3600 lumen (effective) coming from its cumulated, powerful 200W LEDs and ECE-R149-45, it provides ample visibility for faster reactions. A combined spot and flood light, it shines both far and wide, helping you see roadside hazards too. The lamps' highly homogenous beam and cool light color of 6500 Kelvin keep you focused without straining your eyes.

Sturdy one-piece body



The Philips Ultinon Drive 5000L series is built in a single piece to withstand the toughest conditions. This allows for excellent heat management and consistently high light output throughout your journey. Rated IK07, it is shock-resistant to ensure faultless performance on and off the road. Its unbreakable polycarbonate lens can take any hit without damage or scratches and the convenient DT connector guarantees a perfect connection.

Waterproof for durable light



With its ingenious screwless design, the Ultinon Drive 5000L series can withstand the wettest conditions. IP68 and IP69K certification means it will perform, wherever your road leads and whatever the weather. And it will be more than a match for any power washer you use to clean your car afterwards.

Corrosion-free brackets

The mounting brackets are made of stainless steel, which is corrosion-free. They can withstand snow, ice and even salt. Built from durable, high-quality materials, your auxiliary lights will provide years of reliable service.

Road-legal lights



The Philips Ultinon Drive 5000L series meets ECE-R149 standards and is road-legal. For added safety, Philips LED lightbars are tested to EMC R10 specification to ensure they will function smoothly with your vehicle's electrical systems.

Specifications

Electrical characteristics

Voltage: 9-30 Volt DC

Product description

Impact protection rating (IK): IK07

Ingress protection rating (IP): IP68 & IP69K
ECE R10

ECE R149

ECE reference number: 45

Material: Aluminum die-cast

Technology: LED

Number of LEDs: 40x 5W

Operating temperature: -40° C to 80° C

Heat sink: 13-piece 1.5mm

Installation angle: 360°

Scratch resistant lens

Break resistance

Corrosion-free brackets: Yes, included

One-piece body design

Offroad boost: No

Plug type: Connector with 0.5m cable

Range: Ultinon Drive 5000

Width: 20 inch

Light characteristics

Color temperature: 6500 K K

Beam length 3 lux-m: 252

Beam length 1 lux-m: 436

Beam width 3 lux-m: 64

Beam width 1 lux-m: 90

Effective lumen output: 3600

Raw lumen output: 19040

Packed product information

Dimensions-L(mm): 593

Dimensions-W(mm): 49.3

Dimensions-H(mm): 84.2

Box dimensions-L(mm): 610

Box dimensions-W(mm): 90

Box dimensions-H(mm): 105

Net weight product-g: 1620

Gross weight box-g: 1637

MOQ (for professionals): 4

Ordering information

Order entry: UD5003LX1

GOC: 01488794

Packaging Data

EAN1: 8719018014887

EAN3: 8719018014894

